

[Manuals.plus](#) /

› [AngFan](#) /

› AngFan Professional Hair Clippers and Trimmer Set (Model: AngFan 712--512SET) - User Manual

AngFan AngFan 712--512SET

AngFan Professional Hair Clippers and Trimmer Set User Manual

Model: AngFan 712--512SET

INTRODUCTION

Thank you for choosing the AngFan Professional Hair Clippers and Trimmer Set. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new grooming tools. Designed for both professional barbers and home users, this set combines high performance with cordless convenience for precise and effortless grooming.



Image 1: The AngFan Professional Hair Clippers and Trimmer Set, showcasing both the main clipper and the detail trimmer along with various accessories.

PACKAGE CONTENTS

Your AngFan Professional Hair Clippers and Trimmer Set includes the following items:

- 1x Professional Hair Clipper (Main Unit)
- 1x Professional Hair Trimmer (Detail Unit)
- 1x Charging Base
- 1x USB Charging Cable
- 8x Color-Coded Clipper Guards (1.5mm, 3mm, 4.5mm, 6mm, 10mm, 13mm, 16mm, 19mm)
- 3x Ultra-Precise Trimmer Guides (0.5mm, 1mm, 1.5mm)
- 1x Barber Comb
- 1x Cleaning Brush

- 1x Blade Oil Bottle
- 1x User Manual

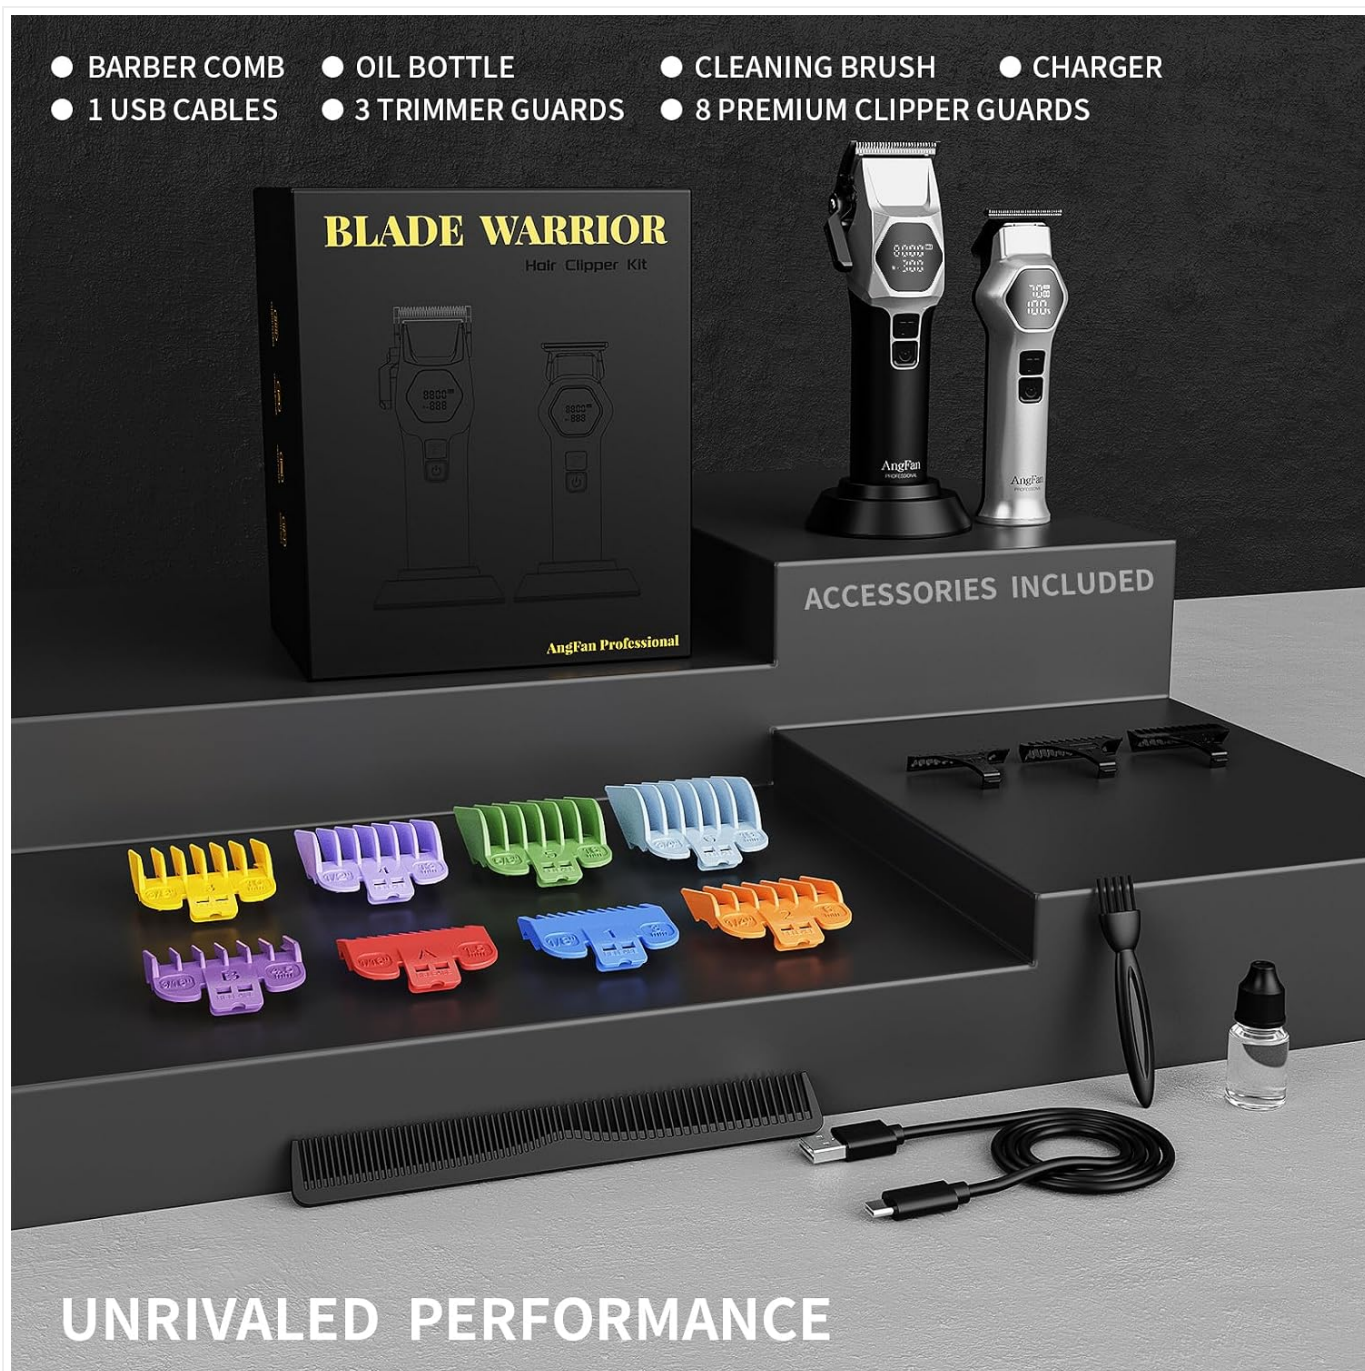


Image 2: All included accessories for the AngFan Professional Hair Clippers and Trimmer Set, neatly arranged with the main clipper and trimmer.

Your browser does not support the video tag.

Video 1: An overview of the AngFan Professional Hair Clippers for Men, showcasing the unboxing and included components.

PRODUCT FEATURES

- **Professional-Grade Cordless Freedom:** Equipped with a 5-speed brushless motor (6000-8000 RPM) and 440C stainless steel blades with Black Oxide Coating.
- **Enhanced Blade Performance:** Blades reduce friction by 60% and triple lifespan, engineered for durability and precision.
- **Surgical Precision:** HRC68 hardness blades with anti-corrosion coating for effortless professional haircuts.

- **Extended Battery Life:** Clipper battery (2800mAh) provides 5 hours runtime; Trimmer battery (2200mAh) provides 5 hours runtime.
- **Rapid Charging:** Both units fully charge in approximately 3 hours.
- **Smart Charging Ecosystem:** Includes a dedicated charging base and dual LED indicators for real-time battery levels.
- **Versatile Use:** Suitable for professional barbers and home users, with an 8000 RPM turbo mode for thick hair and safety-rounded blades for children.



Image 3: Close-up view of the clipper's internal brushless motor, highlighting its 8000 RPM high performance, low vibration, and no pulling hair features.



Image 4: Detailed view of the 440C stainless steel blades with Black Oxide Coating, emphasizing wear resistance, long-lasting sharpness, corrosion resistance, and HRC 68 hardness.

LOW NOISE DESIGN

Experience a smooth and efficient haircutting experience with noise levels below 60dB



Image 5: Illustration of the low noise design, showing the AngFan clippers operating at 55dB, significantly quieter than a hairdryer or conversation.

SAFETY INFORMATION

- Avoid using near eyes.
- Do not ingest or inhale small parts.
- Clean and oil blades before each use.
- Use under adult supervision for children.
- Keep out of reach of children.
- Do not immerse the device in water.

SETUP

1. Initial Charging

Before first use, fully charge both the main clipper and the detail trimmer. Connect the USB charging cable to the charging base and plug it into a suitable power source. Place the clipper or trimmer onto the charging base. The LED indicator will display the charging status and battery level. A full charge takes approximately 3 hours.



Image 6: The AngFan Hair Clipper and Trimmer on their respective charging bases, illustrating the 5-hour running time and battery capacity.

2. Attaching Guards

Select the desired color-coded guard for your preferred cutting length. Align the guard with the clipper or trimmer blade and push firmly until it clicks into place. Ensure the guard is securely attached before operating the device.

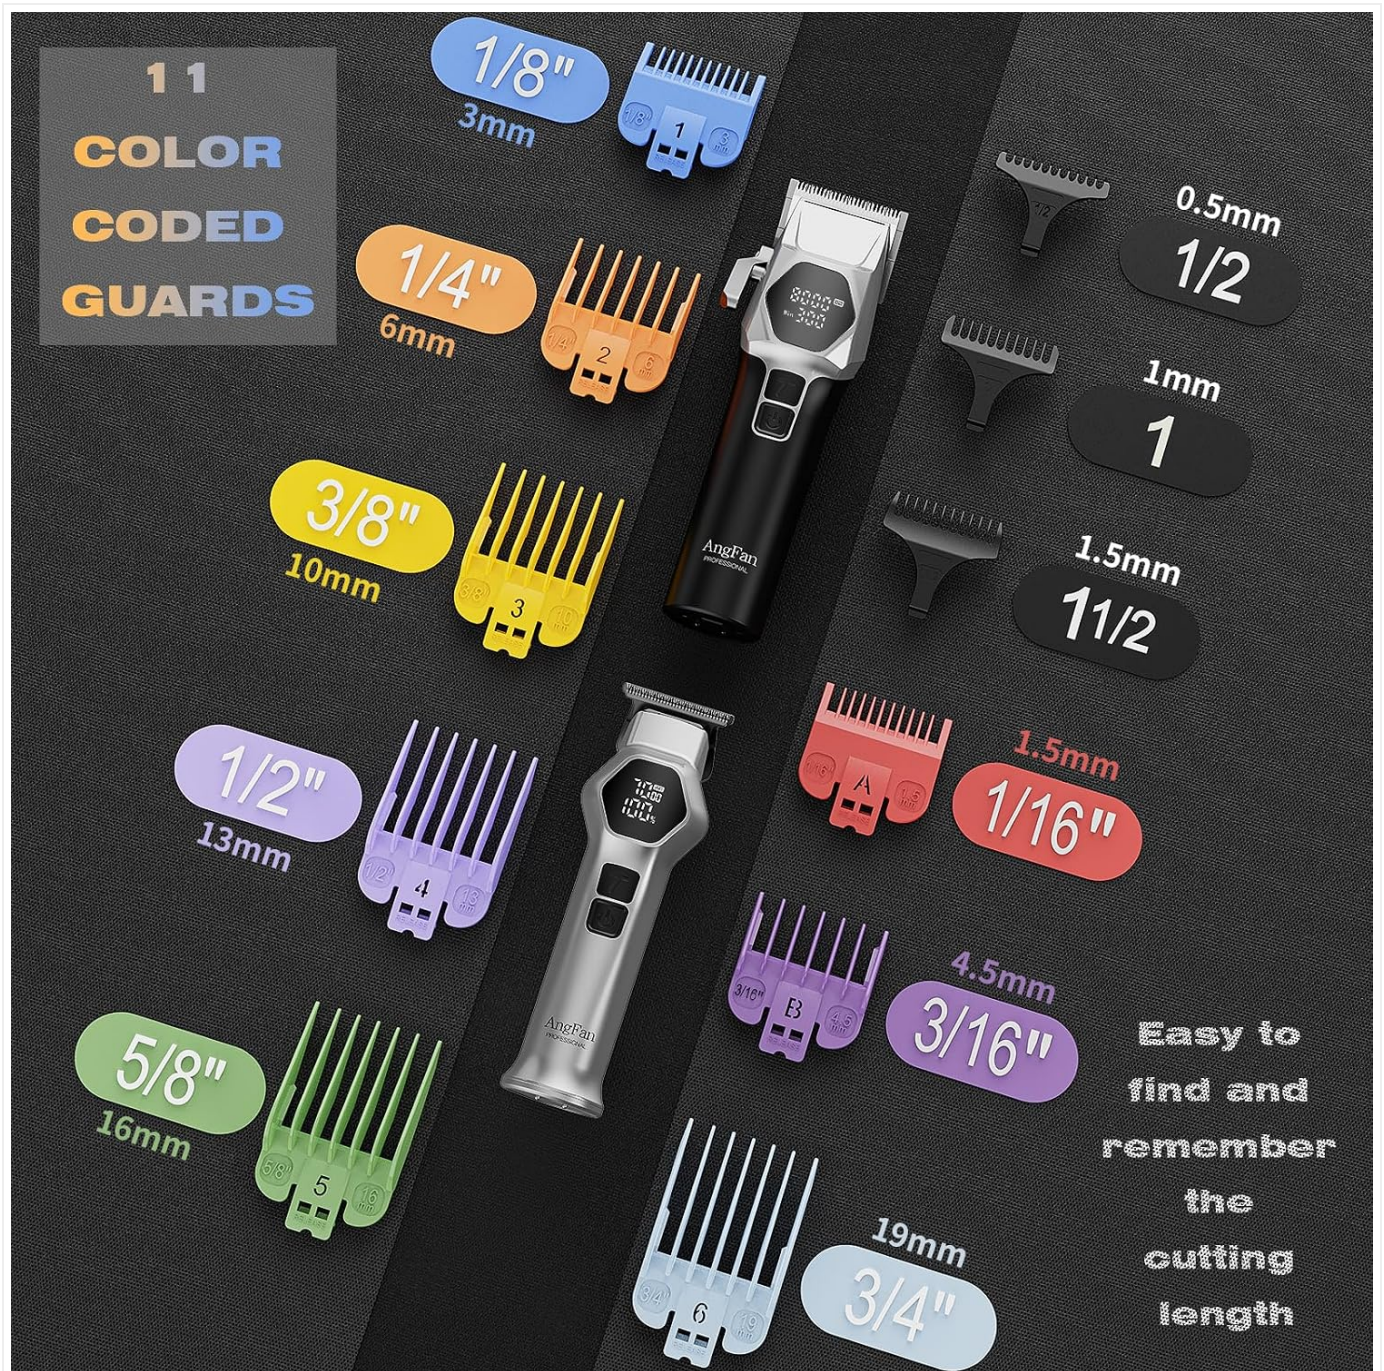


Image 7: A display of the 11 color-coded guards and 3 trimmer guides, ranging from 0.5mm to 19mm, for easy length selection.

OPERATING INSTRUCTIONS

1. Powering On/Off

Press the power button located on the front of the clipper/trimmer to turn the device on or off. The digital display will illuminate upon activation.

2. Adjusting Speed (RPM)

The main clipper features a 5-speed brushless motor. Use the 'T' button (Turbo/Speed Adjustment) to cycle through the different RPM settings (6000-8000 RPM) to match your hair type and cutting needs. The current RPM will be shown on the digital display.

3. Adjusting Cutting Length (Main Clipper)

The main clipper has an adjustable taper lever on the side. Move the lever up or down to fine-tune the cutting length

without changing guards, allowing for seamless blending and fading.



Image 8: Close-up of the AngFan Hair Clipper's digital display, showing the cutting length setting, length adjustment lever, rotating-speed display, battery life/minute indicator, and rotating-speed switching buttons.

Your browser does not support the video tag.

Video 2: A demonstration of the AngFan Professional Hair Clippers for Men, highlighting its features and use in a haircutting scenario.

MAINTENANCE

1. Cleaning the Blades

After each use, turn off the clipper/trimmer and remove the guard. Use the provided cleaning brush to remove any loose hairs from the blades and the device body. For a more thorough cleaning, the blades can be carefully detached (refer to the detailed instructions in the included user manual for blade removal and reattachment).

2. Oiling the Blades

Regular oiling ensures optimal performance and extends blade life. Apply 1-2 drops of the provided blade oil across the top of the blades while the device is running (without a guard). Allow it to run for a few seconds to distribute the oil, then turn it off and wipe off any excess oil with a clean cloth.

3. Storage

Store the clippers and trimmers in a dry, cool place, preferably in their original packaging or on the charging base, away from direct sunlight and moisture.

TROUBLESHOOTING

- **Device not turning on:** Ensure the device is fully charged. Check the charging cable and power source connection.
- **Reduced cutting performance:** Clean the blades thoroughly to remove any hair buildup. Apply blade oil as per maintenance instructions. Ensure the correct guard is securely attached.
- **Unusual noise or vibration:** Turn off the device immediately. Check for any foreign objects lodged in the blades. If the issue persists, contact customer support.

SPECIFICATIONS

- **Model Name:** AngFan 712--512SET
- **Motor:** 5-speed Brushless Motor (6000-8000 RPM)
- **Blades:** 440C Stainless Steel with Black Oxide Coating (HRC68 hardness, anti-corrosion)
- **Clipper Battery:** 2800mAh (5 hours runtime)
- **Trimmer Battery:** 2200mAh (5 hours runtime)
- **Charging Time:** 3 Hours
- **Charging Type:** USB-C (via charging base or direct connection)
- **Display:** Dual LED indicators for battery level and RPM
- **Package Dimensions:** 8.74 x 5.94 x 3.23 inches
- **Item Weight:** 1.96 Pounds

WARRANTY AND SUPPORT

Every AngFan Hair Clippers and Trimmers Set includes a **1-year warranty**. This warranty covers manufacturing defects and ensures your investment is protected. For any product inquiries, technical support, or warranty claims, please refer to the contact information provided in the included user manual or visit the official AngFan website.

Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. (Note: This disclaimer seems misplaced for a hair clipper manual, but it was present in the original product data.)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question