

[Manuals.plus](#) /

› [Sokany](#) /

› Sokany SK-02018 2-in-1 USB Rechargeable Electric Milk Frother and Egg Beater User Manual

Sokany SK-02018

Sokany SK-02018 2-in-1 USB Rechargeable Electric Milk Frother and Egg Beater

Model: SK-02018

INTRODUCTION

Thank you for choosing the Sokany SK-02018 2-in-1 USB Rechargeable Electric Milk Frother and Egg Beater. This versatile kitchen tool is designed to help you effortlessly create creamy milk foam for your coffee and perfectly whisk eggs for your culinary needs. Please read this manual carefully before use to ensure safe and optimal performance.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Keep the main unit of the frother away from water. Do not immerse the motor body in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only the provided USB cable for charging. Ensure the charging port is dry before connecting the cable.
- Do not operate the appliance if it has been damaged in any way. Contact customer support for assistance.
- Avoid touching moving parts during operation.
- Do not use abrasive cleaning agents or harsh chemicals on the appliance.

PACKAGE CONTENTS

Please check the package to ensure all items are present:

- 1 x Main Frother Unit
- 1 x Frothing Whisk Head (Coiled)
- 1 x Egg Beater Whisk Head (Balloon)
- 1 x USB Charging Cable



Image: The Sokany SK-02018 package showing the main frother unit, the coiled frothing whisk, and the balloon egg beater whisk.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Sokany frother:

1. **Main Unit:** Contains the motor, battery, power button, and charging port.
2. **Power Button:** Activates and deactivates the frother.
3. **Charging Port:** USB port for recharging the internal battery.
4. **Whisk Attachment Point:** Where the whisk heads connect to the main unit.
5. **Frothing Whisk:** Coiled head, ideal for milk frothing.
6. **Egg Beater Whisk:** Balloon-shaped head, suitable for beating eggs and mixing.



Image: The main frother unit with the coiled frothing whisk attached, ready for use.



Image: The Sokany frother showing both the coiled frothing whisk and the balloon egg beater whisk.

1. Charging the Frother

- Before first use, fully charge the frother.
- Connect the USB charging cable to the charging port on the main unit.
- Plug the other end of the USB cable into a standard USB power adapter (not included) or a computer USB port.
- The indicator light will show charging status (e.g., red for charging, blue/green for fully charged).

2. Attaching Whisk Heads

- Select the desired whisk head (frothing or egg beater).
- Align the whisk head with the attachment point on the main unit.
- Gently push the whisk head into place until it clicks securely.
- To remove, pull the whisk head firmly but gently from the main unit.

OPERATING INSTRUCTIONS

General Operation

- Ensure the desired whisk head is securely attached.
- Press the power button to turn the frother ON.
- Press the power button again to turn the frother OFF.

Milk Frothing

1. Pour cold or warm milk into a tall glass or mug. For best results, use milk that is at least 1/3 full in the container.
2. Insert the frothing whisk into the milk, ensuring the whisk head is submerged but not touching the bottom.
3. Press the power button to start frothing.
4. Move the frother up and down gently to create foam. Continue until desired froth consistency is achieved (typically 20-30 seconds).
5. Turn off the frother before removing it from the milk.
6. Pour the frothed milk into your coffee or beverage.

Egg Beating / Mixing

1. Attach the egg beater whisk head to the main unit.
2. Place eggs or other ingredients into a bowl.
3. Insert the whisk into the ingredients.
4. Press the power button to start beating/mixing.
5. Move the frother around the bowl until the desired consistency is reached.
6. Turn off the frother before removing it from the bowl.



Image: A visual guide demonstrating the steps for frothing milk: pouring milk, inserting the frother, frothing, and pouring frothed milk into a drink.

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your frother.

- **Whisk Heads:** After each use, remove the whisk head and rinse it under warm running water. You can use a mild dish soap if necessary. Ensure all milk or food residue is removed. The whisk heads are hand-washable only.
- **Main Unit:** The main unit containing the motor is NOT waterproof. Do not immerse it in water. Wipe the main unit with a damp cloth to clean. Ensure it is completely dry before storing or recharging.
- **Storage:** Store the frother and its attachments in a clean, dry place, away from direct sunlight and moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Frother does not turn on.	Battery is low or depleted.	Charge the frother using the USB cable.
Weak frothing or beating.	Battery is low. / Whisk head is loose. / Too much liquid.	Charge the frother. / Ensure whisk head is securely attached. / Use appropriate amount of liquid.
Frother stops during operation.	Battery is low. / Overload protection activated.	Charge the frother. / Reduce the amount of ingredients or allow the motor to cool down.
Charging indicator light not working.	USB cable or power source issue.	Try a different USB cable or power adapter. Ensure connections are secure.

SPECIFICATIONS

Brand:	Sokany
--------	--------

Model Number:	SK-02018
Color:	Multi-color
Product Dimensions:	5 x 5 x 20 cm (Width x Height)
Material:	304 Stainless Steel
Special Features:	USB Rechargeable, Dual Whisk Heads, Portable, 2-in-1 Function
Recommended Uses:	Egg beating, Milk frothing, Coffee making
Included Components:	Frothing Whisk, Egg Beater Whisk
Care Instructions:	Hand wash whisk heads only, wipe main unit clean, keep main unit away from water.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact your retailer. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DSX27TNM>

More documents and user manuals: **<https://manuals.plus/>**