



Manuals.plus /

- › Kenneth Cole REACTION /
- › Kenneth Cole REACTION Men's Analog-Digital Watch Instruction Manual KRWGP7005802

Kenneth Cole REACTION KRWGP7005802

Kenneth Cole REACTION Men's Analog-Digital Watch Instruction Manual

Model: KRWGP7005802

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Kenneth Cole REACTION Men's Analog-Digital Watch, model KRWGP7005802. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your timepiece.



Image: Front view of the Kenneth Cole REACTION Men's Analog-Digital Watch, featuring a black-tone case, sporty bezel, black dial with two digital displays, and a textured black silicone strap.

SETUP AND INITIAL CONFIGURATION

1. Setting the Analog Time

1. Pull out the crown (the knob on the right side of the watch case) to the first or second click position.
2. Rotate the crown to move the hour and minute hands to the desired time.
3. Push the crown back in to its normal position to start the analog timekeeping.

2. Setting the Digital Time and Date

Your watch features multiple buttons for digital display control. Refer to the watch diagram (if available) for specific button functions. Typically, there are buttons for **MODE**, **LIGHT**, **START/STOP**, and **RESET**.

1. Press the **MODE** button repeatedly until the time setting mode is displayed (often indicated by flashing digits).
2. Use the **START/STOP** or **RESET** buttons to adjust the flashing digits (hours, minutes, seconds).
3. Press the **MODE** button again to cycle through other settings such as year, month, and day, adjusting each with the **START/STOP** or **RESET** buttons.
4. Once all settings are correct, press the **MODE** button to exit the setting mode.

OPERATING INSTRUCTIONS

1. Mode Selection

Press the **MODE** button to cycle through the various digital functions: Time Display, Chronograph (Stopwatch), Alarm, and Dual Time.

2. Using the Chronograph (Stopwatch)

1. Press the **MODE** button until "CHRONO" or "STOPWATCH" is displayed.
2. Press the **START/STOP** button to begin timing.
3. Press **START/STOP** again to pause/resume timing.
4. Press the **RESET** button to clear the stopwatch to zero.

3. Setting and Using the Alarm

1. Press the **MODE** button until "ALARM" is displayed.
2. Press and hold the **RESET** button (or similar) to enter alarm setting mode (digits will flash).
3. Use **START/STOP** and **RESET** buttons to set the desired alarm time.
4. Press **MODE** to confirm and exit.
5. To activate/deactivate the alarm, press the **START/STOP** button while in alarm mode. An alarm icon will typically appear when active.

4. Dual Time Function

The dual time function allows you to display a second time zone. To set it:

1. Press the **MODE** button until "DUAL TIME" is displayed.
2. Press and hold the **RESET** button (or similar) to enter setting mode.
3. Use **START/STOP** and **RESET** buttons to set the desired second time zone.
4. Press **MODE** to confirm and exit.

5. Backlight / Light Function

Press the **LIGHT** button (usually located on the top left of the watch case) to illuminate the digital display for a few seconds in low-light conditions.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the watch case and strap regularly with a soft, dry cloth. For silicone straps, a damp cloth with mild soap can be used, then rinse and dry thoroughly.
- **Water Resistance:** This watch is water-resistant. However, it is not suitable for diving or prolonged submersion. Avoid operating buttons while the watch is wet to prevent water ingress. Refer to the watch's specific water resistance rating (e.g., 3 ATM, 5 ATM) for detailed usage guidelines.
- **Temperature Extremes:** Avoid exposing the watch to extreme temperatures, both hot and cold, as this can affect battery life and watch accuracy.
- **Chemicals:** Keep the watch away from solvents, detergents, perfumes, and cosmetics, as these can damage the case, strap, or internal components.
- **Battery Replacement:** The watch uses 2 Lithium Metal batteries. When the display dims or the watch stops functioning, it's time for battery replacement. It is recommended to have batteries replaced by a qualified watch technician to ensure proper sealing and water resistance.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Analog hands not moving.	<ul style="list-style-type: none">• Crown is pulled out. Push it back in.• Battery is low or depleted. Replace battery.• Internal mechanism issue. Seek professional repair.
Digital display is blank or dim.	<ul style="list-style-type: none">• Battery is low or depleted. Replace battery.• Extreme temperature exposure. Allow watch to return to normal temperature.
Incorrect digital time/date.	<ul style="list-style-type: none">• Time/date was not set correctly. Follow "Setting the Digital Time and Date" instructions.• Watch may have been reset.
Alarm does not sound.	<ul style="list-style-type: none">• Alarm is not activated. Ensure alarm icon is displayed.• Alarm time is set incorrectly.

SPECIFICATIONS

- **Model Number:** KRWGP7005802
- **Movement:** Analog-Digital Quartz
- **Case Diameter:** 49mm
- **Case Material:** Black-tone
- **Strap Material:** Textured Black Silicone
- **Water Resistance:** Refer to markings on the watch case back for specific rating.
- **Batteries:** 2 Lithium Metal batteries (included)
- **Product Dimensions:** 9.06 x 1.93 x 0.64 inches

- **Item Weight:** 4.37 ounces

WARRANTY AND SUPPORT

Your Kenneth Cole REACTION watch is covered by a manufacturer's warranty against defects in materials and workmanship. The duration and terms of the warranty may vary. Please refer to the warranty card included with your purchase or visit the official Kenneth Cole REACTION website for detailed warranty information.

For technical support, service, or warranty claims, please contact the retailer where the watch was purchased or refer to the contact information provided on the official Kenneth Cole REACTION website.

Note: Unauthorized repairs or modifications may void your warranty.

