

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Keurig](#) /

› [Keurig K-Express Essentials Single Serve Coffee Maker User Manual](#)

Keurig K-Express Essentials

Keurig K-Express Essentials Single Serve Coffee Maker User Manual

Model: K-Express Essentials

INTRODUCTION

Welcome to the user manual for your new Keurig K-Express Essentials Single Serve Coffee Maker. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your coffee maker to ensure optimal performance and enjoyment. The Keurig K-Express Essentials is designed for convenience, offering three cup sizes (6, 8, and 10 oz) and a 36 oz detachable water tank in a space-saving design.



Image: The Keurig K-Express Essentials coffee maker in blue, highlighting its features including three cup sizes (6, 8, and 10 oz), a 36 oz removable water reservoir, and a compact 6.5-inch wide design.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles and knobs.
- To protect against fire, electric shock, and injury, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact Keurig Customer Service for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Always keep the brewer lid closed during brewing.
- Do not remove the water reservoir lid during brewing.

WHAT'S IN THE BOX

Your Keurig K-Express Essentials Single Serve Coffee Maker package includes:

- Keurig K-Express Essentials Coffee Maker

SETUP GUIDE

Follow these steps to prepare your Keurig K-Express Essentials for its first use.

1. Initial Rinse

1. Remove all packaging tape and materials from the coffee maker.
2. Place the coffee maker on a stable, level surface.
3. Plug the coffee maker into a grounded outlet.
4. Remove the water reservoir from the back of the unit. Wash it with warm, soapy water, then rinse thoroughly.
5. Fill the water reservoir with fresh water up to the MAX fill line.
6. Place a large mug (at least 10 oz) on the drip tray.
7. Lift and lower the handle to close the K-Cup pod holder. Do not insert a K-Cup pod.
8. Press the power button. The brew size buttons will flash.
9. Select the 10 oz brew size button to start a cleansing brew.
10. Once the brew is complete, discard the hot water. Your coffee maker is now ready for use.



Professional Team



Dedicated Service

— Why Choose —

Happy Ranger



9 Years Experience



Professional Upgrade

Image: A hand pouring water into the 36 oz removable water reservoir of the Keurig K-Express Essentials coffee maker.

OPERATING INSTRUCTIONS

Brewing your favorite beverage with the Keurig K-Express Essentials is simple.

1. Add Water

- Ensure the water reservoir is filled with fresh water. The "Add Water" indicator light will illuminate if the water level is too low.

2. Insert K-Cup Pod

- Lift the handle to open the K-Cup pod holder.
- Place a K-Cup pod into the holder.
- Lower the handle completely to close the holder.

3. Select Brew Size

- Place a mug on the drip tray. For travel mugs up to 7 inches tall, remove the drip tray.
- The brew size buttons (6 oz, 8 oz, 10 oz) will flash. Select your desired cup size.

4. Brew

- The selected brew size button will illuminate steadily, and brewing will begin.
- Once brewing is complete, the button will turn off. Carefully remove your mug.
- Lift the handle to eject the used K-Cup pod.

Continuous Brewing: The K-Express Essentials allows for immediate subsequent brews without reheating delays, making it convenient for multiple servings.



Image: The Keurig K-Express Essentials coffee maker in blue, demonstrating its space-saving 6.5-inch width while brewing coffee into a white mug.

KEURIG®

K-Express

ESSENTIALS®

SINGLE SERVE COFFEE MAKER



Image: The Keurig K-Express Essentials coffee maker in blue, showing the removable drip tray to allow for travel mugs up to 7 inches tall.

MAINTENANCE

Regular cleaning and maintenance will help ensure your Keurig K-Express Essentials continues to perform at its best.

Cleaning the Water Reservoir

- The 36 oz detachable water tank should be cleaned regularly. Remove the lid and wash the reservoir with warm, soapy water. Rinse thoroughly.
- Do not place the water reservoir in the dishwasher.

Cleaning the Drip Tray

- The drip tray can accumulate drips and should be emptied and cleaned periodically.
- Remove the drip tray, discard any liquid, and wash with warm, soapy water. Rinse thoroughly.

Descaling

- Over time, calcium deposits (scale) can build up in your coffee maker. The "Descale" indicator light

will illuminate when descaling is recommended.

- Refer to the full Keurig descaling instructions on the official Keurig website or in the comprehensive manual for your specific model.

TROUBLESHOOTING

If you encounter any issues with your Keurig K-Express Essentials, try these common troubleshooting steps.

"Add Water" Light On

- Ensure the water reservoir is filled above the minimum fill line.
- Make sure the water reservoir is properly seated in its base.

No Brew or Partial Brew

- Check that the coffee maker is plugged in and powered on.
- Ensure the K-Cup pod is correctly inserted and the handle is fully lowered.
- Verify there is sufficient water in the reservoir.
- Perform a cleansing brew without a K-Cup pod to clear any air bubbles.

Weak Coffee

- Try a smaller brew size for a stronger cup.
- Ensure you are using a fresh K-Cup pod.
- Consider descaling the machine if the "Descale" light is on or if it has been a while since the last descaling.

SPECIFICATIONS

Brand	Keurig
Model Name	K-Express Essentials K25
Color	Blue
Product Dimensions (L x W x H)	6.5"D x 12.2"W x 11.3"H
Water Tank Capacity	36 Ounces
Cup Sizes	6, 8, & 10 oz
Coffee Input Type	K-Cup Pod, Reusable Filter (sold separately)
Voltage	120 Volts
Special Features	Energy Efficient, Removable Tank, Space Saving Design, Travel Mug Friendly
Item Weight	4.5 pounds
UPC	611247135440

KEURIG

K-Express

ESSENTIALS®

SINGLE SERVE COFFEE MAKER

PRODUCT DIMENSIONS

11.3" Height
(16.8" High
when open)

6.5" Width

12.2" Depth



Image: Detailed product dimensions of the Keurig K-Express Essentials coffee maker, showing height (11.3" / 16.8" open), width (6.5"), and depth (12.2").

WARRANTY AND SUPPORT

Your Keurig K-Express Essentials Coffee Maker is covered by a limited manufacturer's warranty. For specific warranty details, registration, or to contact customer support, please visit the official Keurig website or refer to the documentation included with your product.

For further assistance, you may visit the [Keurig Store on Amazon](#).