

Vyzzle D10

# Vyzzle D10 Robotic Vacuum Cleaner Replacement Parts Instruction Manual

Model: D10

- [Contents](#)
- [Installation](#)
- [Introduction](#)
- [Maintenance](#)
- [Compatibility](#)
- [Specifications](#)
- [Package](#)
- [Troubleshooting](#)
- [Support](#)

## 1. INTRODUCTION

This instruction manual provides detailed guidance for the installation and maintenance of replacement parts for the Vyzzle D10 Robotic Vacuum Cleaner. Regular replacement of these consumable parts is essential to maintain the optimal performance and cleaning efficiency of your robotic vacuum.

## 2. COMPATIBLE MODELS

These replacement parts are specifically designed for use with the **Vyzzle D10 Robot Vacuum Cleaner**. Ensure your model is compatible before installation.

## 3. PACKAGE CONTENTS

The valuable package includes the following components:

- 1 x Roller Brush
- 2 x Washable Mop Cloths
- 2 x Filters
- 1 x Side Brush



Figure 3.1: Complete set of Vyzzle D10 replacement parts.

## 4. INSTALLATION GUIDE

---

Before installing any replacement parts, ensure the robotic vacuum cleaner is powered off and disconnected from its charging base. Always refer to your Vyzzle D10 user manual for specific instructions on accessing component compartments.

### 4.1. Roller Brush Installation

1. Turn the robot vacuum upside down.
2. Locate the brush guard or cover, usually secured by latches or screws. Open or remove it.
3. Remove the old roller brush. Clean any debris from the brush compartment.
4. Insert the new roller brush, ensuring the ends align with the slots in the vacuum.
5. Close or reattach the brush guard/cover securely.



Figure 4.1: Roller Brush.

## 4.2. Side Brush Installation

1. Turn the robot vacuum upside down.
2. Locate the side brush. It is typically held by a single screw.
3. Unscrew and remove the old side brush.
4. Align the new side brush with the post and secure it with the screw.

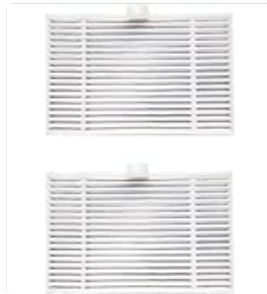


Figure 4.2: Side Brush.

## 4.3. Filter Installation

1. Open the top cover of the robot vacuum to access the dustbin.
2. Remove the dustbin from the vacuum.
3. Open the dustbin cover and remove the old filter assembly.
4. Insert the new filter(s) into the designated slot within the dustbin, ensuring a snug fit.
5. Close the dustbin cover and reinsert the dustbin into the vacuum.



Figure 4.3: Filters.

## 4.4. Mop Cloth Installation

1. Locate the mop cloth attachment area on the underside of the vacuum or on the water tank.
2. Remove the used mop cloth, if present.
3. Attach the new washable mop cloth securely to the designated area, ensuring it is flat and properly aligned.



Figure 4.4: Washable Mop Cloths.

## 5. MAINTENANCE AND CARE

---

Regular cleaning and timely replacement of parts are crucial for the longevity and efficiency of your Vyzzle D10 robotic vacuum cleaner. It is recommended to replace consumable parts every 3-6 months, depending on usage.

### 5.1. Cleaning the Roller Brush

Remove the roller brush as described in Section 4.1. Use a cleaning tool or scissors to cut and remove any hair or debris tangled around the brush. Wipe the brush and its bearings with a dry cloth.

### 5.2. Cleaning the Side Brush

Remove the side brush as described in Section 4.2. Remove any hair or debris wrapped around the brush or its base. Wipe the brush with a dry cloth.

### 5.3. Cleaning the Filters

Remove the dustbin and filters as described in Section 4.3. Tap the filters gently over a trash can to remove dust and debris. The filters are washable; hand-wash them with warm water. Ensure they are completely air-dried before reinstallation to prevent damage to the vacuum.

### 5.4. Cleaning the Mop Cloths

Remove the mop cloths after each use. Hand-wash them with warm water and mild detergent. Rinse thoroughly and allow them to completely air dry before reattaching them to the vacuum or storing them.

## 6. SPECIFICATIONS

---

Component	Quantity	Material/Type
Roller Brush	1	Plastic, Bristles
Washable Mop Cloth	2	Microfiber
Filter	2	HEPA
Side Brush	1	Plastic, Bristles

**Item Weight:** 4.2 ounces

**Package Dimensions:** 3.9 x 1.96 x 0.78 inches

## 7. TROUBLESHOOTING

---

If you experience issues after replacing parts, consider the following:

- **Reduced Cleaning Performance:** Ensure all brushes are free of tangles and debris. Check that filters are clean and properly seated.
- **Unusual Noises:** Verify that the roller brush and side brush are correctly installed and not obstructed.
- **Mop Not Wetting Floor:** Ensure the mop cloth is properly attached and the water tank (if applicable) is filled and correctly installed.
- **Parts Not Fitting:** Double-check that you have purchased the correct replacement parts for the Vyzzle D10 model.

For more complex issues, refer to your original Vyzzle D10 Robotic Vacuum Cleaner user manual or contact customer support.

## 8. CUSTOMER SUPPORT



For further assistance, technical support, or inquiries regarding your Vyzzle D10 Robotic Vacuum Cleaner replacement parts, please visit the official Vyzzle website or contact their customer service department.

**Online Support:** [Visit the Vyzzle Store on Amazon](#)

Please have your product model (Vyzzle D10) and purchase details ready when contacting support.

© 2025 Vyzzle. All rights reserved.

### Related Documents

	<p><a href="#">Vyzzle E20 Robot Vacuum Cleaner User Manual</a></p> <p>User manual for the Vyzzle E20 Robot Vacuum Cleaner, covering product introduction, installation, operation, maintenance, troubleshooting, and safety information.</p>
	<p><a href="#">Vyzzle E20 Robot Vacuum Cleaner User Manual</a></p> <p>User manual for the Vyzzle E20 Robot Vacuum Cleaner, covering setup, operation, maintenance, troubleshooting, and safety information.</p>

### Documents - Vyzzle – D10



[\[pdf\]](#) User Manual

ROBOT VACUUM CLEANERROBOT CLEANER USER MANUAL D10 Page 2 Wenn Sie Fragen haben  
senden bitte eine E Mail an support@vyzzle 33 DE INHALT 191IEfH7rbjLm media amazon images I  
91IEfH7rbjL ref dp product quick view |||

ROBOT VACUUM CLEANER USER MANUAL **D10** INHALT

1.Sicherheitsinformationen - - - - - 34 2.Paketliste - - - - -  
- - - - - 38 3.Grundlegende Parameter - - - - -

lang:de score:20 filesize: 814.74 K page\_count: 30 document date: 2025-07-23

FCC Part 15C&RSS-247 TEST REPORT

FCC ID: 2A2PN-L10

IC:27884-L10

Product	Robot vacuum cleaner
Model Name	D10
Series Model	L10
Model	D10
Brand	Laresar, Vyzzle
Report No.	NCT24036780
Prepared for	Ekoo Electronic Co., Ltd
889, Block B, F2, Bldg.2, Banteng Pioneer Park, No.372, Minshi Avenue, Minshi St., Longshan, Shenzhen, CHINA 518000	
Prepared by	
Shenzhen NCT Testing Technology Co., Ltd.	
A18162F B2, Fuzhou 6th Area, Shenzhen Community, Futian Street, Baonan District, Shenzhen, People's Republic of China	
TEL: 400-888-9419	
FAX: 86-755-27780927	

[FCC Part 15C & RSS-247 Test Report for Laresar/Vyzzle D10 Robot Vacuum Cleaner](#)

This document is the FCC Part 15C and RSS-247 test report for the Laresar/Vyzzle D10 Robot Vacuum Cleaner, covering conducted emissions, radiated spurious emissions, bandwidth, output power, and other RF performance metrics. FCC ID: 2A2PN-L10, IC: 27884-L10.

lang:en score:14 filesize: 5.98 M page\_count: 39 document date: 2024-10-15