



Manuals.plus /

- › **MAGNIFIQUE EXPERIENCE DELIGHT /**
- › MAGNIFIQUE 4 Quart Claypot Multi-Cooker Instruction Manual

**MAGNIFIQUE EXPERIENCE DELIGHT 292b2d93-03e0-4a0f-b2ea-ed63763ae878**

# MAGNIFIQUE 4 Quart Claypot Multi-Cooker Instruction Manual

Model: 292b2d93-03e0-4a0f-b2ea-ed63763ae878

Brand: MAGNIFIQUE EXPERIENCE DELIGHT

## 1. INTRODUCTION

---



**Figure 1.1:** The MAGNIFIQUE 4 Quart Claypot Multi-Cooker in brown, presented with its lid and an accompanying wooden spatula. This image showcases the appliance's elegant design and compact form factor.

Thank you for choosing the MAGNIFIQUE 4 Quart Claypot Multi-Cooker. This versatile appliance is designed to simplify your cooking experience with its 8-in-1 functionality, including slow cook, braise, sear/sauté, keep warm, brown rice, white rice, oats, and pasta functions. Crafted with a heat-resistant porcelain liner and ceramic nonstick coating, it offers a safe and efficient way to prepare a variety of meals. Please read this manual thoroughly before first use to ensure proper operation and maintenance.

## 2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the multi-cooker.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or heating unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The ceramic nonstick coating is free from PFAS, PFOA, PTFE, lead, and cadmium.


### 3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your MAGNIFIQUE Multi-Cooker:



**Figure 3.1:** Exploded view of the MAGNIFIQUE Multi-Cooker, illustrating the main heating unit, the removable 4-quart claypot, the matching lid, and the included wooden spatula. This image highlights the separate components for easy understanding of assembly and cleaning.

- **Main Heating Unit:** The base unit containing the heating elements and control panel.
- **Removable Claypot:** The 4-quart stoneware crock with ceramic nonstick coating, suitable for cooking and serving. It is also oven safe up to 450°F.
- **Lid:** A matching lid designed to fit securely on the claypot, aiding in heat retention and moisture lock.
- **Control Panel:** Located on the front of the main unit, featuring a digital display and touch controls for various functions.
- **Wooden Spatula:** An accessory for stirring and serving.

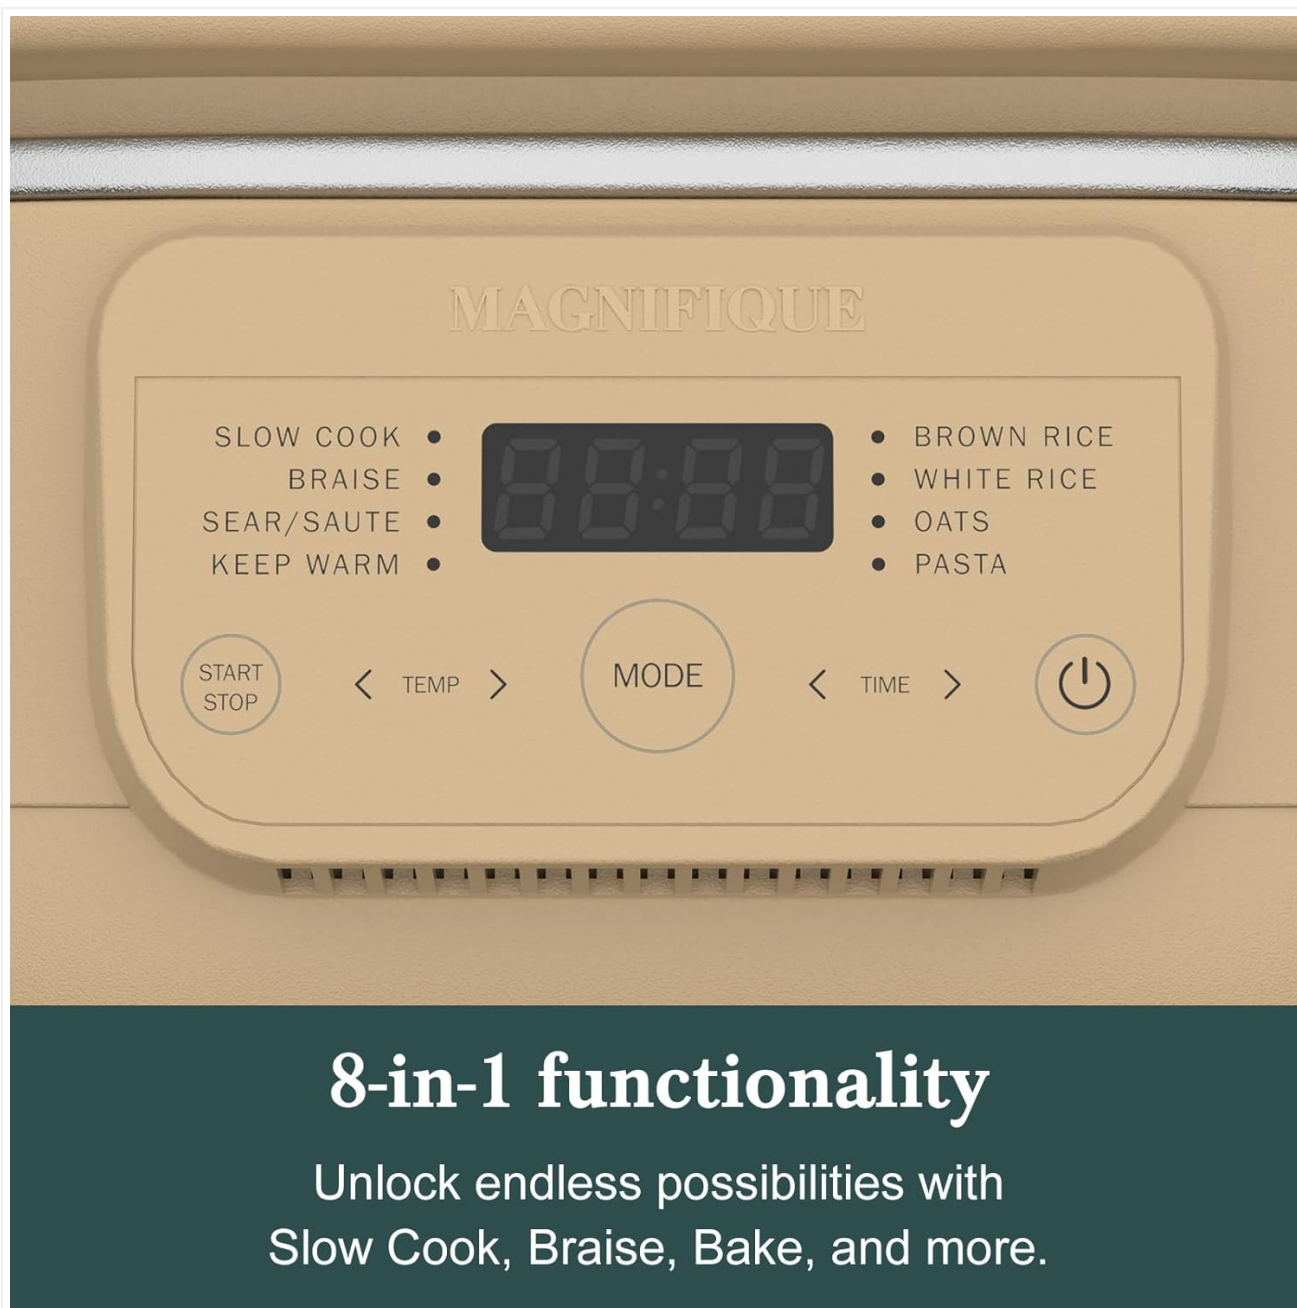

**Figure 3.2:** Detailed view of the multi-cooker's control panel. It features a clear digital display for time and temperature, along with touch buttons for 'Start/Stop', 'Temp' adjustment, 'Mode' selection, and 'Time' adjustment. The panel also lists the 8-in-1 functions: Slow Cook, Braise, Sear/Sauté, Keep Warm, Brown Rice, White Rice, Oats, and Pasta.

## 4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and accessories. Retain packaging for future storage or

transport if needed.

2. **Initial Cleaning:** Before first use, wash the removable claypot and lid with warm, soapy water. Rinse thoroughly and dry completely. The main heating unit should be wiped clean with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the multi-cooker on a stable, flat, heat-resistant surface, away from walls or cabinets to allow for proper ventilation.
4. **Assembly:** Insert the clean, dry claypot into the main heating unit. Place the lid on top of the claypot.
5. **Power Connection:** Plug the power cord into a 120-volt AC electrical outlet. The digital display will illuminate.

## 5. OPERATING INSTRUCTIONS

The MAGNIFIQUE Multi-Cooker features 8 pre-set functions for various cooking needs. Use the touch control panel to select your desired mode.



**Figure 5.1:** Visual representation of the 8 primary cooking functions: Slow Cook (beans), Braise (stew), Sear/Sauté (chicken), Keep Warm (soup), Brown Rice, White Rice, Oats, and Pasta. Each image demonstrates the versatility of the appliance for different meal types.


### General Operation:

1. Add ingredients to the removable claypot.
2. Place the lid on the claypot.
3. Press the **MODE** button to cycle through the available cooking functions. The selected function will be indicated on the digital display.
4. Use the **TEMP** buttons (< and >) to adjust the cooking temperature if the selected mode allows.
5. Use the **TIME** buttons (< and >) to set the desired cooking duration.
6. Press the **START/STOP** button to begin the cooking process.
7. To stop cooking at any time, press the **START/STOP** button again.

### Specific Functions:

- **Slow Cook:** Ideal for tenderizing meats and simmering stews over extended periods. Adjust time and temperature as per recipe.
- **Braise:** Combines searing with slow cooking in liquid, perfect for developing rich flavors.
- **Sear/Sauté:** Use this function to brown ingredients directly in the claypot before slow cooking, enhancing flavor and texture.

- **Keep Warm:** Automatically activates after some cooking cycles or can be selected manually to maintain food at serving temperature.
- **Brown Rice:** Optimized setting for cooking brown rice to perfection.
- **White Rice:** Pre-programmed for cooking white rice.
- **Oats:** Suitable for preparing oatmeal and other grain-based breakfasts.
- **Pasta:** Designed for cooking pasta efficiently.

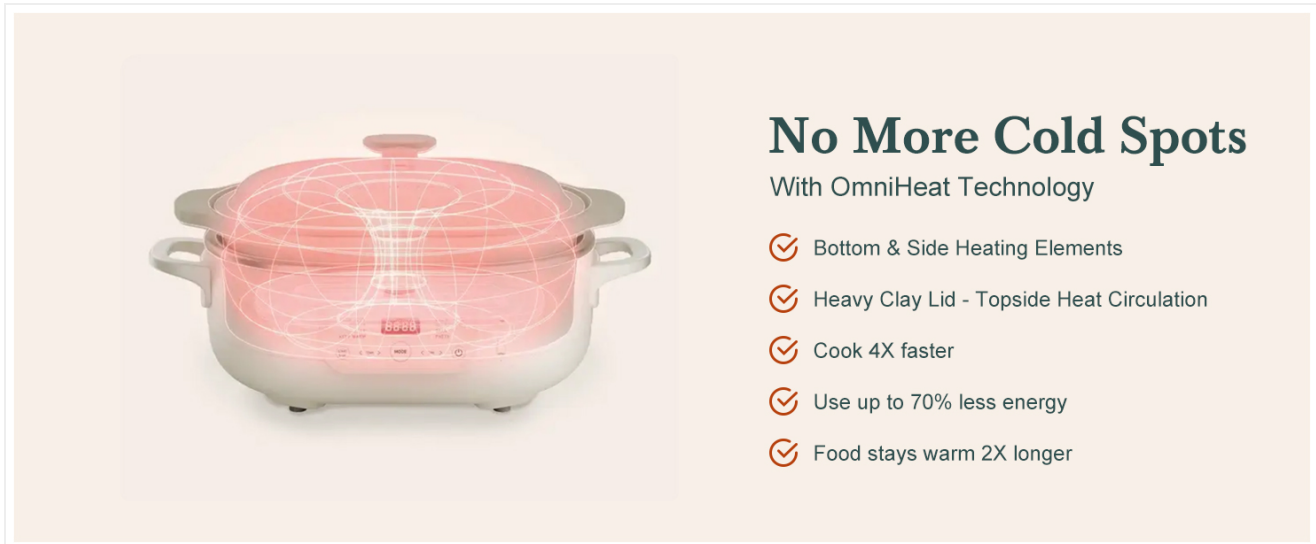

**Figure 5.2:** This diagram illustrates the OmniHeat Technology, which utilizes bottom and side heating elements along with topside heat circulation from the heavy clay lid. This comprehensive heating system ensures even cooking, prevents cold spots, cooks faster, and retains heat more efficiently, keeping food warm longer.

The unique OmniHeat Technology, combined with the Kaolin Claypot, ensures even heat distribution and retention, leading to faster cooking times and food staying warm for longer periods.

## 6. CARE AND MAINTENANCE

Proper care ensures the longevity and performance of your multi-cooker.

- **Cleaning the Claypot and Lid:** The removable stoneware claypot and lid are dishwasher safe for easy cleaning. For hand washing, use warm, soapy water and a non-abrasive sponge. The ceramic nonstick coating makes cleaning effortless.
- **Cleaning the Main Unit:** Wipe the exterior of the main heating unit and control panel with a damp cloth. Do not use abrasive cleaners or scouring pads. Ensure the unit is unplugged and completely cool before cleaning.
- **Storage:** Ensure all parts are clean and dry before storing. Store the multi-cooker in a cool, dry place. The claypot and lid can be stored inside the main unit to save space.



**Figure 6.1:** The removable claypot and lid are shown being placed into a dishwasher, demonstrating their dishwasher-safe design for convenient and minimal clean-up after use.



## Cleaning is a breeze

The Kaolin Clay Glaze does wonders at preventing food from sticking, requiring less oils and fats when cooking. Although very easy to clean, your new Claypot is also dishwasher safe.

**Figure 6.2:** This image reinforces the ease of cleaning, showing the lid of the claypot being placed into a dishwasher. The Kaolin Clay Glaze prevents food from sticking, making both hand washing and dishwasher cleaning simple.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your MAGNIFIQUE Multi-Cooker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; unit not properly assembled.	Ensure the power cord is securely plugged into a working 120V outlet. Check if the claypot is correctly seated in the main unit.
Food is not cooking evenly.	Lid not sealed properly; insufficient liquid; improper temperature/time setting.	Ensure the lid is properly seated. Add sufficient liquid as per recipe. Verify the selected cooking mode, temperature, and time settings are appropriate for the dish. The OmniHeat technology is designed for even heating.
Lid does not fit flush.	Manufacturing variation; debris on rim.	Check for any food debris or foreign objects on the rim of the claypot or lid that might prevent a proper seal. If the issue persists and significantly impacts performance, contact customer support.
Food sticks to the pot.	Insufficient oil/liquid; high heat for too long; food residue.	Ensure adequate oil or liquid is used, especially for searing. The ceramic nonstick coating is designed to minimize sticking, but some foods may require light greasing. Clean the pot thoroughly after each use.

If the problem persists after attempting these solutions, please contact MAGNIFIQUE customer support for assistance.

## 8. SPECIFICATIONS

---

Feature	Detail
Brand	MAGNIFIQUE EXPERIENCE DELIGHT
Model Number	292b2d93-03e0-4a0f-b2ea-ed63763ae878
Color	Brown
Material	Aluminum (outer shell), Stoneware (inner claypot)
Product Dimensions	13"D x 16"W x 7"H
Capacity	4 Quart (equivalent to 4 Pounds of food)
Wattage	1130 watts
Voltage	120 Volts (AC)
Control Method	Touch
Number of Settings	8 (Slow Cook, Braise, Sear/Sauté, Keep Warm, Brown Rice, White Rice, Oats, Pasta)
Dishwasher Safe	Yes (removable stoneware and lid)
Oven Safe	Yes (porcelain liner up to 450°F)
Item Weight	18.81 pounds

## 9. WARRANTY AND SUPPORT

---

MAGNIFIQUE EXPERIENCE DELIGHT stands behind the quality of its products. For specific warranty information, please refer to the warranty card included with your purchase or visit the official MAGNIFIQUE EXPERIENCE DELIGHT website. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact our customer service team.

**Customer Service Contact:** Please refer to the contact information provided on the product packaging or the official brand website.

**Online Resources:** For additional recipes and product information, visit the MAGNIFIQUE EXPERIENCE DELIGHT store on Amazon: [MAGNIFIQUE EXPERIENCE DELIGHT Store](#)