

[Manuals.plus](#) /

› [Goyappin](#) /

› Goyappin Handheld Steam Cleaner Instruction Manual

Goyappin S312019

Goyappin Handheld Steam Cleaner Instruction Manual

Model: S312019

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Goyappin Handheld Steam Cleaner. Please read all instructions carefully before operating the appliance and retain this manual for future reference. This steam cleaner is designed for multi-purpose cleaning using high-temperature steam, suitable for various surfaces including upholstery, carpets, car interiors, floors, bathrooms, and mattresses.

IMPORTANT SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury, basic safety precautions should always be followed, including:

- Always ensure the steam cleaner is unplugged from the electrical outlet before filling with water, cleaning, or performing maintenance.
- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without water in the tank.
- **Caution:** Steam is extremely hot. Always direct steam away from people, pets, and electrical appliances.

- Ensure the safety switch is engaged when not actively steaming to prevent accidental activation.

PRODUCT COMPONENTS

Your Goyappin Handheld Steam Cleaner comes with several accessories designed for various cleaning tasks.



- **Main Unit:** The core steam cleaner with water tank and heating element.
- **Extended Connecting Nozzle:** For reaching difficult areas.
- **Nylon Brush:** Ideal for scrubbing tough grime on various surfaces.
- **General Spray Nozzle:** Standard nozzle for general steam application.

- **Long Spray Nozzle:** Provides a focused stream for precision cleaning.
- **Bent Spray Nozzle:** Designed for corners and hard-to-reach angles.
- **Door/Window Nozzle:** For streak-free cleaning of glass surfaces.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Fill Water Tank:** Ensure the unit is unplugged. Unscrew the steam button/water tank cover. Fill the water tank with up to 350ml of clean tap water. Do not overfill. The total tank capacity is 400ml, but 350ml is the suggested maximum for optimal performance and safety.



Image: Illustration of the steam cleaner's water tank being filled, indicating a suggested capacity of 350ml and a quick heating time of 10-15 seconds.

3. **Secure Cap:** Screw the water tank cover back on tightly.
4. **Attach Nozzle:** Select the appropriate nozzle for your cleaning task. Align the nozzle with the spray nozzle connection point and twist or push until it clicks securely into place. Use the hose button to release and change attachments.

OPERATING INSTRUCTIONS

1. **Power On:** Plug the steam cleaner into a standard electrical outlet. The indicator light will illuminate, signifying that the unit is heating.
2. **Heating:** The unit will heat up in approximately 10-15 seconds. Once heated, it is ready for use.
3. **Steam Application:** Point the nozzle towards the surface to be cleaned. Press and hold the steam button to release steam. For continuous steam, ensure the safety switch is disengaged. Release the steam button to stop steaming.

4. Cleaning Technique:

- Hold the nozzle close to the surface for effective cleaning.
- Move the steam cleaner slowly over the area to allow the steam to penetrate and loosen dirt.
- For stubborn stains, apply steam for a longer duration and use a brush attachment if necessary.
- Wipe away loosened dirt and moisture with a clean cloth immediately after steaming.



Image: The steam cleaner in action, emitting 221°F (105°C) high-temperature steam, with before and after images of a cleaned range hood filter, demonstrating its effectiveness.

5. **Continuous Steam:** The unit provides 10-15 minutes of continuous steam on a full tank.
6. **Refilling:** If the steam output decreases or stops, the water tank may be empty. Unplug the unit, allow it to cool for a few minutes, and then carefully refill the tank as per the "Setup" instructions.
7. **Power Off:** When finished cleaning, release the steam button, engage the safety switch, and unplug the unit from the electrical outlet.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your steam cleaner.

- **Cleaning the Exterior:** Wipe the exterior of the steam cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Emptying Water Tank:** After each use, ensure the unit is cool and unplugged. Carefully empty any remaining water from the tank.
- **Descaling (Optional, but Recommended):** Depending on water hardness, mineral deposits may build up over time. To descale, fill the tank with a solution of equal parts white vinegar and water. Let it sit for 30 minutes (do not heat). Empty the solution and rinse the tank thoroughly with clean water. Repeat if necessary.
- **Storing:** Store the steam cleaner and its accessories in a cool, dry place, away from direct sunlight and out of reach

of children. Ensure the unit is completely cool and dry before storing.

TROUBLESHOOTING

If you encounter issues with your steam cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank is empty or low. Unit not fully heated. Mineral buildup.	Refill water tank. Allow 10-15 seconds for heating. Perform descaling procedure.
Water leaking from nozzle.	Nozzle not securely attached. Unit not fully heated (water spitting). Overfilled water tank.	Ensure nozzle is firmly attached. Allow unit to fully heat before use. Do not overfill the water tank (max 350ml).
Unit not turning on.	Not plugged in. Power outlet issue.	Check power cord connection. Test outlet with another appliance.

SPECIFICATIONS



Image: A visual summary of the steam cleaner's key specifications, including voltage, capacity, heating time, steam pressure, temperature, continuous steam duration, and physical dimensions.

Feature	Detail
Brand	Goyappin

Feature	Detail
Model Name	Handheld Steam Cleaner
Model Number	S312019
Voltage	120V
Wattage	1050 watts
Tank Volume (Suggested)	350 Milliliters
Heat Time	10-15 seconds
Continuous Steam Time	10-15 Minutes
Steam Pressure	1.5 BAR
Maximum Temperature	221°F (105°C)
Item Weight	1.3 Kilograms
Dimensions (D x W x H)	15.7 x 25 x 27 Centimetres (approx. 8.6" H x 5.5" W x 11" L)
Surface Recommendation	Car Seats, Upholstery, Hard Floor, Window, Tile, Grout, Carpet

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase. For technical support or inquiries, please contact Goyappin customer service. Manufacturer contact information is provided as "Goyappin". You can also visit the official Goyappin website for additional resources and support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DT1BB9X7>

More documents and user manuals: <https://manuals.plus/>