



[Manuals.plus](#) /

› [Giantex](#) /

› Giantex Outdoor Glider Chair GT-11170-NP Instruction Manual

Giantex GT-11170-NP

Giantex Outdoor Glider Chair GT-11170-NP Instruction Manual

Model: GT-11170-NP

INTRODUCTION

Thank you for choosing the Giantex Outdoor Glider Chair. This manual provides essential information for the safe assembly, proper operation, and effective maintenance of your new glider chair. Please read these instructions thoroughly before assembly and retain them for future reference.



Image: The Giantex Outdoor Glider Chair in Navy, showcasing its design and cushions.

SAFETY INFORMATION

To ensure safe operation and prevent injury or damage, please observe the following safety precautions:

- Keep the glider chair away from open flames, water, or direct heat sources.
- Do not exceed the maximum weight capacity of 330 pounds (150 kg).
- Always use the chair on a stable, level surface to prevent tipping.

- Do not leave the chair unattended while in use, especially with children or pets nearby, to prevent accidents.
- Ensure all bolts and fasteners are securely tightened before each use.

PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact Giantex customer service.



Image: Exploded view of the glider chair components, including frame, cushions, and hardware.

Typical package contents include:

- Glider Frame Components (various metal pipes and bars)
- Seat Cushion
- Back Cushion
- Hardware Pack (bolts, washers, nuts, Allen wrench)
- Instruction Manual

SETUP AND ASSEMBLY

Assembly of the Giantex Outdoor Glider Chair is designed to be straightforward. Follow these steps carefully, referring to the numbered parts and diagrams provided in the included guide book.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches. Verify all parts against the package contents list.
2. **Identify Parts:** Each part is numbered. Match the numbers to the diagrams in the instruction guide. Pay close attention to the orientation of each piece as incorrect alignment can make assembly difficult.
3. **Assemble Base Frame:** Begin by connecting the main base frame components using the provided bolts and the Allen wrench. Do not fully tighten bolts until all components are loosely assembled.
4. **Attach Seat and Back Frames:** Connect the seat and back support frames to the base. Ensure all holes align properly. If holes do not align easily, re-check the orientation of the connected pieces. Slight adjustments may be needed.
5. **Install Gliding Mechanism:** Secure the gliding arms to the main frame and seat frame. Ensure the mechanism moves freely before tightening.
6. **Attach Armrests:** Secure the curved armrests to the chair frame.

- Final Tightening:** Once all components are loosely assembled and correctly oriented, systematically tighten all bolts using the Allen wrench. Ensure all connections are firm and secure.
- Place Cushions:** Position the thick foam seat and back cushions onto the chair.

AVAILABLE IN 4 COLORS

Material: Fabric, Metal
Overall Dimension: 28.5" x 26" x 35" (L x W x H)
Seat Height: 17.5"
Dimension of Cushion: 22" x 19.5" x 3.5" (L x W x Thickness)
Weight Capacity: 330 lbs
Net Weight: 32 lbs



The image displays four color options for the glider chair, each shown in a separate panel. The panels are labeled 'Gray', 'Black', 'Tan', and 'Navy' at the bottom. The chairs are shown from a three-quarter front view, highlighting the curved armrests and the gliding mechanism.

Image: Visual guide for assembling the glider chair, showing key connection points.

Tip: If you encounter difficulty aligning holes, double-check that all pieces are oriented correctly. Sometimes, rotating a piece 180 degrees can resolve alignment issues. Do not force connections.

OPERATING INSTRUCTIONS

The Giantex Outdoor Glider Chair is designed for smooth, comfortable gliding motion. To operate:


- Seating:** Sit centrally on the chair, ensuring your weight is evenly distributed.
- Gliding Motion:** Gently push off with your feet to initiate the smooth rocking motion. The well-designed gliding structure keeps your weight centered for stability.
- Comfort Features:** Enjoy the support provided by the curved armrests and high backrest, complemented by the thick foam cushions.

Smooth Rocking Motion



Image: Depiction of the glider chair's smooth rocking mechanism, highlighting its stable movement.

Cozy Sitting Design

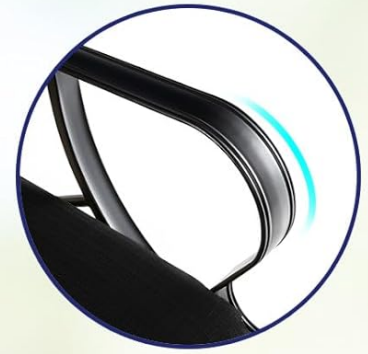

Curved Armrest



Soft Foam Cushions



High Backrest

Image: A user enjoying the chair, illustrating the ergonomic design with curved armrests, soft foam cushions, and a high backrest for comfort.

MAINTENANCE

Regular maintenance will extend the life and appearance of your Giantex Outdoor Glider Chair.

- **Cleaning the Surface:** The seat surface can be cleaned with a damp towel. For stubborn stains, use a mild soap solution and rinse thoroughly. Avoid harsh chemicals.
- **Frame Care:** Wipe the metal frame with a damp cloth to remove dust and dirt. Ensure the frame is dry after cleaning to prevent rust.
- **Cushion Care:** While the fabric is durable and water-resistant, it is recommended to store cushions indoors during prolonged periods of rain or harsh weather to maintain their quality.
- **Fastener Check:** Periodically check all bolts and fasteners to ensure they remain tight. Re-tighten as necessary.



Non-slip Footpads



Sprayed Metal Pipe



Easy-to-clean Surface

Image: Details on the chair's construction, including non-slip footpads, sprayed metal frame, and instructions for easy cleaning of the surface.

TROUBLESHOOTING

If you encounter issues with your glider chair, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Holes do not align during assembly.	Incorrect orientation of parts.	Review the assembly diagrams carefully. Try rotating the piece 180 degrees. Do not force parts together. Loosen other connections to allow for slight adjustment.
Chair feels unstable or wobbly.	Loose fasteners; uneven surface.	Ensure all bolts are fully tightened. Place the chair on a flat, level surface.

Problem	Possible Cause	Solution
Gliding motion is not smooth or makes noise.	Loose connections in the gliding mechanism; debris.	Check and tighten all bolts related to the gliding mechanism. Inspect for any obstructions or debris in the gliding path and remove them.

SPECIFICATIONS

Detailed specifications for the Giantex Outdoor Glider Chair GT-11170-NP:

Brand: Giantex

Model Name: Outdoor Glider

Item Model Number: GT-11170-NP

Color: Navy

Product Dimensions: 28.5"D x 26"W x 35"H (72.4 cm D x 66 cm W x 88.9 cm H)

Seat Height: 17.5 Inches (44.5 cm)

Seat Depth: 19.5 Inches (49.5 cm)

Seat Length: 22 Inches (55.9 cm)

Back Style: High Back

Arm Style: Curved

Fill Material: Foam

Maximum Weight Recommendation: 330 Pounds (150 kg)

Item Weight: 32 Pounds (14.5 kg)

Indoor/Outdoor Usage: Outdoor

Included Components: Outdoor Glider Chair, Cushions, Hardware



Image: Diagram showing the precise dimensions and load capacity of the glider chair.

WARRANTY AND SUPPORT

Giantex is committed to providing quality products. While specific warranty details are not included in this manual, please retain your proof of purchase. For any questions, missing parts, or support needs, please contact Giantex customer service through their official website or the retailer where the product was purchased.

You can visit the official Giantex store for more information: [Giantex Store](#)

