

[Manuals.plus](#) /

› [Power Rangers](#) /

› Power Rangers Mighty Morphin Re-Ignition Triceratops Combinable Dinozord Instruction Manual

Power Rangers 68720

Power Rangers Mighty Morphin Re-Ignition Triceratops Combinable Dinozord Instruction Manual

Model: 68720 | Brand: Power Rangers

INTRODUCTION

This manual provides instructions for the assembly, operation, and care of your Power Rangers Mighty Morphin Re-Ignition Triceratops Combinable Dinozord. Please read this manual thoroughly before use to ensure proper function and safety.

SAFETY INFORMATION

Caution: Small Parts. Not suitable for children under 3 years due to choking hazard.

Recommended for ages 4 years and up.

WHAT'S IN THE BOX

- Triceratops Combinable Dinozord Figure
- Two Missile Projectiles



Image: The Triceratops Combinable Dinozord figure, showing its main body and accessories.

SETUP

1. **Unpack Components:** Carefully remove the Triceratops Dinozord figure and the two missile projectiles from the packaging.
2. **Attach Missile Projectiles:** Insert the two missile projectiles into the launcher mechanism located on the back of the Triceratops Dinozord. Ensure they are securely seated.



Image: Side view of the Triceratops Dinozord, illustrating the missile launcher attachment point.

OPERATING INSTRUCTIONS

Missile Firing Action

1. **Load Missiles:** Ensure both missile projectiles are loaded into the launcher.
2. **Activate Launcher:** Press the trigger mechanism located near the missile launcher on the Dinozord's back to launch the projectiles.



Image: Demonstrates the missile firing action from the Triceratops Dinozord.

Combinable Feature (Megazord Formation)

The Triceratops Dinozord is designed to combine with other Mighty Morphin Power Rangers Re-Ignition Dinozords (sold separately) to form the Megazord. The Triceratops Dinozord forms the **left leg** of the Megazord.

1. **Prepare for Combination:** Ensure the Triceratops Dinozord is in its base vehicle mode.
2. **Connect to Megazord:** Locate the connection points on the top of the Triceratops Dinozord and the corresponding points on the Megazord's torso or other connecting Dinozords. Firmly attach the Triceratops Dinozord to form the left leg.



Image: The Triceratops Dinozord shown as the left leg component of the complete Megazord.

Your browser does not support the video tag.

Video: Official video demonstrating the combination of various Dinozords, including the Triceratops, to form the Megazord.

MAINTENANCE

- **Cleaning:** Wipe the Dinozord with a soft, dry cloth to remove dust and dirt. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the Dinozord and its accessories in a cool, dry place away from direct sunlight to prevent discoloration or damage.
- **Inspection:** Periodically inspect the toy for any loose or damaged parts. Discontinue use if damage is found.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Missiles do not launch.	Missiles not properly loaded or launcher mechanism is obstructed.	Ensure missiles are fully inserted. Check for any debris blocking the launcher.
Dinozord does not combine with other figures.	Incorrect alignment or incompatible figures.	Verify that you are attempting to combine with other Mighty Morphin Power Rangers Re-Ignition Dinozords. Align connection points carefully and apply gentle pressure.

SPECIFICATIONS

Model Name: Triceratops Combinable Dinozord

Model Number: 68720

Brand: Power Rangers

Manufacturer: Playmates Toys

Material: Plastic

Item Dimensions (L x W x H): 10" x 3" x 10"

Item Weight: 13.76 ounces

Recommended Age: 48 months (4 years) to 1000 months (approx. 83 years)

Included Components: Figure; Accessories (Missile Projectiles)

Special Features: Launchable Tail Missile, Combinable with other Dinozords to form Megazord.

WARRANTY AND SUPPORT

This product is covered by the manufacturer's standard warranty. For warranty claims, technical support, or replacement parts, please contact Playmates Toys customer service directly. Contact information can typically be found on the product packaging or the manufacturer's official website.

Please retain your purchase receipt as proof of purchase for warranty purposes.

© 2026 Power Rangers. All rights reserved. Playmates Toys.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question