

[Manuals.plus](#) /

› [Beyution](#) /

› Beyution AKB33871409 Replacement Remote Control Compatible with LG LCD LED TV 19LG3000 19LG3010 22LG3000 22LG3010 19LG3000-ZA 19LG3010-ZB 22LG3010-ZB 22LG3000-ZA 26LG3000-ZA

Beyution AKB33871409

Beyution AKB33871409 Replacement Remote Control User Manual

Model: AKB33871409

Brand: Beyution

1. INTRODUCTION

This user manual provides comprehensive instructions for the Beyution AKB33871409 Replacement Remote Control. This remote is designed as a direct replacement for various LG LCD LED TV models, offering seamless operation without the need for complex programming. Please read this manual carefully to ensure proper use and maintenance of your new remote control.



Figure 1: Beyution AKB33871409 Replacement Remote Control. This image shows the full view of the remote control, highlighting its ergonomic design and button layout.

2. SETUP

2.1 Battery Installation

The Beyution AKB33871409 remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two new AAA alkaline batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.







Figure 2: Battery Compartment. This image illustrates the open battery compartment of the remote control, showing where to insert the two AAA batteries.

Note: No programming or setup is required. Once batteries are installed, the remote is ready for use with compatible LG LCD LED TV models.

3. OPERATING INSTRUCTIONS

This replacement remote control is designed to function identically to the original LG remote for the specified models. Simply point the remote at your television and press the desired button.

3.1 Compatible Models

The remote is compatible with the following LG LCD LED TV models:

- 19LG3000
- 19LG3010
- 22LG3000
- 22LG3010
- 19LG3000-ZA
- 19LG3010-ZB
- 22LG3010-ZB
- 22LG3000-ZA
- 26LG3000-ZA

3.2 Basic Functions

The remote provides all standard functions found on an original LG TV remote, including:

- **Power:** Turns the TV on or off.
- **Input:** Selects input sources (HDMI, AV, etc.).
- **Channel Up/Down:** Changes TV channels.
- **Volume Up/Down:** Adjusts TV volume.
- **Mute:** Mutes or unmutes TV audio.
- **Number Buttons (0-9):** Direct channel selection.
- **Navigation (Arrow) Buttons & OK:** Navigates menus and confirms selections.
- **Menu/Settings:** Accesses TV settings and menus.
- **Return/Back:** Returns to the previous screen or menu.
- **Exit:** Exits current menu or function.



Figure 3: Remote in Use. This image depicts a person using the remote control to interact with a television, demonstrating typical usage.

4. MAINTENANCE

Proper maintenance will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops working. Always replace both batteries at the same time with new alkaline batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Avoid exposing the remote to extreme temperatures, humidity, or direct sunlight.

5. TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common solutions:

- **Remote not responding:**
 - Ensure the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new alkaline batteries.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Ensure you are within the effective operating range (approximately 8-10 meters) and pointing the remote directly at the TV.
- **Some buttons not working:**
 - This may indicate low battery power. Replace batteries.
 - Ensure the remote is clean and there is no debris stuck under the buttons.
- **Remote works intermittently:**
 - Check battery connections; they might be loose.
 - Replace batteries.
 - Minimize interference from other electronic devices.

If the issue persists after trying these steps, please contact customer support.

6. SPECIFICATIONS

Feature	Detail
Brand	Beyution
Model Number	AKB33871409
Connectivity Technology	Infrared (IR)
Compatible Devices	LG LCD LED TVs (Specific models listed in Section 3.1)
Batteries Required	2 x AAA (Alkaline recommended)
Product Dimensions	5 x 1 x 0.6 inches (approx. 12.7 x 2.54 x 1.52 cm)
Item Weight	1 ounce (approx. 28.35 grams)
Color	Black
Special Feature	Ergonomic design

PRODUCT SIZE



Figure 4: Product Size. This image provides a visual representation of the remote control's dimensions, showing its length and width.

7. WARRANTY AND SUPPORT

Beyution stands behind the quality of its products.

7.1 Warranty Information

This product comes with a **1-year return policy**. If you encounter any issues or are not satisfied with your purchase within this period, please contact us for assistance.

7.2 Customer Support

For any questions, concerns, or technical assistance, please do not hesitate to contact our customer support team. We aim to provide a satisfactory answer within 24 hours.

Please refer to your purchase documentation or the seller's contact information for specific support channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question