

[Manuals.plus](#) /

› [BrickSoul](#) /

› BrickSoul Advanced RC Light Kit Instruction Manual for LEGO 21351 Tim Burton's Nightmare Before Christmas Building Set

BrickSoul BS-21351-rc

BrickSoul Advanced RC Light Kit Instruction Manual for LEGO 21351 Tim Burton's Nightmare Before Christmas Building Set

Model: BS-21351-rc

INTRODUCTION

This instruction manual provides detailed guidance for the installation, operation, and maintenance of your BrickSoul Advanced RC Light Kit, specifically designed for the LEGO 21351 Tim Burton's Nightmare Before Christmas Building Set. Please read this manual thoroughly before beginning installation to ensure proper setup and optimal performance of your lighting kit.



Image: The LEGO 21351 Tim Burton's Nightmare Before Christmas Building Set fully illuminated with the BrickSoul Advanced RC Light Kit, showcasing various colored lights and effects.

Safety Information

Observe the following safety precautions to prevent damage to the product or injury:

- This product is intended for users aged 14 and up. Keep small components away from young children to avoid choking hazards.
- The light kit operates on a stable 5V low-voltage power supply. Do not connect to higher voltage sources.
- Ensure all connections are secure before powering on the kit. Loose connections can cause malfunctions.
- Do not expose the components to water or excessive moisture.
- Avoid bending or pulling wires excessively, as this can damage the internal conductors.
- If any component is damaged, discontinue use and contact customer support.

Package Contents

Verify that all components are present in your BrickSoul Advanced RC Light Kit package:

- BrickSoul LED Light Kit for LEGO 21351
- Remote Control for wireless brightness adjustment, multi-zone lighting control, and dynamic flash modes
- USB Power Cable (Power adapter not included)
- Battery Box (Requires 3 AA batteries, not included)
- Installation Guide (Digital instructions only)

Light Kit Only – Not Model Package Include:



Light Control Button



Light kits



Instructions for Use



Battery Box
AAA not included

Image: Contents of the BrickSoul light kit package, including the remote control, light kits, instructions, and battery box.

SETUP AND INSTALLATION

The BrickSoul light kit is designed for easy and enjoyable assembly. Follow the digital instructions for a smooth installation process.

1. Accessing Digital Instructions

This kit utilizes digital instructions to provide the most up-to-date and detailed guidance. No paper manual is included.

- Scan the QR code provided on the packaging or included card.
- Alternatively, visit the BrickSoul website and input the product model number (BS-21351-rc) to find the specific PDF or video instructions.

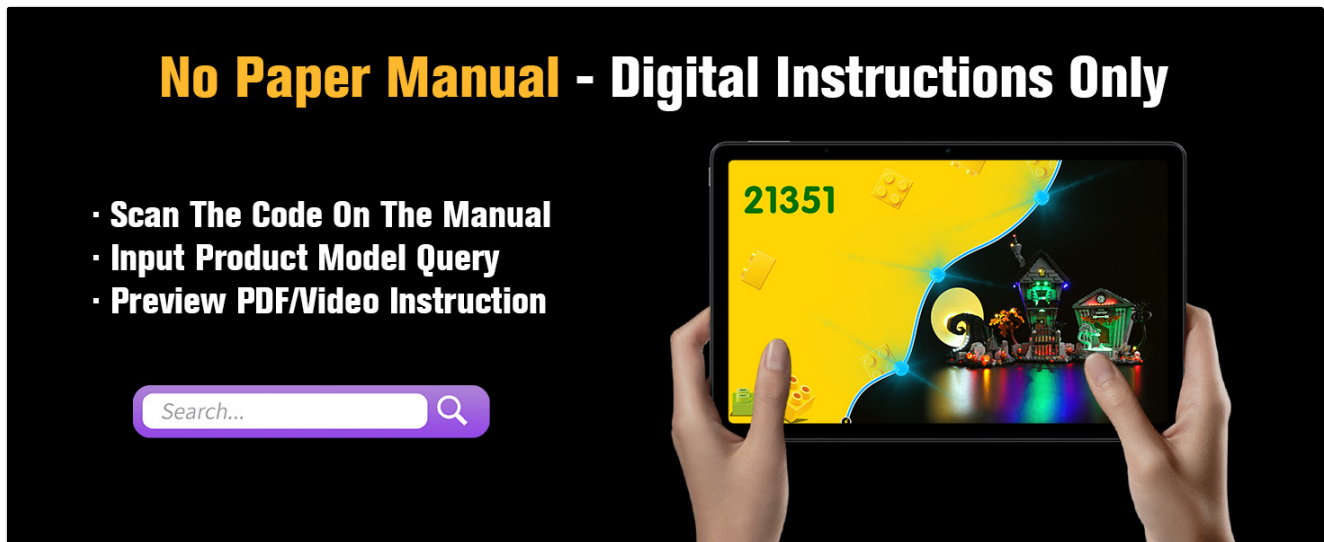


Image: Illustration showing how to access digital instructions via QR code or product model query.

2. Pre-Installation

- Ensure your LEGO 21351 set is fully assembled and stable before installing the light kit.
- Organize the numbered light bags according to the digital instructions.

3. Wiring and Component Placement

The kit features upgraded hidden cable technology with pre-measured spacing to integrate wires seamlessly into the LEGO structure. Follow the digital instructions carefully for precise placement of each light and wire.

- Connect the small light components to the main circuit board using the snap-on connectors.
- Route wires through designated channels and under LEGO bricks as indicated in the instructions to maintain a clean appearance.
- Ensure wires are not pinched or stressed during installation.

New Upgrade, Better Than Others

Why BrickSoul Beats the Rest?

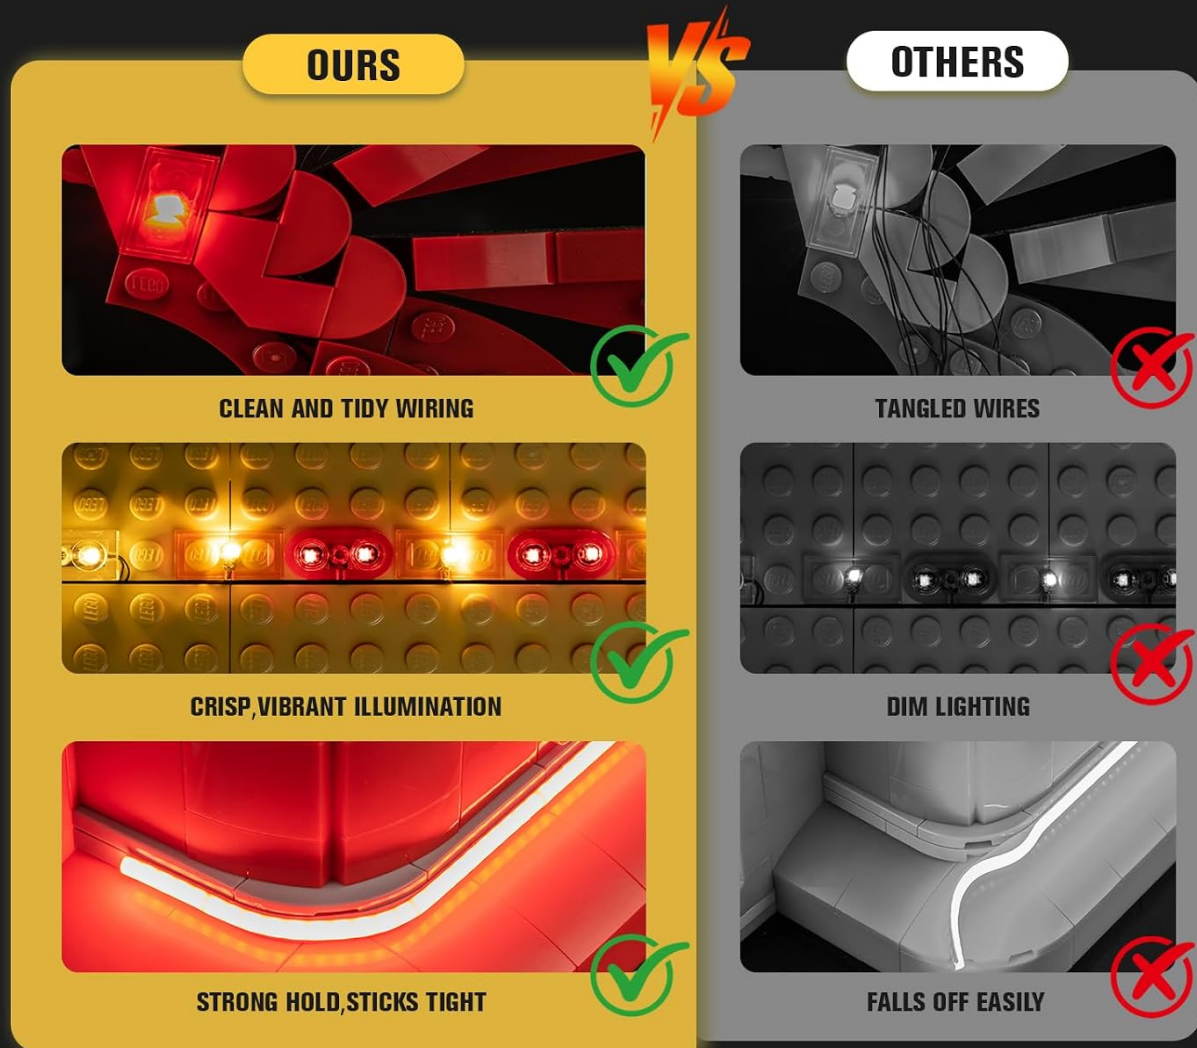


Image: A comparison illustrating the clean and tidy wiring of the BrickSoul kit versus tangled wires from other kits, highlighting the hidden cable technology.

4. Power Options

The light kit offers flexible power options:

- **USB Power:** Connect the included USB cable to a 5V USB power adapter (not included) or a USB power bank.
- **Battery Power:** Insert 3 AA batteries (not included) into the battery box and connect it to the light kit.

Choose the power option that best suits your display needs.

OPERATING INSTRUCTIONS

Your BrickSoul light kit features an upgraded remote control for convenient operation.

Remote Control Functions



Image: Diagram illustrating the functions of the remote control, including ON/OFF, brightness adjustment, and lighting modes.

- **Power ON/OFF:** Press the **ON/OFF** button to toggle the lights.
- **Brightness Adjustment:** Use the **Dimmer** buttons to increase or decrease the light intensity (0% to 100%).
- **Lighting Modes:** Cycle through various dynamic flash modes and static lighting options using the **Mode** buttons.
- **Zonal Lighting Control:** The remote allows for control of different lighting zones within the LEGO set, as detailed in the digital instructions.

Adjust Light Modes and Brightness by Remote

Light Kit Only – Model Not Included



Image: Visual representation of adjusting light brightness from 0% to 100% using the remote control, along with icons for ON/OFF, lighting modes, and remote control functionality.

Demonstration Video

Watch this video to see the BrickSoul light kit in action, showcasing its various lighting effects and features on the LEGO 21351 set.

Your browser does not support the video tag.

Video: A demonstration of the BrickSoul LED Light Kit for LEGO 21351, showcasing the illuminated set with various lighting effects and details.

MAINTENANCE

To ensure the longevity and optimal performance of your light kit, follow these maintenance guidelines:

- **Cleaning:** Gently wipe the LED components and wires with a dry, soft cloth to remove dust. Do not use liquid cleaners.
- **Storage:** If storing the LEGO set with the light kit installed, ensure it is kept in a dry, cool place away from

direct sunlight.

- **Battery Replacement:** If using the battery box, replace all 3 AA batteries simultaneously when lights dim or stop working. Do not mix old and new batteries.

TROUBLESHOOTING

If you encounter any issues with your BrickSoul light kit, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lights do not turn on.	No power, loose connection, dead batteries.	Check power source (USB or batteries). Ensure all connectors are firmly seated. Replace batteries if using the battery box.
Some lights are not working.	Loose connection to specific light, damaged LED.	Inspect connections for the non-working lights. If a light is damaged, contact customer support for replacement.
Remote control is unresponsive.	Dead remote battery, obstruction, out of range.	Replace the remote control battery. Ensure no obstructions between remote and receiver. Operate within recommended range.
Lights are dim or flickering.	Low battery power, insufficient power supply.	Replace batteries or use a more powerful USB adapter.

If the issue persists after attempting these solutions, please refer to the online digital instructions or contact BrickSoul customer support.

SPECIFICATIONS

- **Model Name:** BS-21351-rc
- **Brand:** BrickSoul
- **Compatibility:** LEGO 21351 Tim Burton's Nightmare Before Christmas Building Set
- **Control Method:** Remote Control (Wireless ON/OFF, Dimming, Zonal Lighting, Dynamic Flash Modes)
- **Light Source Type:** LED
- **Voltage:** 5 Volts
- **Power Options:** USB (5V adapter not included) or Battery Box (3 AA batteries not included)
- **Material:** Plastic
- **Item Weight:** Approximately 4.8 ounces (0.3 Pounds)
- **Product Dimensions:** 6 x 5 x 1.2 inches (packaging)
- **Recommended Age:** 14+ years
- **UPC:** 744173497143

WARRANTY AND CUSTOMER SUPPORT

BrickSoul is committed to customer satisfaction. Your light kit comes with responsive customer support to address any questions or concerns.

- **Support:** For assistance, troubleshooting, or inquiries, please contact BrickSoul customer support through the retailer's platform or the official BrickSoul website.
- **Replacements:** In case of damaged or defective components, BrickSoul offers free and fast replacements.

We aim to provide an exceptional experience and ensure your illuminated LEGO set brings joy and impressive display.

© 2026 BrickSoul. All rights reserved. LEGO is a trademark of the LEGO Group, which does not sponsor, authorize or endorse this product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DT436C6T>

More documents and user manuals: <https://manuals.plus/>