

[Manuals.plus](#) /

› [Smoby](#) /

› Smoby Life Mud Kitchen Game Instruction Manual - Model 7600840208

Smoby 7600840208


Smoby Life Mud Kitchen Game Instruction Manual

Model: 7600840208

INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your Smoby Life Mud Kitchen Game. Please read these instructions carefully before use and retain them for future reference.

The Smoby Life Mud Kitchen is designed for creative outdoor play, allowing children to engage in imaginative cooking activities using natural elements like sand, soil, flowers, and pebbles. It features a durable, anti-UV treated, and easy-to-clean recycled plastic construction.

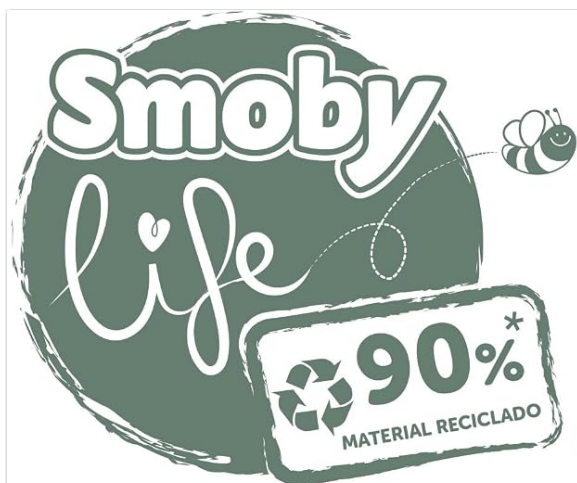

★ Este juguete contiene al menos un 90% de material reciclado

Image: The Smoby Life Mud Kitchen Game, fully assembled with various accessories, ready for play.

SAFETY INFORMATION

- **WARNING:** Not suitable for children under 3 years (36 months) due to small parts. Choking hazard.
- Adult supervision is recommended during play.
- Ensure the kitchen is placed on a stable, level surface to prevent tipping.
- Regularly inspect the product for any damage or loose parts. Discontinue use if damage is found.
- This product is intended for outdoor use.

PACKAGE CONTENTS

The Smoby Life Mud Kitchen Game package includes:

- 1 x Smoby Life Mud Kitchen structure
- 11 x Accessories (e.g., pot, ladle, pestle, sieve, basket, shovel, rake, bins, removable trays)

15



accesorios

Image: A selection of the 11 accessories provided with the mud kitchen, including a pot, ladle, and various containers.

SETUP AND ASSEMBLY

Assembly of the Smoby Life Mud Kitchen is designed to be straightforward. Follow these steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all listed components are present.
2. **Assemble Main Structure:** Connect the main worktop to the support legs. Ensure all connections are secure.
3. **Attach Pediment and Bins:** Secure the pediment (back panel) to the main structure. Attach the small bins to the designated hanging points on the pediment or other parts of the structure.
4. **Place Accessories:** Position the 11 accessories, such as the removable trays, pot, ladle, and sieve, in their respective places on the kitchen.

No complex tools are typically required for assembly. Refer to the included graphical instructions for detailed visual

guidance if available.

OPERATING INSTRUCTIONS

The Smoby Life Mud Kitchen encourages imaginative and sensory play. Here's how to maximize the play experience:

1. **Gather Natural Elements:** Use the provided basket, shovel, and rake to collect natural materials like sand, soil, leaves, flowers, or small pebbles from your garden or outdoor area.
2. **Organize Ingredients:** Utilize the three small bins to sort and organize your collected "ingredients." These bins can be hung on the pediment or other parts of the kitchen structure.
3. **Prepare Dishes:** Use the main worktop, which includes two large removable trays, for mixing and preparing your mud creations.
4. **Water Supply:** Fill the 1-liter water tank with water to enable realistic mixing and pouring activities.
5. **Cooking Area:** The kitchen features a dedicated cooking area. The lid can be positioned on this area or on one of the large bins to expand the workspace or store accessories.
6. **Utilize Accessories:** Employ the pot, ladle, and pestle to vary preparations and mimic real cooking. The sieve can be used to sort materials or as a frame for displaying flowers.



Image: Two children actively engaged in imaginative play with the mud kitchen, using various accessories to mix and prepare natural elements.



Image: A child using the sieve accessory to sort flowers and other natural items on the mud kitchen's worktop.



Image: A child and an adult interacting with the Smoby Life Mud Kitchen, demonstrating collaborative play.

MAINTENANCE

To ensure the longevity and hygiene of your Smoby Life Mud Kitchen, follow these maintenance guidelines:

- **Cleaning:** The kitchen is made from recycled plastic and is designed for easy cleaning. Simply hose down the entire unit with water after use to remove mud, sand, and debris. Mild soap can be used for stubborn dirt.
- **Drying:** Allow the kitchen to air dry completely before storing, especially if storing indoors, to prevent mold or mildew.
- **Inspection:** Periodically check all parts for wear and tear, cracks, or loose connections. Tighten any loose fasteners.
- **Storage:** While resistant to external conditions, storing the kitchen in a sheltered area during extreme weather or prolonged periods of non-use can extend its lifespan.

TROUBLESHOOTING

This section addresses common issues you might encounter with your Smoby Life Mud Kitchen.

Problem	Possible Cause	Solution
Kitchen feels unstable after assembly.	Loose connections or uneven ground.	Ensure all assembly points are securely fastened. Move the kitchen to a flat, level surface.
Accessories are missing or damaged.	Packaging error or damage during transit.	Check packaging thoroughly. Contact Smoby customer support for replacement parts.
Water tank leaks.	Improper installation or damage to the tank.	Ensure the tank is correctly seated. Inspect for cracks. If damaged, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	7600840208
Product Dimensions (L x W x H)	28.35 x 38.98 x 14.17 inches (72 x 99 x 36 cm)
Item Weight	9.7 pounds (4.4 kg)
Recommended Age	36 months - 3 years (3 years and above)
Material	Recycled Plastic, Anti-UV Treated
Accessories Included	11
Water Tank Capacity	1 liter
Manufacturer	SMOBY

 


Image: Technical diagram illustrating the dimensions of the Smoby Life Mud Kitchen: 99 cm height, 72 cm width, and 36 cm depth.

WARRANTY AND SUPPORT

For warranty information, replacement parts, or further assistance, please contact Smoby customer support directly. Refer to the product packaging or the official Smoby website for contact details.

Manufacturer: SMOBY