

[Manuals.plus](#) /

> [CuisinSmart](#) /

> CuisinSmart Large Outdoor Dog Kennel Instruction Manual (Model DEue9GCN4Vktx1OseldnHQVrrmEc4)

CuisinSmart DEue9GCN4Vktx1OseldnHQVrrmEc4

CuisinSmart Large Outdoor Dog Kennel Instruction Manual

Model: DEue9GCN4Vktx1OseldnHQVrrmEc4

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your CuisinSmart Large Outdoor Dog Kennel. Please read this manual thoroughly before assembly and use to ensure proper setup and safe operation. Keep this manual for future reference.



Figure 1: CuisinSmart Large Outdoor Dog Kennel assembled on a patio. This image shows the fully assembled CuisinSmart Large Outdoor Dog Kennel, featuring its robust metal frame, waterproof roof cover, and integrated feeding door. The kennel is designed for outdoor use, providing a secure and comfortable space for pets.

2. SAFETY GUIDELINES

- Always ensure all connections and bolts are securely tightened before placing pets inside the kennel.
- Regularly inspect the kennel for any signs of wear, damage, or loose components. Repair or replace damaged parts immediately.
- Position the kennel on a flat, stable surface to prevent tipping.
- Do not allow children to play unsupervised near or inside the kennel.
- Ensure adequate ventilation, especially during hot weather.
- The waterproof cover provides protection from sun and rain; however, do not rely on it for extreme weather conditions.
- This kennel is designed for pets. Do not use it for purposes other than its intended use.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, contact customer support.

- Galvanized Iron Pipe Panels (various sizes for sides, door, and roof frame)
- Waterproof and Anti-UV Cover
- Feeding Door Assembly with Latch
- Stainless Steel Feeding Bowls (2)
- Connection Hardware (bolts, nuts, washers)
- Strong Straps for Cover Attachment
- Divider (if applicable to your specific model configuration)
- Assembly Tools (e.g., wrench, if included)



Figure 2: Key components of the kennel. This image provides detailed views of the kennel's essential components: a stainless steel feeding bowl, a stable metal base for durability, strong straps for securing the cover, and a robust door lock design for enhanced security.

4. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	CuisinSmart
Model Number	DEue9GCN4Vktx1OseldnHQVrrmEc4
Material	Galvanized Iron Pipe
Overall Dimensions (L x W x H)	300 x 300 x 180.01 cm (approx. 10 x 10 x 7 ft)
Feeding Door Dimensions (L x W)	46 x 25 cm (approx. 18.11 x 9.84 inches)
Weight	65.5 kg
Specific Use	Outdoor
Special Feature	Durable, Waterproof Cover

PRODUCT DIMENSIONS



Figure 3: Dimensions of the CuisinSmart Large Outdoor Dog Kennel. This diagram illustrates the key dimensions of the CuisinSmart Large Outdoor Dog Kennel. The overall dimensions are 118.11 inches (300 cm) in length and width, and 70.87 inches (180 cm) in height. The feeding door measures 18.11 inches (46 cm) in length and 9.84 inches (25 cm) in width.

5. ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your CuisinSmart Large Outdoor Dog Kennel. It is recommended to have at least two people for assembly.

5.1 Prepare the Area

1. Choose a flat, level, and stable outdoor location for the kennel.
2. Clear the area of any debris or obstacles.
3. Unpack all components and lay them out, verifying against the package contents list.

5.2 Assemble the Base Frame

1. Connect the bottom horizontal pipe sections using the provided connectors and hardware to form the rectangular base of the kennel. Do not fully tighten bolts until all panels are in place.

5.3 Attach Side Panels

1. Attach the vertical side panels to the base frame using the appropriate hardware. Ensure the panels are oriented correctly.
2. Connect adjacent side panels to each other.

5.4 Install Door Panel

1. Integrate the door panel, which includes the main access door and the feeding door, into one of the side sections. Ensure the hinges are correctly aligned and the latch mechanism can operate freely.
2. Attach the top horizontal pipe sections to connect the upper parts of the panels, forming the top frame.

5.5 Secure the Roof Frame and Cover

1. Assemble the roof frame components and place them on top of the assembled kennel structure.
2. Drape the waterproof and anti-UV cover over the roof frame.
3. Secure the cover to the kennel frame using the strong straps provided, ensuring it is taut and evenly distributed to prevent water pooling.

WATERPROOF AND ANTI-UV COVER

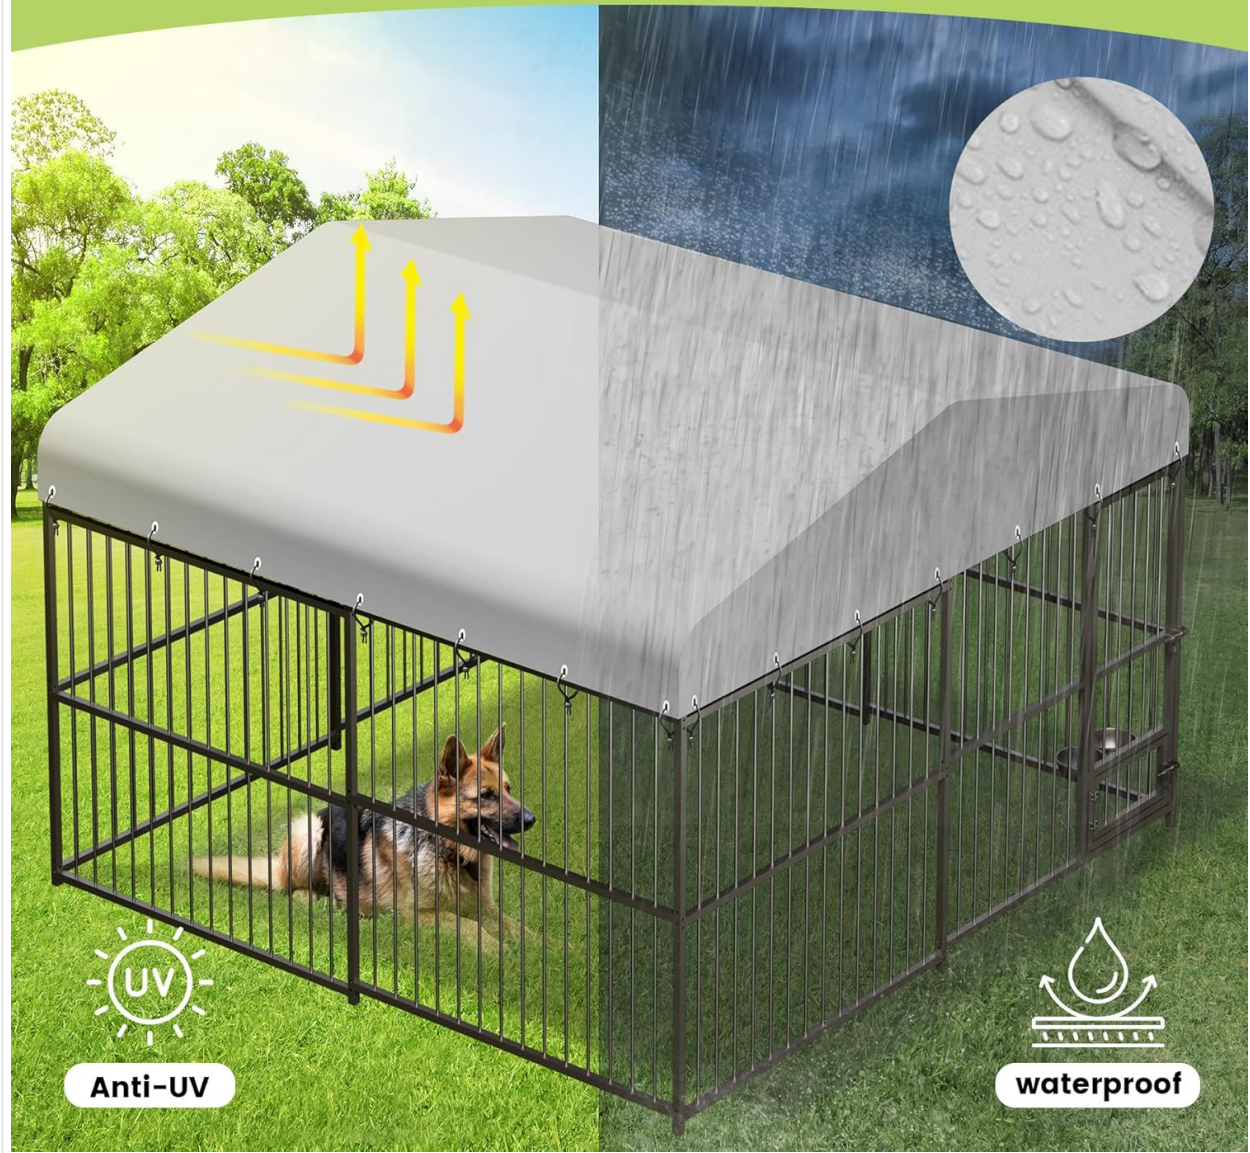


Figure 4: Waterproof and Anti-UV Cover. This diagram highlights the protective features of the kennel's cover, showing its ability to repel rain and block harmful UV rays, ensuring pets are protected from various weather conditions.

5.6 Final Tightening and Inspection

1. Once all panels and the roof are in place, systematically tighten all bolts and connections. Avoid over-tightening, which can warp the metal.
2. Install the stainless steel feeding bowls into the designated holders on the feeding door.
3. Perform a final inspection to ensure stability, security, and proper function of all doors and latches.

6. OPERATING INSTRUCTIONS

6.1 Main Access Door

- To open the main door, slide the latch mechanism and pull the door outwards.
- To close, push the door shut and ensure the latch engages securely.

6.2 Feeding Door

- The smaller feeding door allows for easy access to food and water bowls without opening the main door.

- Unlatch the feeding door, swing it open, and place or remove the stainless steel bowls.
- Always ensure the feeding door is securely latched after use to prevent pets from escaping or predators from entering.



Figure 5: Pets utilizing the kennel. Two Rottweiler dogs are shown comfortably inside the CuisinSmart Large Outdoor Dog Kennel, highlighting the spacious interior suitable for large breeds. The image also shows the feeding door with bowls.

7. MAINTENANCE

7.1 Cleaning

- Regularly clean the kennel frame and floor with mild soap and water. Rinse thoroughly and allow to dry completely.
- The waterproof cover can be wiped clean with a damp cloth. Avoid harsh chemicals that may damage the material.
- Clean the stainless steel feeding bowls daily.

7.2 Inspection

- Periodically check all bolts and connections for tightness. Re-tighten as necessary.
- Inspect the metal frame for any signs of rust or damage. Address any issues promptly to maintain structural integrity.
- Examine the waterproof cover for tears or punctures. Small repairs can extend the life of the cover.

8. TROUBLESHOOTING

8.1 Latch Not Aligning

- If the door latch does not align properly, check the assembly of the door panel. Ensure it is installed level and that all connecting bolts are not over-tightened, which can cause slight warping.
- Adjust the position of the latch bar if possible, or slightly loosen and re-tighten the panel bolts to allow for minor adjustments in alignment.

8.2 Kennel Appears Flimsy or Unstable

- Ensure all bolts throughout the entire structure are securely tightened. Loose connections are the primary cause of instability.
- Verify that the kennel is placed on a completely flat and level surface. Uneven ground can cause the structure to wobble.
- Avoid over-tightening bolts to the point of bending the metal rods, as this can compromise structural integrity. Tighten firmly but carefully.

9. WARRANTY INFORMATION

Warranty information for the CuisinSmart Large Outdoor Dog Kennel is not provided within this instruction manual. Please refer to your purchase documentation or contact the retailer for details regarding warranty coverage.

10. CUSTOMER SUPPORT

For further assistance, missing parts, or inquiries not covered in this manual, please contact your retailer or the manufacturer, CuisinSmart, directly. Contact information may be available on your purchase receipt or the product packaging.