

[Manuals.plus](#) /

› [Our Place](#) /

› Our Place Large Wonder Oven 6-in-1 Air Fryer & Toaster Oven User Manual

Our Place APL.LWO.ESN.BLU

Our Place Large Wonder Oven User Manual

MODEL: APL.LWO.ESN.BLU

6-in-1 Air Fryer & Toaster Oven

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs. Always use oven mitts or potholders when handling hot materials.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- Always ensure proper ventilation around the oven. Do not block any ventilation openings.
- Do not place any materials other than manufacturer-recommended accessories in the oven.


What's in the Box

Your Our Place Large Wonder Oven package includes the following components:

- Large Wonder Oven Unit
- Large Air Fry Basket
- Large Baking Pan
- Large Wire Rack (2 included)

- Large Crumb Tray

Explore What's Included

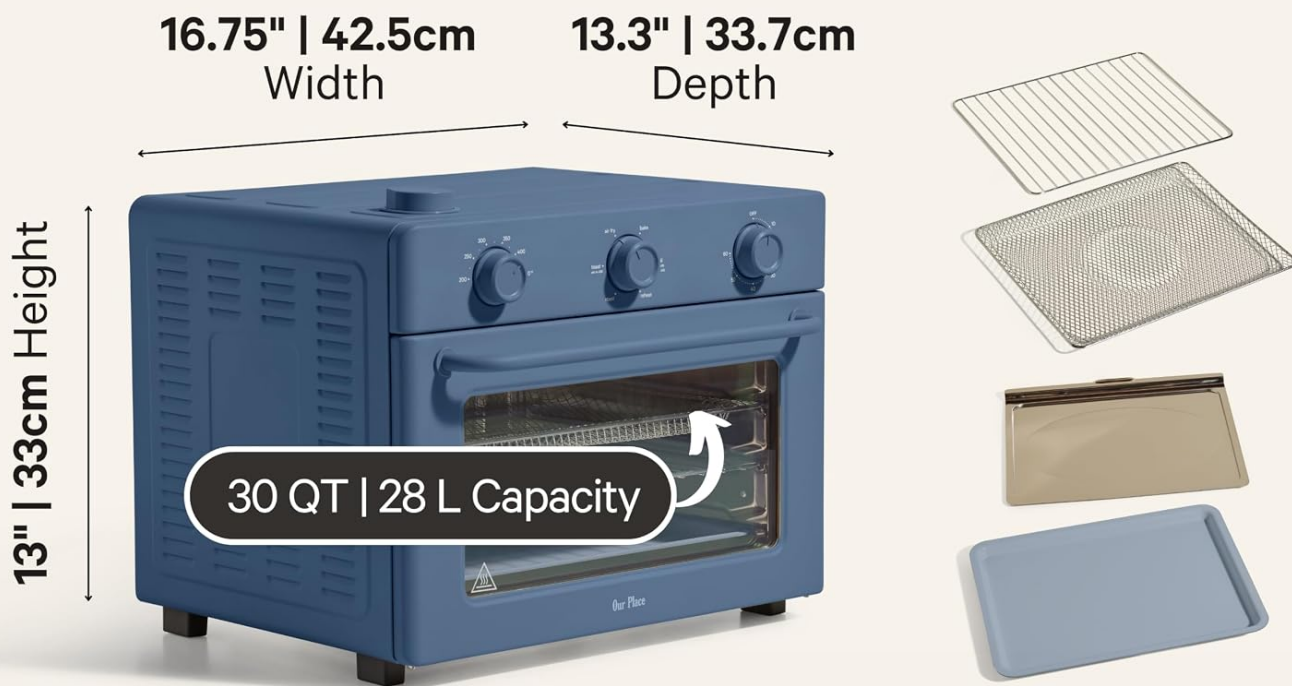

Large Wonder Oven

1 Large Bake Tray

2 Large Wire Racks

1 Large Air Fryer Basket

1 Large Crumb Tray

Image: The Our Place Large Wonder Oven displayed with all its included accessories, highlighting the comprehensive set for various cooking needs.

Product Overview

The Our Place Large Wonder Oven is a versatile 6-in-1 appliance designed to simplify your cooking. It combines the functions of an air fryer, toaster oven, roaster, baker, broiler, and reheater, all in one compact unit. Featuring a spacious 30-quart interior with three cooking levels, it can accommodate family-sized meals.

Key Features:

- **6-in-1 Versatility:** Air Fry, Bake, Roast, Toast, Broil, Reheat.
- **Family-Sized Capacity:** 30-quart interior fits a 12-inch pizza or whole chicken.
- **Multilevel Cooking:** Three rack positions for cooking multiple dishes simultaneously.
- **Steam Infusion Technology:** Add 1-2 teaspoons of water to refresh food and enhance moisture.

- **360° Convection System:** Ensures consistent, even cooking and browning.

Control Panel:

The oven features three intuitive control knobs:

- **Temperature Knob:** Adjusts cooking temperature from 200°F to 450°F.
- **Mode Knob:** Selects the desired cooking function (Air Fry, Bake, Roast, Toast, Broil, Reheat).
- **Timer Knob:** Sets the cooking time from 0 to 60 minutes.



Image: A detailed view of the oven's mode selection knob, illustrating the six available cooking functions.

Preheats 75% Faster Cooks 30% Faster

*Than traditional ovens**



Image: A close-up of the oven's three control knobs, indicating temperature settings up to 450°F, six cooking modes, and a 0-60 minute timer.

Your browser does not support the video tag.

Video: An official product video from Our Place introducing the Wonder Oven and its key features and capabilities.

Setup

Unpacking:

1. Carefully remove the oven and all accessories from the packaging.
2. Remove any protective films, stickers, or packing materials from the oven and its accessories.
3. Inspect the oven for any signs of damage. Do not use if damaged.

Placement:

1. Place the oven on a stable, level, and heat-resistant surface.
2. Ensure there is at least 4 inches (10 cm) of clear space on all sides (back, sides, and top) of the oven for proper air circulation. Do not place directly against a wall or under cabinets.
3. Do not place the oven near flammable materials or heat sources.

Before First Use (Burn-Off Cycle):

It is recommended to run a burn-off cycle before using your oven for the first time to eliminate any manufacturing odors.

1. Wipe down the interior of the oven and all accessories with a damp cloth and mild detergent, then dry thoroughly.
2. Place the crumb tray in the lowest position.
3. Plug the oven into a grounded electrical outlet.
4. Turn the Mode knob to **Bake**.
5. Turn the Temperature knob to **400°F (200°C)**.
6. Turn the Timer knob to **15-20 minutes**.
7. Allow the oven to run through the cycle. Some smoke or odor is normal during this process. Ensure the area is well-ventilated.
8. Once the cycle is complete, unplug the oven and let it cool completely before use.

Operating Instructions

Always preheat the oven for best results, typically for 5-10 minutes, depending on the selected temperature and mode.

General Operation:

1. Place food on the appropriate accessory (bake pan, wire rack, or air fry basket).
2. Insert the accessory into the desired rack position inside the oven.
3. Close the oven door.
4. Turn the **Mode** knob to select your desired cooking function.
5. Turn the **Temperature** knob to set the desired cooking temperature.
6. Turn the **Timer** knob to set the desired cooking time. The oven will begin heating.
7. The oven will automatically turn off when the timer expires.

Cooking Modes:

- **Air Fry:** Ideal for achieving crispy results with minimal oil. Use the Air Fry Basket. Recommended for fries, chicken wings, and vegetables.
- **Bake:** For traditional oven cooking. Use the Bake Pan or Wire Rack. Perfect for cakes, cookies, casseroles, and bread.
- **Roast:** For cooking meats and vegetables to tender perfection. Use the Bake Pan or Wire Rack.
- **Toast:** For toasting bread, bagels, and waffles. Use the Wire Rack. Adjust time for desired browning.
- **Broil:** For browning the top of dishes, melting cheese, or cooking thin cuts of meat. Place food on the Wire Rack closer to the top heating element. Monitor closely to prevent burning.
- **Reheat:** For warming up leftovers. Use the Bake Pan or Wire Rack.

Steam Infusion Technology:

To use the steam infusion feature, add 1-2 teaspoons of water into the designated reservoir on the top of the oven. This feature helps to refresh stale bread, reheat leftovers without drying them out, and can contribute to juicier cooking results.

Steam-Infused Technology

Bring leftovers back to life in minutes



Image: Demonstrates the steam infusion process, showing water being added to the oven's reservoir and the resulting moist texture of food.

Family-Sized Multi-Level Cooking

Food releases easily and cleanup takes seconds, thanks to a smooth ceramic interior designed for everyday cooking

Three Racks. Zero Waiting.

Full-Tray Air Fry Performance

Image: The oven in use, demonstrating its family-sized capacity and ability to cook multiple dishes on three different levels simultaneously.

Maintenance and Cleaning

Regular cleaning will help maintain the performance and appearance of your Our Place Large Wonder Oven.

1. Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
2. **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
3. **Interior:** Wipe the interior walls with a soft, damp cloth and a mild detergent. For stubborn stains, a non-abrasive cleaner designed for oven interiors can be used. Ensure all cleaner residue is wiped away.
4. **Glass Door:** Clean the glass door with a soft cloth and a glass cleaner or mild detergent.
5. **Accessories (Bake Pan, Wire Rack, Air Fry Basket):** Wash these accessories in warm, soapy water. They are not dishwasher safe. Rinse thoroughly and dry completely before storing or reusing.
6. **Crumb Tray:** The crumb tray should be removed and emptied regularly to prevent grease buildup and potential fire.

hazards. Wash it in warm, soapy water, rinse, and dry thoroughly.

7. Never immerse the main oven unit, cord, or plug in water or any other liquid.

Troubleshooting

If you encounter any issues with your oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet not working; timer not set.	Ensure the power cord is securely plugged into a working outlet. Set the timer.
Food not cooking evenly.	Oven not preheated; food overcrowded; incorrect rack position.	Preheat the oven. Do not overcrowd the basket/pan. Use recommended rack positions. Flip or rotate food halfway through cooking.
Excessive smoke from oven.	Food residue or grease buildup; very fatty food.	Clean the oven interior and accessories thoroughly. Use less oil or trim excess fat from food. Ensure crumb tray is clean.
Odor during first use.	Normal manufacturing residue burn-off.	This is normal. Ensure good ventilation during the first few uses. The odor will dissipate.

If the problem persists after trying these solutions, please contact Our Place customer support.

Specifications

Feature	Detail
Brand	Our Place
Model Name	Large Wonder Oven
Model Number	APL.LWO.ESN.BLU
Capacity	30 Quarts
Product Dimensions (D x W x H)	13.25"D x 16.75"W x 13"H
Wattage	1700 watts
Temperature Range	200°F to 450°F
Control Type	Knob Control
Number of Shelves	3
Item Weight	17.5 pounds
Included Components	Large Wonder Oven, Air Fry Basket, Baking Pan, Crumb Tray, Wire Rack (x2)
Material	Stainless Steel, Tempered Glass

Warranty and Support

For detailed warranty information, product registration, or to contact customer support, please visit the official Our Place website or refer to the warranty card included with your product.

You can also visit the Our Place store on Amazon for more information and products:[Our Place Amazon Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question