

[Manuals.plus](#) /

› [Skechers](#) /

› Skechers SR1186 Whitfield Digital Watch User Manual

Skechers SR1186

Skechers SR1186 Whitfield Digital Watch User Manual

Model: SR1186

1. INTRODUCTION

Thank you for choosing the Skechers SR1186 Whitfield Digital Watch. This manual provides essential information for the proper setup, operation, and maintenance of your watch. Please read these instructions carefully to ensure optimal performance and longevity of your timepiece.



Figure 1: Front view of the Skechers SR1186 Whitfield Digital Watch.

2. PRODUCT FEATURES

- **Model:** SR1186
- **Case:** 45mm barrel-shaped polycarbonate case.
- **Display:** Digital movement with a negative display dial for clear visibility.
- **Strap:** 18mm wide green polyurethane band with a buckle clasp.
- **Crystal:** Durable acrylic crystal.
- **Water Resistance:** Rated for 100 meters (330 feet), suitable for bathing, swimming, or shallow diving.
- **Battery:** 1 x LR44 battery (included).







Figure 2: Detail of the watch's buckle clasp.

3. SETUP INSTRUCTIONS

3.1 Setting Time and Date

1. Press the **MODE** button repeatedly until the time setting mode is displayed (usually indicated by flashing digits).
2. Use the **START/STOP** button to adjust the flashing digit (hours, minutes, year, month, day).
3. Press the **RESET** button to move to the next setting item.
4. Once all settings are correct, press the **MODE** button to exit the setting mode.

3.2 Setting the Alarm

1. Press the **MODE** button until the alarm display appears.
2. Press the **RESET** button to activate the alarm setting. The hour digits will flash.
3. Use the **START/STOP** button to set the desired hour.
4. Press **RESET** to move to the minute setting, then use **START/STOP** to set the minutes.
5. Press **MODE** to confirm and exit.

4. OPERATING INSTRUCTIONS

4.1 Button Functions





Figure 3: Side view illustrating the watch's control buttons.

- **LIGHT Button:** Activates the backlight for improved visibility in low-light conditions.
- **MODE Button:** Cycles through different display modes (Time, Alarm, Chronograph/Timer).
- **START/STOP Button:** Used to start and stop the chronograph, or to adjust values during setting modes.
- **RESET Button:** Used to reset the chronograph, or to confirm selections during setting modes.

4.2 Using the Chronograph (Stopwatch)

1. Press the **MODE** button until the chronograph display appears (usually showing "00:00:00").
2. Press the **START/STOP** button to begin timing.
3. Press **START/STOP** again to pause the timing.

4. Press **RESET** to clear the chronograph to zero.

4.3 Water Resistance Guidelines

Your Skechers SR1186 watch is water resistant up to 100 meters (10 ATM). This means it is suitable for:

- Daily use and accidental splashes.
- Showering and bathing.
- Swimming in pools or open water.
- Shallow diving.

Important: Do not operate the watch buttons while submerged in water, as this can compromise the water resistance seal.

5. MAINTENANCE

5.1 Cleaning Your Watch

To maintain the appearance of your watch, wipe the case and strap regularly with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, which can damage the watch's finish.

5.2 Battery Replacement

The watch uses one LR44 battery. When the display becomes dim or the watch stops functioning, it is time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure the water resistance seal is properly maintained.

5.3 Strap Care

The polyurethane strap is durable but can be affected by prolonged exposure to direct sunlight, extreme temperatures, or harsh chemicals. Clean the strap with mild soap and water, and allow it to air dry completely.

6. TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery as described in the Maintenance section.
- **Time is incorrect:** Reset the time and date according to the instructions in the Setup section. Ensure the correct AM/PM setting is selected.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, refer to specific model features). If the issue persists, a battery replacement or professional inspection may be required.
- **Water inside the watch:** If condensation or water appears inside the watch, stop using it immediately and have it inspected by a professional to prevent further damage.

7. SPECIFICATIONS

Model Number	SR1186
Case Diameter	45 mm
Case Material	Polycarbonate

Band Width	18 mm
Band Material	Polyurethane
Band Color	Green
Display Type	Digital (Negative Display)
Movement Type	Quartz
Crystal Material	Acrylic
Water Resistance	100 Meters (10 ATM)
Clasp Type	Buckle
Battery Type	1 x LR44 (included)

8. WARRANTY AND SUPPORT

Your Skechers SR1186 Whitfield Digital Watch comes with a limited warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support or warranty claims, please contact Skechers customer service through their official website or authorized retailers.

For more information, you may visit the [Skechers Watches Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question