

Skechers SR1187

Skechers Men's Whitfield Digital Watch SR1187

Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the proper use and care of your Skechers Men's Whitfield Digital Watch, Model SR1187. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. Keep this manual for future reference.

2. SAFETY INFORMATION

- **Water Resistance:** This watch is water resistant up to 100 meters (10 ATM). It is suitable for bathing, swimming, or snorkeling. Do not press any buttons while the watch is submerged in water. Avoid exposing the watch to extreme temperature changes, as this can compromise the water resistance seals.
- **Battery:** The watch uses one LR44 battery. Do not attempt to open the watch case or replace the battery yourself, as this may damage the watch and void the warranty. Battery replacement should be performed by a qualified technician.
- **Cleaning:** Use a soft, dry cloth to clean the watch. Avoid using chemical cleaners, which may damage the watch's finish or seals.

3. PRODUCT OVERVIEW

The Skechers Whitfield Digital Watch features a durable barrel black polycarbonate case, a comfortable black polyurethane strap, and a negative display. It includes various functions such as time, date, alarm, dual time, stopwatch, and backlight.





Image 3.1: Front view of the Skechers Whitfield Digital Watch. The display shows time, date, and day. Labels for 'ALARM CHIME', 'DUAL TIME', 'MODE', 'RESET', 'ST/STP', 'LIGHT', 'DATE-DAY', and 'CHRONO TIMER' are visible around the bezel.



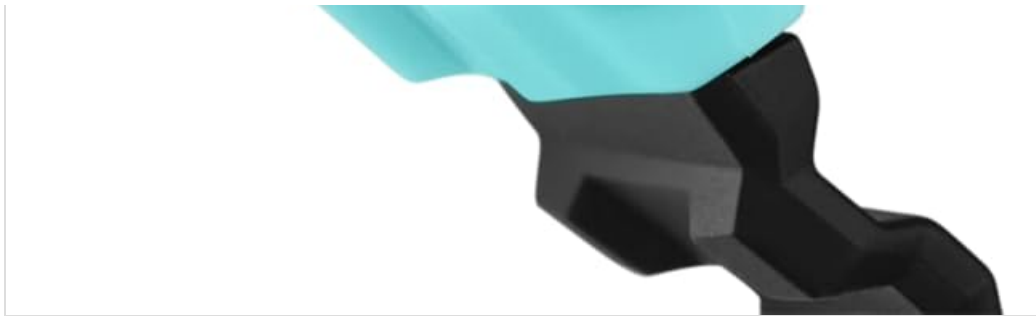


Image 3.2: Side view of the Skechers Whitfield Digital Watch. This image highlights the four control buttons located on the sides of the watch case, used for navigating modes and adjusting settings.

Button Functions:

- **MODE Button (Left-Middle):** Cycles through different modes (Time, Alarm, Stopwatch, Dual Time).
- **RESET Button (Left-Top):** Used to reset values or exit setting modes.
- **ST/STP Button (Right-Top):** Used to start/stop functions (e.g., stopwatch) or increment values during setting.
- **LIGHT Button (Right-Middle):** Activates the backlight for the display.

4. SETUP

4.1 Setting Time and Date

1. From the Timekeeping Mode, press the **MODE** button repeatedly until the seconds begin to flash. This indicates you are in setting mode.
2. Press the **RESET** button to cycle through the settings: Seconds → Hour → Minute → Year → Month → Day.
3. Use the **ST/STP** button to adjust the flashing value. Hold the button to change values quickly.
4. Once all settings are correct, press the **MODE** button to exit the setting mode and return to Timekeeping Mode.

4.2 Setting the Alarm

1. From the Timekeeping Mode, press the **MODE** button until 'ALARM' appears on the display.
2. Press the **RESET** button to select the hour or minute setting. The selected value will flash.
3. Use the **ST/STP** button to adjust the flashing hour or minute.
4. Press the **MODE** button to confirm the alarm time and exit the alarm setting mode.
5. To turn the alarm ON/OFF, press the **ST/STP** button while in Alarm Mode (without any value flashing). An alarm icon will appear/disappear to indicate its status.

4.3 Setting Dual Time

1. From the Timekeeping Mode, press the **MODE** button until 'DUAL TIME' appears on the display.
2. Press the **RESET** button to select the hour or minute setting. The selected value will flash.
3. Use the **ST/STP** button to adjust the flashing hour or minute for the second time zone.
4. Press the **MODE** button to confirm the dual time and exit the setting mode.

5. OPERATING FUNCTIONS

5.1 Using the Stopwatch (CHRONO TIMER)

1. From the Timekeeping Mode, press the **MODE** button until 'CHRONO TIMER' or 'ST/STP' appears on the display.
2. Press the **ST/STP** button to start the stopwatch.
3. Press the **ST/STP** button again to stop the stopwatch.
4. Press the **RESET** button to clear the stopwatch to zero.

5.2 Activating the Backlight (LIGHT)

- Press the **LIGHT** button (Right-Middle) to illuminate the display. The backlight will remain on for a few seconds.

5.3 Activating/Deactivating Chime

- While in Timekeeping Mode, press and hold the **RESET** button. The 'CHIME' indicator will appear or disappear on the display, indicating whether the hourly chime is active or inactive.

6. MAINTENANCE

6.1 Cleaning Your Watch

Regularly wipe your watch with a soft, dry cloth to remove dirt and moisture. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Avoid using solvents or harsh chemicals.

6.2 Water Resistance Care

To maintain the water resistance of your watch, ensure the crown is fully pushed in (if applicable, though this is a digital watch with buttons). Avoid operating buttons underwater. If the watch is exposed to saltwater, rinse it with fresh water and dry it thoroughly. Do not expose the watch to hot water or steam, as this can damage the seals.

6.3 Battery Replacement

The watch is powered by one LR44 battery. When the display becomes dim or functions become erratic, it may be time for a battery replacement. It is highly recommended to have the battery replaced by an authorized Skechers service center or a professional watch repair shop to ensure proper sealing and maintain water resistance.

7. TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Refer to Section 6.3 for battery replacement.
- **Time is incorrect:** The time may need to be reset. Refer to Section 4.1 for setting time and date.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though this model does not specify a lock). If the issue persists, the battery may be low, or there may be an internal malfunction.
- **Condensation inside the watch:** This indicates a breach in the water resistance. Stop using the watch immediately and have it inspected by a professional.

8. SPECIFICATIONS

- **Model Number:** SR1187
- **Case Diameter:** 45mm
- **Band Width:** 18mm
- **Case Material:** Polycarbonate
- **Band Material:** Polyurethane
- **Crystal Material:** Scratch-resistant acrylic
- **Movement:** Digital
- **Water Resistance:** 100 meters (10 ATM)
- **Battery Type:** 1 x LR44 (included)
- **Package Dimensions:** 3.9 x 3.11 x 2.91 inches
- **Item Weight:** 5.93 ounces

9. WARRANTY AND SUPPORT

Your Skechers Whitfield Digital Watch is covered by a manufacturer's warranty. For specific warranty terms, conditions, and duration, please refer to the warranty card included with your purchase or visit the official Skechers website. For technical support or service inquiries, please contact Skechers customer service through their official channels.

Online Support: www.skechers.com