

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PowerXL](#) /

› [PowerXL Duplex SmartSynx Dual Zone 25-Quart Toaster Oven Instruction Manual](#)

PowerXL TO68D5-0SPTV

PowerXL Duplex SmartSynx Dual Zone 25-Quart Toaster Oven Instruction Manual

Model: TO68D5-0SPTV

INTRODUCTION

Thank you for choosing the PowerXL Duplex SmartSynx Dual Zone 25-Quart Toaster Oven. This appliance is designed to provide versatile cooking options with its innovative dual-zone technology, allowing you to cook two different dishes simultaneously at varying temperatures and times. Please read this manual thoroughly before initial use to ensure safe and optimal operation.



Image: Front view of the PowerXL Duplex SmartSynx Dual Zone 25-Quart Toaster Oven, showcasing its sleek stainless steel design and dual French doors.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury. Read all instructions carefully before operating the appliance.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance housing in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.

- Do not use appliance for other than intended use.

PARTS AND ACCESSORIES

Your PowerXL Duplex SmartSynx Toaster Oven comes with the following components:

- 1 PowerXL Toaster Oven SmartSynx Unit
- 2 Baking Pans
- 2 Crisper Trays
- 1 Divider
- 1 Rotisserie Spit
- 1 Fetch Tool
- 1 Drip Tray
- 1 XL Baking Pan
- 1 XL Oven Rack



Image: The PowerXL Duplex SmartSynx Toaster Oven with its control panel visible, showing the two cooking zones and various accessories like crisper trays and baking pans inside.

SETUP: BEFORE FIRST USE

1. **Unpack:** Remove all packaging materials, stickers, and labels.
2. **Clean Accessories:** Wash all accessories (baking pans, crisper trays, divider, rotisserie spit, fetch tool, drip tray, XL baking pan, XL oven rack) in warm, soapy water. Rinse and dry thoroughly.

- 3. Wipe Down Unit:** Wipe the interior and exterior of the main unit with a clean, damp cloth.
- 4. Placement:** Place the appliance on a stable, level, heat-resistant surface. Ensure there is adequate air circulation around the unit (at least 6 inches of space on all sides).
- 5. Initial Burn-Off:** To eliminate any manufacturing odors, operate the oven empty for approximately 15 minutes at 400°F (204°C) on the 'Bake' setting. A slight odor or smoke may be present; this is normal. Ensure the area is well-ventilated.

OPERATING INSTRUCTIONS

The PowerXL Duplex SmartSynx Toaster Oven offers flexible cooking with its dual-zone capability and various presets.

Control Panel Overview



Image: A detailed view of the control panel, showing digital displays for temperature and time, along with buttons for various cooking functions like Air Fry, Roast, Broil, Bake, Pizza, Grill, Toast, Reheat, Keep Warm, Dehydrate, Rotisserie, and Slow Cook.

The control panel features two independent cooking zones, each with its own temperature and time settings, and a selection of 12 presets.

Dual Zone Operation

This feature allows you to cook two different foods simultaneously. Each zone can be set to a different cooking function, temperature, and time.

1. Place the divider in the center slot to separate the two cooking zones.
2. Place food and appropriate accessories into each zone.
3. Select the desired cooking function for Zone 1 using its dedicated controls. Adjust temperature and time.
4. Repeat for Zone 2.
5. Press 'Start/Pause' for each zone to begin cooking.



Image: The toaster oven with its French doors open, revealing two separate cooking zones. One zone contains a crisper tray with french fries, and the other contains a crisper tray with fried chicken, demonstrating simultaneous cooking.



Image: The PowerXL Duplex SmartSynx Toaster Oven with both French doors open, showing a basket of roasted vegetables in one zone and a pan with cooked meat and vegetables in the other, illustrating the dual-zone cooking capability.

Single Zone (Large Capacity) Operation

For larger items like a whole chicken or a large roast, remove the divider to create one extra-large cooking zone.

1. Ensure the divider is removed from the oven.
2. Place your food and appropriate accessories (e.g., XL baking pan, rotisserie spit) into the combined cooking space.
3. Select the desired cooking function (e.g., Roast, Rotisserie) and adjust temperature and time using either Zone 1 or Zone 2 controls. Both zones will operate with the same settings.
4. Press 'Start/Pause' on the selected zone to begin cooking.



Image: A whole rotisserie chicken cooking inside the PowerXL Duplex SmartSynx Toaster Oven, with the French doors open, demonstrating the large capacity when the divider is removed.



Image: A large roast surrounded by vegetables cooking in a pan inside the PowerXL Duplex SmartSynx Toaster Oven, with the French doors open, highlighting its capacity for family-sized meals.

Cooking Presets

Each zone features 12 pre-programmed cooking functions for convenience:

- Air Fry
- Roast
- Broil
- Bake
- Pizza
- Grill
- Toast
- Reheat
- Keep Warm
- Dehydrate
- Rotisserie
- Slow Cook

To use a preset, select the desired function on the control panel. The oven will automatically set a default temperature and time, which can be adjusted manually if needed.

SmartSynx Technology

The SmartSynx Technology ensures that when cooking two different items in separate zones, both dishes complete cooking at the same time. To activate, set both zones with their respective cooking functions, temperatures, and times, then press the 'SYNC' button. The oven will automatically adjust the cooking times to finish simultaneously.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your appliance.

1. **Always Unplug:** Before cleaning, always unplug the oven from the power outlet and allow it to cool completely.
2. **Drip Tray:** Remove the drip tray and empty any crumbs or food particles. Wash it in warm, soapy water, rinse, and dry thoroughly.
3. **Accessories:** All removable accessories (baking pans, crisper trays, divider, rotisserie spit, fetch tool, XL baking pan, XL oven rack) can be washed in warm, soapy water or placed in the dishwasher.
4. **Interior:** Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive sponge. Avoid using harsh chemicals or abrasive cleaners.
5. **Exterior:** Wipe the exterior with a damp cloth. Do not immerse the appliance in water.
6. **Doors:** Clean the glass doors with a glass cleaner or a damp cloth.

TROUBLESHOOTING

If you encounter issues with your PowerXL Duplex SmartSynx Toaster Oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; unit not properly closed.	Ensure the power cord is securely plugged into a working outlet. Check if the French doors are fully closed.
Food is not cooking evenly.	Overcrowding; incorrect rack position; temperature/time settings.	Avoid overcrowding the oven. Use the recommended rack position for the selected cooking function. Adjust temperature or cooking time as needed.
Smoke or burning smell during operation.	Food residue on heating elements; initial burn-off; fatty foods.	Ensure the oven interior and accessories are clean. This may be normal during initial use. For fatty foods, use the drip tray and ensure it is clean.
SmartSynx function not working.	SYNC button not pressed; settings not configured for both zones.	Ensure both zones have cooking functions, temperatures, and times set, then press the 'SYNC' button.

If the problem persists after attempting these solutions, please contact customer support.

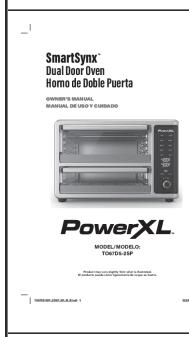
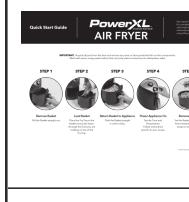
TECHNICAL SPECIFICATIONS

- **Model Name:** TO68D5-0SPTV
- **Supply Power:** 120V ~ 60Hz
- **Rated Power:** 1750 Watts
- **Temperature Range:** 85°F – 410°F
- **Exterior Dimensions:** 17.72"W x 15.94"H x 13.86"D
- **Internal Dimensions:** 14.17"W x 7.87"H x 13.18"D
- **Capacity:** 25 Quarts
- **Material:** Stainless Steel
- **Control Type:** Touch Control
- **Door Style:** French Door

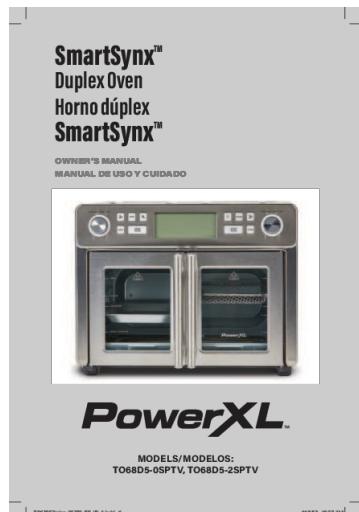
WARRANTY AND CUSTOMER SUPPORT

For warranty information, product registration, or customer support, please refer to the warranty card included with your purchase or visit the official PowerXL website. You may also contact customer service directly for assistance with any issues not covered in this manual.

PowerXL Customer Service: Please refer to your product packaging or the official PowerXL website for the most current contact information.

	<p>PowerXL SmartSynx Duplex Oven Owner's Manual & Guide</p> <p>Discover the PowerXL SmartSynx™ Duplex Oven with this owner's manual. Learn about dual-zone cooking, safety features, operating instructions, and troubleshooting for models TO68D5-0SPTV and TO68D5-2SPTV.</p>
	<p>PowerXL SmartSynx Dual Door Oven Owner's Manual & User Guide</p> <p>Comprehensive owner's manual for the PowerXL SmartSynx Dual Door Oven (Model TO67D5-2SP). Learn about its dual-oven capabilities, SmartSynx™ technology, safe operation, cooking functions, and maintenance tips for efficient kitchen use.</p>
	<p>PowerXL SmartSynx Dual Door Oven Owner's Manual</p> <p>Comprehensive owner's manual for the PowerXL SmartSynx Dual Door Oven (Model TO67D5-2SP), covering important safeguards, quick start guide, parts and accessories, control panel operation, instructions for use, general cooking guidelines, cleaning and storage, troubleshooting, and warranty information.</p>
	<p>PowerXL Air Fryer 2QT Quick Start Guide</p> <p>A quick start guide for the PowerXL Air Fryer 2QT, detailing the initial setup and basic operation steps for easy use. Learn how to unpack, load, operate, and safely remove food.</p>
	<p>PowerXL Vortex Dual-Basket Air Fryer Pro Quick Start Guide</p> <p>Get started quickly with your PowerXL Vortex Dual-Basket Air Fryer Pro. This guide covers setup, large basket mode, and synchronized dual-basket cooking for efficient meal preparation.</p>
	<p>PowerXL Vortex Dual-Basket Air Fryer Owner's Manual</p> <p>Comprehensive owner's manual for the PowerXL Vortex Dual-Basket Air Fryer (Model DUAF-10), covering important safety precautions, parts identification, control panel operation, cooking instructions, general guidelines, troubleshooting, cleaning, storage, and warranty information.</p>

Documents - PowerXL – TO68D5-0SPTV



[PowerXL SmartSynx Duplex Oven Owner's Manual & Guide](#)

Discover the PowerXL SmartSynx™ Duplex Oven with this owner's manual. Learn about dual-zone cooking, safety features, operating instructions, and troubleshooting for models TO68D5-0SPTV and TO68D5-2SPTV.

lang:en score:56 filesize: 4.34 M page_count: 56 document date: 2023-11-01