

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Izzo](#) /

› [Izzo Swami 6000 Handheld Golf GPS User Manual](#)

## Izzo Swami 6000

# Izzo Swami 6000 Handheld Golf GPS User Manual

Model: Swami 6000

## 1. INTRODUCTION

The Izzo Swami 6000 is a state-of-the-art handheld golf GPS device designed to enhance your game by providing precise distance measurements and essential course information. This device comes preloaded with over 38,000 global course maps, eliminating the need for subscription fees and offering free updates to keep your course data current.

Key features include accurate distances to the front, center, and back of the green, as well as layup and carry distances to hazards and doglegs. It boasts automatic course recognition and auto-hole advance for seamless play. The vibrant 2-inch color display ensures easy readability, and the integrated digital scorekeeper allows you to track your rounds. For convenience, the Swami 6000 is equipped with an integrated magnet for secure attachment to a golf cart frame, providing hands-free, eye-level viewing.

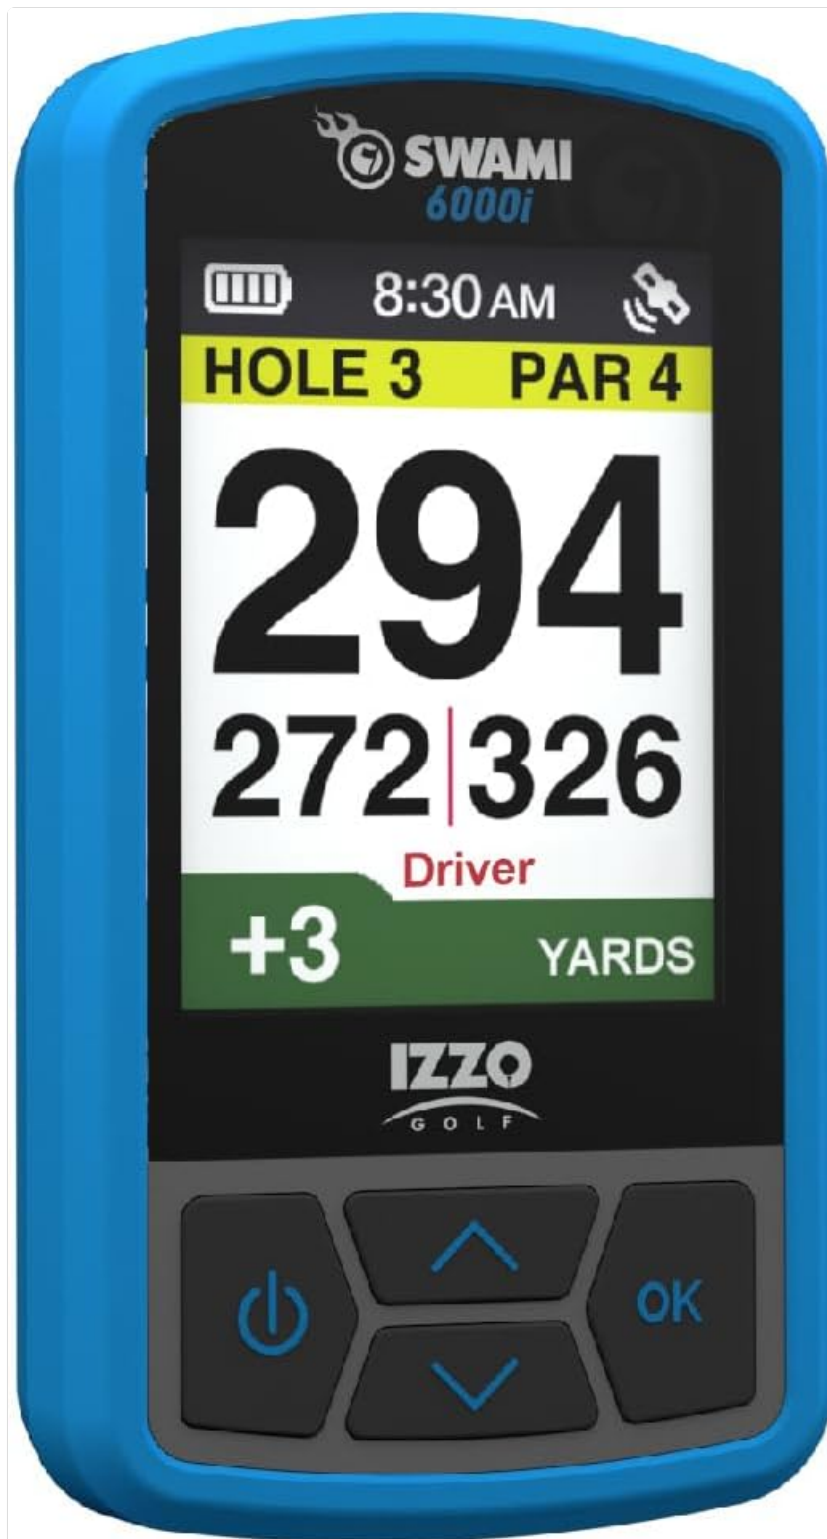


Figure 1: Izzo Swami 6000 Handheld Golf GPS device displaying hole information.

## 2. SETUP

### 2.1. Charging the Device

Before initial use, fully charge your Izzo Swami 6000. The device includes a USB-C charging cord and a charging brick. Connect the USB-C cable to the device's charging port and the other end to the charging brick, then plug it into a standard wall outlet. A full charge provides approximately 16-18 hours of battery life.



Figure 2: USB-C charging cable and the device's charging port.

## 2.2. Initial Power-On and Course Updates

To power on the device, press and hold the power button located on the front panel. The Swami 6000 comes preloaded with over 38,000 golf courses worldwide. For optimal performance and access to the latest course data, it is recommended to periodically check for and install free course updates. Refer to the included Quick Start Guide for detailed instructions on updating courses via the Izzo Golf website.

## 3. OPERATING INSTRUCTIONS

### 3.1. Basic Navigation and Display

The device features a vibrant 2-inch color display and intuitive button controls. Once powered on and a course is selected, the main screen will display distances to the front, center, and back of the green. The device automatically recognizes the course and advances to the next hole as you play.



Figure 3: Device display showing distances to the green.

### 3.2. Measuring Shot Distance

To measure the distance of your shot, press the appropriate button (refer to the Quick Start Guide for specific button functions) at your starting point. Walk to where your ball landed, and the device will display the distance traveled. This feature is useful for understanding your club distances.

## FEATURES:



**38,000 PRE-LOADED MAPS**



**MEASURE SHOT DISTANCE**



**DISTANCES TO HAZARDS**



**MAGNAHOLD**



Figure 4: Visual representation of shot distance measurement and hazard distances.

### 3.3. Hazard and Dogleg Distances

The Swami 6000 provides precise distances to the front and back of various hazards (e.g., water, bunkers) and doglegs on the course. Navigate through the display modes using the device's buttons to access this information, which is crucial for strategic play.

### 3.4. Digital Scorekeeper

The integrated digital scorekeeper allows you to keep track of your score directly on the device. Input your strokes for each hole, and the Swami 6000 will save your round scores. Ensure you enter your score before moving too far from the green, as the device may auto-advance to the next hole.

### 3.5. Cart Mounting

For convenient, hands-free viewing, the Izzo Swami 6000 features an integrated magnet. This allows you to securely attach the device to the metal frame of a golf cart, keeping it easily accessible and visible throughout your round.



Figure 5: Device securely mounted on a golf cart frame.

## 4. MAINTENANCE

### 4.1. Cleaning

To clean the device, wipe it with a soft, damp cloth. Avoid using abrasive cleaners or solvents, as these can damage the display or casing. Ensure the charging port is free of debris before charging.

### 4.2. Water Resistance

The Izzo Swami 6000 is water-resistant, designed to withstand light rain and splashes. However, it is not intended for submersion in water. Always ensure the charging port cover (if applicable) is securely closed when not charging to maintain water resistance.

### 4.3. Battery Care

To prolong battery life, avoid fully discharging the device frequently. Store the device in a cool, dry place when not in use. If storing for an extended period, charge the battery to approximately 50% before storage.

## 5. TROUBLESHOOTING

If you encounter issues with your Izzo Swami 6000, please refer to the following common troubleshooting tips:

- **Device not powering on:** Ensure the device is fully charged. If the battery is completely drained, it may take a few minutes of charging before it can power on.
- **GPS signal issues:** Ensure you are in an open area with a clear view of the sky. GPS signal acquisition can be affected by dense tree cover or tall buildings. Allow a few minutes for the device to acquire satellites.
- **Incorrect course or hole:** The device features auto-course recognition and auto-hole advance. If it selects the wrong course or hole, you can manually adjust it using the device's buttons. Ensure you are on the correct course and hole for accurate readings.
- **Display not responding:** Try restarting the device by holding down the power button until it turns off, then power it back on. If the issue persists, ensure the screen is clean and free of moisture.
- **Battery draining quickly:** Ensure the device is fully charged before each round. Extreme temperatures can affect battery performance. If battery life significantly degrades, contact customer support.

For more detailed troubleshooting or issues not covered here, please consult the official User Manual PDF or contact Izzo customer support.

## 6. SPECIFICATIONS

Feature	Specification
Product Dimensions	1 x 2 x 3.75 inches
Item Weight	7.8 ounces
Screen Size	2 Inches
Battery Life	18 Hours
Connectivity Technology	USB
Special Feature	Waterproof
Model Number	A44084
What's in the box	Charging Brick, Integrated Magnets, Quick Start guide, USB-C Charging Cord

## 7. WARRANTY AND SUPPORT

### 7.1. Warranty Information

Specific warranty details for the Izzo Swami 6000 are typically provided with your product packaging or can be found on the official Izzo Golf website. Please retain your proof of purchase for warranty claims.

### 7.2. Customer Support

For further assistance, product registration, or to download the complete user manual, please visit the official Izzo Golf website or contact their customer support team. You can also refer to the [User Manual \(PDF\)](#) for comprehensive information.

