

[Manuals.plus](#) /

› [Simplicity Vacuums](#) /

› Simplicity Vacuums S67 Cordless Rechargeable Stick Vacuum Cleaner Instruction Manual

Simplicity Vacuums S67

Simplicity Vacuums S67 Cordless Rechargeable Stick Vacuum Cleaner

INSTRUCTION MANUAL

Introduction

Thank you for choosing the Simplicity S67 Cordless Rechargeable Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new vacuum. Please read all instructions carefully before use and retain this manual for future reference.

Your browser does not support the video tag.

Video: S67 Cordless Stick Vac Overview. This video provides a general overview of the Simplicity S67 Cordless Stick Vacuum Cleaner and its features.

What's Included

Your Simplicity S67 package includes the following components:



Image: All components included with the Simplicity S67 Cordless Stick Vacuum Cleaner.

- S67 Vacuum (Main Unit)
- Multi-Surface Nozzle
- Wand
- Rotating Dusting Brush
- Extendable Crevice Tool

- Wall Charging Mount
- 25.9 V Lithium Ion Battery
- HEPA Media Filters (Pre-installed)
- Charger

Setup

Follow these steps to assemble and prepare your vacuum for first use:

1. **Unboxing:** Carefully remove all components from the packaging.

Your browser does not support the video tag.

Video: S67 Cordless Stick Vac Unboxing. This video demonstrates the unboxing process for the Simplicity S67 vacuum.

2. **Assembly:**

- Connect the main vacuum unit to the wand until it clicks securely into place.
- Attach the multi-surface nozzle to the other end of the wand, ensuring it locks.

3. **Battery Installation:** Slide the 25.9V Lithium Ion battery into the designated slot on the main unit until it clicks.

4. **Charging:**

- The battery can be charged while installed in the vacuum or separately.
- Connect the charger to the battery port (either on the vacuum or directly on the battery) and plug into a wall outlet.
- A full charge takes approximately 3.5 hours.



Image: Flexible charging options for the Simplicity S67, showing both direct charging and charging via the wall mount.

5. **Wall Mount Installation:** The wall charging mount can be secured to a wall using the provided hardware. This allows for convenient storage and charging.



Image: The Simplicity S67 Cordless Stick Vacuum mounted on its wall charging station, with accessories stored alongside.

Your browser does not support the video tag.

Video: S67 Cordless Stick Vac Setup. This video guides you through the initial setup and assembly of the Simplicity S67 vacuum.

Operating Instructions

Familiarize yourself with the vacuum's operation for optimal cleaning performance.

1. **Power On/Off:** Press the power button on the main unit to turn the vacuum on or off.



Image: A hand pressing the one-click power button on the Simplicity S67 vacuum for easy operation.

2. **Variable Suction Speeds:** The S67 offers three speed settings: Eco, Boost, and Turbo. Use the +/- buttons to adjust the suction power according to your cleaning needs.



Image: Close-up of the control panel on the Simplicity S67 vacuum, highlighting the variable suction speed options (Eco, Boost, Turbo).

3. **Multi-Surface Cleaning:** The multi-surface nozzle is designed for effective cleaning on various floor types, including carpets, rugs, and bare floors. The LED headlights illuminate dirt and debris.



Image: The Simplicity S67 vacuum cleaning both hardwood floors and carpets, demonstrating its multi-surface capability and LED headlights.

4. **Handheld & Above-Floor Cleaning:** Detach the main unit from the wand to use it as a handheld vacuum. Attach the rotating dusting brush or extendable crevice tool for cleaning furniture, stairs, upholstery, and hard-to-reach areas.



Image: The Simplicity S67 vacuum being used in handheld mode with attachments for above-floor cleaning, such as on shelves and upholstery.

Your browser does not support the video tag.

Video: S67 Cordless Stick Vacuum. This video showcases the versatility and features of the Simplicity S67 Cordless Stick Vacuum.

Maintenance

Regular maintenance ensures optimal performance and extends the life of your vacuum.

1. **Emptying the Dirt Cup:** Press the release button to detach the dirt cup. Empty contents into a trash receptacle.

Your browser does not support the video tag.

Video: S67 Cordless Stick Vac: How to Empty Dirt Cup. This video demonstrates the proper way to empty the dirt cup of your Simplicity S67 vacuum.

2. **Filter Maintenance:** The S67 features Multi-Stage Cyclonic Filtration with two HEPA Media Filters.



Image: A hand removing a HEPA filter from the Simplicity S67 vacuum, illustrating the multi-stage cyclonic filtration system.

- **Cleaning:** Filters can be rinsed with water. Ensure they are completely dry before re-installing.
- **Replacement:** Replace filters every 3-6 months, or as needed, to maintain optimal suction and filtration.

Your browser does not support the video tag.

Video: S67 Rechargeable Stick Vacuum: Changing the Filters. This video demonstrates how to change the filters in your Simplicity S67 vacuum.

3. **Brushroll Cleaning:** Periodically check the brushroll for tangled hair or debris. Remove the brushroll by pressing the release button and clean as necessary.

Your browser does not support the video tag.

Video: S67 Cordless Stick Vac: How to Clean Brushes. This video provides instructions on how to clean the brushroll of your Simplicity S67 vacuum.

Troubleshooting

If you encounter issues with your Simplicity S67, refer to the following common solutions:

- **No Power:** Ensure the battery is fully charged and correctly installed. Check if the charger is properly connected to both the vacuum/battery and the wall outlet.
- **Reduced Suction:** Empty the dirt cup. Check and clean both HEPA filters. Inspect the brushroll and nozzle for blockages.
- **Brushroll Not Rotating:** Ensure the nozzle is correctly attached. Check for obstructions in the brushroll or drive belt.
- **Short Run Time:** Ensure the battery is fully charged. Run time varies based on the selected speed mode (Eco mode provides the longest run time).

Specifications

Feature	Specification
Brand	Simplicity Vacuums
Model Name	S67
Power Source	Battery Powered (Lithium-Ion)
Battery Life	Up to 35 minutes
Charging Time	3.5 Hours
Wattage	350 watts
Filter Type	HEPA Filter (2 included)
Capacity	1.69 Cups
Number of Speeds	3 (Eco, Boost, Turbo)
Item Weight	6.28 pounds
Product Dimensions	9.25"L x 9.84"W x 46.3"H
Noise Level	75 Decibels
UPC	098612133582

Warranty

The Simplicity S67 Cordless Rechargeable Stick Vacuum Cleaner comes with a **1-year limited warranty**. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty information included in your product packaging or visit the official Simplicity Vacuums website.

Support

For further assistance, troubleshooting, or to purchase replacement parts and accessories, please visit the Simplicity Vacuums official website or contact customer support. Contact information can be found in your product packaging or on the brand's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DT4YDL3M>

More documents and user manuals: <https://manuals.plus/>