

[Manuals.plus](#) /

› [HOMYEDAMIC](#) /

› HOMYEDAMIC Recliner Chair Rocker Swivel User Manual

HOMYEDAMIC 9072-GREEN-NHM

HOMYEDAMIC Recliner Chair Rocker Swivel User Manual

Model: 9072-GREEN-NHM

PRODUCT OVERVIEW

The HOMYEDAMIC Recliner Chair Rocker Swivel is designed for comfort and versatility in adult living spaces. This manual provides essential information for assembly, operation, maintenance, and troubleshooting of your recliner chair. This specific model (Green-9072) features a 360-degree silent swivel base, 30-degree gentle rocking motion, and multi-position manual recline. It is constructed with soft fabric and a distinctive shell-shaped backrest, and includes convenient storage compartments. Please note that this model does not include massage or heat functions.



Image: Front view of the HOMYEDAMIC Recliner Chair Rocker Swivel in green, showcasing its shell-shaped backrest and plush design.

PACKAGE CONTENTS

Your HOMYEDAMIC Recliner Chair is shipped in two separate boxes. It is possible that these boxes may arrive on different days. Please ensure you have received both packages before beginning assembly.

- Main Chair Unit (Box A)
- Accessories and Base (Box B)



Image: Diagram illustrating the dimensions of the recliner chair and indicating that it ships in two boxes.

SETUP AND ASSEMBLY

Assembly of the HOMYEDAMIC Recliner Chair is designed to be straightforward and typically requires no additional tools. Follow these steps:

- Unpack Components:** Carefully remove all parts from both shipping boxes. Verify that all components are present.
- Attach Backrest:** Align the metal brackets on the backrest with the corresponding slots on the seat base. Slide the backrest down firmly until it clicks into place.
- Connect Wiring (if applicable):** If your model includes any electrical components (e.g., for future massage/heat variants, though not present in this model), connect any visible wires according to the labels. Ensure connections are secure.
- Secure Armrests:** Ensure armrests are firmly attached to the main unit. Some models may require sliding them into place.

5. **Final Check:** Once assembled, gently rock and swivel the chair to ensure all parts are securely connected and functioning correctly.

***Note:** Some customer experiences indicate that the chair's components may arrive in separate shipments. If you are missing parts, please refer to the "Warranty and Support" section.*

OPERATING INSTRUCTIONS

Reclining Function

The recliner offers multiple reclining angles for various activities:

- **90° Position:** Ideal for reading or upright seating.
- **120° Position:** Suitable for watching TV or relaxed lounging.
- **150° Position:** Provides a zero-gravity sleeping or deep relaxation experience.

To extend the footrest and recline:

1. Locate the easy-pull ring mechanism, typically found on the side of the cushion.
2. Pull the ring firmly to release and extend the footrest.
3. Place your elbows on the armrests and lean back gently. The chair will recline freely as you apply pressure.

110°-130°-150° ROCKER RECLINER



110° Reading Book

130° Watching TV

150° Sleeping

Image: A person demonstrating the various reclining positions (90°, 130°, 150°) of the recliner chair.

Retracting the Footrest (Manual Foot Pedal Closure)

Important Safety Note: This recliner requires manual foot pedal closure, which takes force on the legs to close the pedals. It is not suitable for the elderly, pregnant women, disabled individuals, or those with leg mobility issues.

1. **Sit Upright:** Shift your body forward slightly to an upright sitting position.
2. **Grip Armrests:** Firmly grip both armrests for stability.
3. **Heel-Press Center:** Use your heels to press down on the center of the footrest. Apply consistent pressure until the footrest fully retracts and latches into place.
4. **Stand Up:** Only stand up from the chair after the footrest has been fully closed and secured.

Requires Manual Foot Pedal Closure

not suitable for the elderly/pregnant women/disabled/legged people

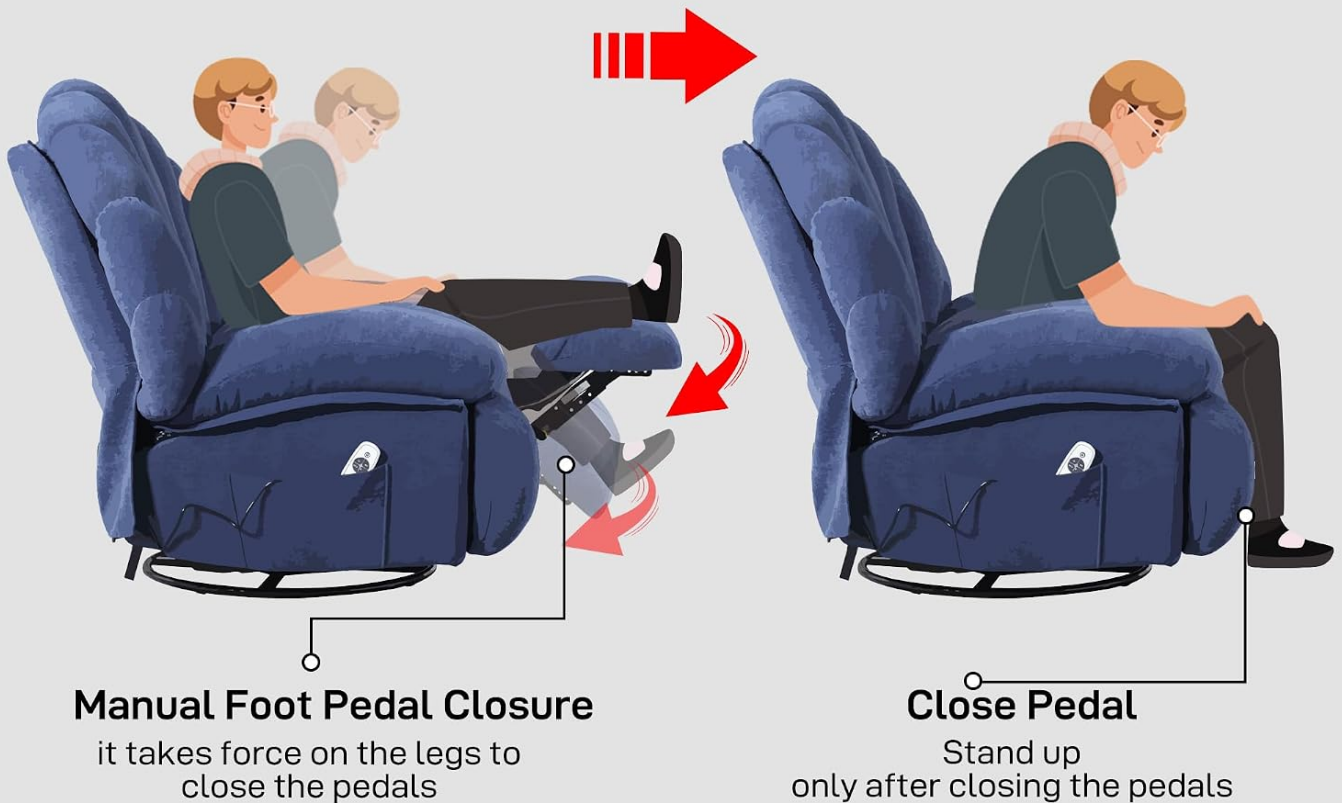


Image: A diagram showing the process of manually closing the footrest and highlighting safety warnings for certain user groups.

Swivel and Rocking Motion

- **360° Swivel:** The chair features a silent 360-degree swivel base, allowing you to rotate freely in any direction.
- **Rocking Motion:** Enjoy a gentle 30-degree rocking motion for added relaxation.

Storage Compartments

The recliner is equipped with four oversized storage compartments, two on each side of the armrests. These are ideal for holding remote controls, magazines, books, or other small items.



**Fashionable good-looking
thickened shell backrest**



**Skin-friendly soft fabric
for comfortable seating**



**sitting width 56cm
≈ the long side of 1.8 A4s**



**Large storage pockets
on both sides of the armrest**

Image: Detailed views showing the fashionable shell-backrest, skin-friendly soft fabric, sitting width, large storage pockets on the armrests, and a remote control (note: massage and heat functions are not available on this specific model).

MAINTENANCE AND CARE

- **Cleaning:** For general cleaning, use a soft, damp cloth with mild soap. Avoid harsh chemicals or abrasive cleaners. For spills, blot immediately with a clean, dry cloth.
- **Fabric Care:** The premium fleece fabric is durable. To maintain its appearance, vacuum regularly with an upholstery attachment to remove dust and debris.
- **Mechanism Lubrication:** Periodically check the reclining mechanism for smooth operation. If any squeaking or stiffness occurs, a small amount of silicone-based lubricant can be applied to moving parts (avoiding fabric).
- **Weight Capacity:** Do not exceed the maximum weight capacity of 330 lbs to prevent damage to the chair's frame and mechanism.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Footrest does not extend or retract smoothly.	Mechanism obstruction or lack of lubrication. Insufficient force applied for retraction.	Check for any objects obstructing the mechanism. Apply silicone lubricant to moving parts. Ensure proper technique for retraction (heel-press center with force).
Chair does not stay in reclined position.	Mechanism not fully engaged or insufficient body weight to maintain position.	Ensure the footrest is fully extended. Apply gentle backward pressure to fully engage the recline. Note that manual recliners often require body weight to maintain the reclined angle.
Missing parts upon delivery.	Two-box shipment may arrive separately.	Wait 1-2 business days for the second box to arrive. If parts are still missing, contact customer support immediately with your order details.
Squeaking or creaking sounds.	Friction in moving parts of the frame or mechanism.	Apply a small amount of silicone-based lubricant to the joints and pivot points of the reclining and swivel mechanisms.

SPECIFICATIONS

- **Brand:** HOMOYEDAMIC
- **Model Name:** 9072-GREEN-NHM
- **Color:** Green-9072
- **Product Dimensions (Upright):** 30.7"D x 37.8"W x 40.94"H
- **Weight Capacity:** 330 lbs
- **Ideal User Height:** 5'1"-5'9" (154-180cm)
- **Special Features:** 360° Swivel, 30° Rocking, Adjustable Lumbar (via recline), Arm Rest, Ergonomic design, Storage Pockets.
- **Back Style:** Shell-shaped, Solid Back
- **Fabric:** Premium Fleece Fabric
- **Frame:** All-metal, BIFMA-certified

WARRANTY AND SUPPORT

HOMOYEDAMIC provides comprehensive support for your recliner chair:

- **Mechanical Warranty:** A 1-year warranty covers mechanical defects and issues.
- **Replacement Parts:** Replacements are available for all recliner chair parts.
- **Customer Support:** 24/7 customer support is available for any inquiries or assistance.

For warranty claims, replacement parts, or any other support needs, please contact HOMOYEDAMIC customer service with your purchase details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question