

[Manuals.plus](#) /

› [mucar](#) /

› MUCAR CDE900 Pro + CDL50 Car Code Reader User Manual

mucar CDE900 Pro + CDL50

MUCAR CDE900 Pro + CDL50 Car Code Reader User Manual

Comprehensive Guide for Operation and Maintenance

INTRODUCTION

This user manual provides detailed instructions for the operation, maintenance, and troubleshooting of your MUCAR CDE900 Pro and MUCAR CDL50 Car Code Readers. Please read this manual thoroughly before using the devices to ensure proper function and to prevent damage.

PRODUCT OVERVIEW

The MUCAR CDE900 Pro is a full OBDII scanner with a 5-inch touchscreen, designed for comprehensive vehicle diagnostics. The MUCAR CDL50 is a check engine OBD2 scanner, providing essential diagnostic functions.



Figure 1: MUCAR CDE900 Pro (bottom) and MUCAR CDL50 (top) devices. The CDE900 Pro features a larger touchscreen, while the CDL50 is more compact with physical buttons.

FULL OBDII FUNCTIONS

For Car Engine Diagnostic



 
 Read Codes	 On-Board Monitor Tset
 Clear Codes	 Component Test
 Permanent Fault Code	 Freeze Frame
 Live Data Stream	 DTC Lookup
 O2 Sensor Test	 VIN Vehicle Information

Figure 2: MUCAR CDL50 displaying its full OBDII functions, including Read Codes, Clear Codes, Live Data Stream, and O2 Sensor Test.

READ VEHICLE INFORMATION (VIN)



Figure 3: MUCAR CDL50 in use, demonstrating its ability to connect to a vehicle and retrieve information such as VIN and diagnostic trouble codes.

SETUP AND INITIAL USE

1. Connecting to the Vehicle

1. Locate the vehicle's 16-pin Data Link Connector (DLC). This is usually found under the dashboard on the driver's side.
2. Ensure the vehicle's ignition is in the **OFF** position.
3. Plug the diagnostic cable of the MUCAR CDE900 Pro or CDL50 into the vehicle's DLC. Ensure a secure connection.
4. Turn the vehicle's ignition to the **ON** position (engine off). The device will power on automatically.

2. Language and Unit Settings

- Upon first use, navigate to the **Settings** menu on the device.
- Select **Language** to choose your preferred language.

- Select **Units** to set measurement units (e.g., Metric or Imperial).

OPERATING INSTRUCTIONS

MUCAR CDE900 Pro Operations

The CDE900 Pro features a touchscreen interface for intuitive navigation.

- **Read Codes:** Select this option to retrieve Diagnostic Trouble Codes (DTCs) from the vehicle's ECU. This will display both pending and permanent codes.
- **Clear Codes:** After addressing the issue, select this to erase DTCs from the vehicle's memory. *Warning: Clearing codes without fixing the underlying problem will cause the codes to reappear.*
- **Live Data Stream:** View real-time data parameters from the vehicle's sensors, such as engine RPM, vehicle speed, oxygen sensor readings, and more. Data can be displayed in text or graph format.
- **I/M Readiness:** Check the status of emission-related monitors to determine if the vehicle is ready for an emissions test.
- **O2 Sensor Test:** Retrieve O2 sensor monitor test results for the most recently completed tests from the vehicle's on-board computer.
- **On-Board Monitor Test:** Retrieve results for emission-related powertrain components and systems that are not continuously monitored.
- **Component Test:** Allows initiation of a leak test for the vehicle's EVAP system.
- **Vehicle Information (VIN):** Retrieve the Vehicle Identification Number (VIN), Calibration ID (CALID), and Calibration Verification Number (CVN) of the vehicle.

MUCAR CDL50 Operations

The CDL50 uses physical buttons for navigation.

- **OBD/EOBD:** Access the main diagnostic functions including Read Codes, Erase Codes, I/M Readiness, Data Stream, Freeze Frame, O2 Sensor Test, On-Board Monitor Test, EVAP System Test, and Vehicle Information.
- **Review:** View previously saved diagnostic data.
- **Voltage:** Display real-time battery voltage.
- **Setup:** Configure device settings such as language, units, and sound.
- **DTC Lookup:** Look up definitions of Diagnostic Trouble Codes.
- **I/M:** Quick access to I/M Readiness status.
- **ESC:** Exit current screen or go back to the previous menu.
- **OK:** Confirm selection or enter a menu.
- **Arrow Keys:** Navigate through menus and options.

MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the device's screen and body. Do not use abrasive cleaners or solvents.
- **Storage:** Store the device in a dry, cool environment, away from direct sunlight and extreme temperatures.
- **Software Updates:** Periodically check the MUCAR official website for software updates to ensure optimal performance and compatibility with new vehicle models. Follow the instructions provided on the website for updating the device firmware.

- **Cable Care:** Inspect the diagnostic cable regularly for any signs of damage (fraying, cuts). Replace if necessary to ensure safe and reliable connection.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	• Loose connection to DLC. • Vehicle ignition not ON. • Vehicle battery low.	• Ensure cable is securely plugged into DLC. • Turn vehicle ignition to ON position. • Check vehicle battery voltage.
"Link Error" or "Communication Error" message.	• Faulty connection. • Vehicle not OBDII compliant. • Damaged diagnostic cable.	• Verify connection. • Ensure vehicle is 1996 or newer (OBDII standard). • Try another OBDII compliant vehicle or replace cable.
Cannot clear DTCs.	• Underlying vehicle fault still present. • Ignition not ON.	• Repair the vehicle fault first. • Ensure ignition is ON (engine off).

SPECIFICATIONS

Feature	MUCAR CDE900 Pro	MUCAR CDL50
Display	5-inch Touchscreen	LCD Display
Connectivity	OBDII 16-pin DLC	OBDII 16-pin DLC
Operating Voltage	9-18V DC	9-18V DC
Operating Temperature	0°C to 50°C (32°F to 122°F)	0°C to 50°C (32°F to 122°F)
Storage Temperature	-20°C to 70°C (-4°F to 158°F)	-20°C to 70°C (-4°F to 158°F)
Supported Protocols	J1850 PWM, J1850 VPW, ISO9141, KWP2000, CAN	J1850 PWM, J1850 VPW, ISO9141, KWP2000, CAN

WARRANTY AND SUPPORT

MUCAR products typically come with a limited warranty. Please refer to the warranty card included with your product or visit the official MUCAR website for detailed warranty terms and conditions.

For technical support, product inquiries, or service, please contact MUCAR customer support through their official website or the contact information provided in your product packaging. Ensure you have your product model and serial number ready when contacting support.

Official MUCAR Website: www.mucar.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DT6NR71T>

More documents and user manuals: **<https://manuals.plus/>**