

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PowerLocus](#) /

› [PowerLocus Jumpy Wireless Bluetooth Earbuds for Kids User Manual](#)

PowerLocus Jumpy

PowerLocus Jumpy Wireless Bluetooth Earbuds for Kids User Manual

Model: Jumpy

INTRODUCTION

Thank you for choosing PowerLocus Jumpy Wireless Bluetooth Earbuds. These earbuds are designed specifically for children, offering a safe and comfortable audio experience with an 85dB volume limit, durable construction, and easy-to-use features. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Jumpy earbuds to ensure optimal performance and safety.

PRODUCT FEATURES

- **Safe Volume Limit:** 85dB maximum volume, recommended by the WHO, to protect children's hearing.
- **Advanced Noise Cancellation:** Equipped with 4 noise-cancelling microphones and AI ENC Noise Cancelling Technology for clear calls.
- **Bluetooth 5.3 Connectivity:** Ensures stable and efficient wireless connection.
- **Long Playtime:** Over 30 hours of total playtime with the charging case (6 hours per charge).
- **Comfortable & Secure Fit:** Flexible silicone ear hooks that rotate up to 90 degrees, and soft S/M silicone eartips for a comfortable, open-ear design.
- **Durable & Safe Materials:** Shockproof, rain-resistant, BPA-free, hypoallergenic, and made from safe certified materials.
- **Intuitive Touch Controls:** Easy management of music, calls, and gaming mode.
- **Low Latency Gaming Mode:** Optimized for video games and entertainment.
- **Immersive Audio:** Features 12x17mm audio drivers for a rich sound experience.
- **Universal Compatibility:** Works with tablets, cell phones, and other Bluetooth-enabled devices.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case.

1. Place the Jumpy earbuds into their charging case. Ensure they are correctly seated.
2. Connect the charging case to a power source using the provided USB-C cable.
3. The LED indicator on the case will show charging status. A full charge typically takes approximately 1.5-2 hours for the earbuds and 2-3 hours for the case.
4. Once fully charged, the indicator light will change or turn off, depending on the model.

A promotional graphic for PowerLocus Jumpy Earbuds. It features a black charging case with two earbuds inside, set against a blue background with a large white clock face. The clock face has the text '- 30+ HOURS' in blue. The PowerLocus logo, a lightning bolt inside a hexagon, is in the bottom left. Below the logo, the text 'PowerLocus' is written. Underneath that, '30+ Hours Long Playtime' is written in large white font. At the bottom, it says '3 Times Recharge', '6 Hours Playtime Per Charge', and '+ 24 Hours Playtime with Case' in white font. The earbuds and case have 'PowerLocus' written on them. A green LED light is visible on the case.

PowerLocus

30+ Hours Long Playtime

3 Times Recharge
6 Hours Playtime Per Charge
+ 24 Hours Playtime with Case

Image: PowerLocus Jumpy Earbuds in their charging case, highlighting the 30+ hours of total playtime. The case provides multiple recharges for extended use.

2. Bluetooth Pairing

Pair your Jumpy earbuds with your device for wireless audio.

1. Open the charging case. The earbuds will automatically enter pairing mode, indicated by a flashing LED light on one or both earbuds.
2. On your device (smartphone, tablet, etc.), go to the Bluetooth settings.

3. Search for available devices and select "PowerLocus Jumpy" from the list.
4. Once connected, the LED indicator on the earbuds will stop flashing, and your device will confirm the connection.
5. For subsequent uses, the earbuds will automatically connect to the last paired device when removed from the case.



Image: The PowerLocus Jumpy Earbuds in their charging case, illustrating key features like Bluetooth 5.3 connectivity and touch sensor controls.

OPERATING INSTRUCTIONS

Touch Controls

The Jumpy earbuds feature intuitive touch controls on each earbud.

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.

- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.
- **Activate Voice Assistant:** Triple tap on either earbud.
- **Toggle Gaming Mode:** Press and hold the right earbud for 2 seconds to activate/deactivate low latency gaming mode.

Volume Management

The Jumpy earbuds are designed with an 85dB safe volume limit to protect children's hearing. Volume adjustments should be made directly on the connected device.

Making and Receiving Calls

Utilize the built-in microphones for clear communication.

- Ensure earbuds are connected to your phone.
- Use the touch controls as described above to manage calls.



Image: A child using PowerLocus Jumpy earbuds during an online learning session, demonstrating their suitability for educational and gaming purposes with noise-cancelling microphones and low-latency gaming mode.

MAINTENANCE

Cleaning

Regular cleaning helps maintain performance and hygiene.

- Gently wipe the earbuds and charging case with a soft, dry, lint-free cloth.
- For silicone eartips, remove them and clean with a mild soap solution, then rinse and dry thoroughly before reattaching.
- Do not use abrasive cleaners, alcohol, or chemical solvents.

Storage

When not in use, store the earbuds in their charging case to protect them and keep them charged.

- Store in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid exposing the earbuds or case to water or excessive moisture, despite their rain-resistant design.



Image: The PowerLocus Jumpy Earbuds showcasing their durable and child-safe construction, including hypoallergenic, shockproof, rain-resistant, BPA-free, and safe certified materials.

TROUBLESHOOTING

Problem	Possible Solution
Earbuds not pairing	Ensure earbuds are charged. Turn off and on Bluetooth on your device. Forget "PowerLocus Jumpy" in your device's Bluetooth settings and re-pair.
No sound	Check device volume. Ensure earbuds are connected. Try playing different audio.
One earbud not working	Place both earbuds back in the case, close it, then open again. Ensure both are charged. Re-pair if necessary.
Poor call quality	Ensure microphones are not obstructed. Move closer to your connected device. Check network signal.

Problem	Possible Solution
Earbuds falling out	Adjust the flexible silicone ear hooks for a snug fit. Try different sized silicone eartips (S or M) for better comfort and stability.

SPECIFICATIONS

- **Model Name:** Jumpy
- **Brand:** PowerLocus
- **Connectivity Technology:** Wireless (Bluetooth 5.3)
- **Ear Placement:** Open-ear hook design with in-ear tips
- **Audio Drivers:** 12x17mm
- **Impedance:** 32 Ohms
- **Sensitivity:** 85 dB (Safe Volume Limit)
- **Sound Insulation:** Acoustic insulation
- **Microphones:** 4 Noise Cancelling Microphones with AI ENC Technology
- **Control Method:** Touch
- **Battery Life:** 6 hours (earbuds), 30+ hours total with charging case
- **Material:** Silicone
- **Water Resistance Level:** Rain-resistant
- **Special Features:** Noise Cancellation, Rechargeable Battery, Touch Control, Multipoint Pairing, Low Latency Gaming Mode, BPA-Free, Hypoallergenic.
- **Compatible Devices:** Tablet, Cell Phone
- **Included Components:** 1 pair of Jumpy wireless earbuds, charging case, USB-C cable, S/M silicone eartips.



PowerLocus

12x17mm Audio Drivers create immersive Audio Experience

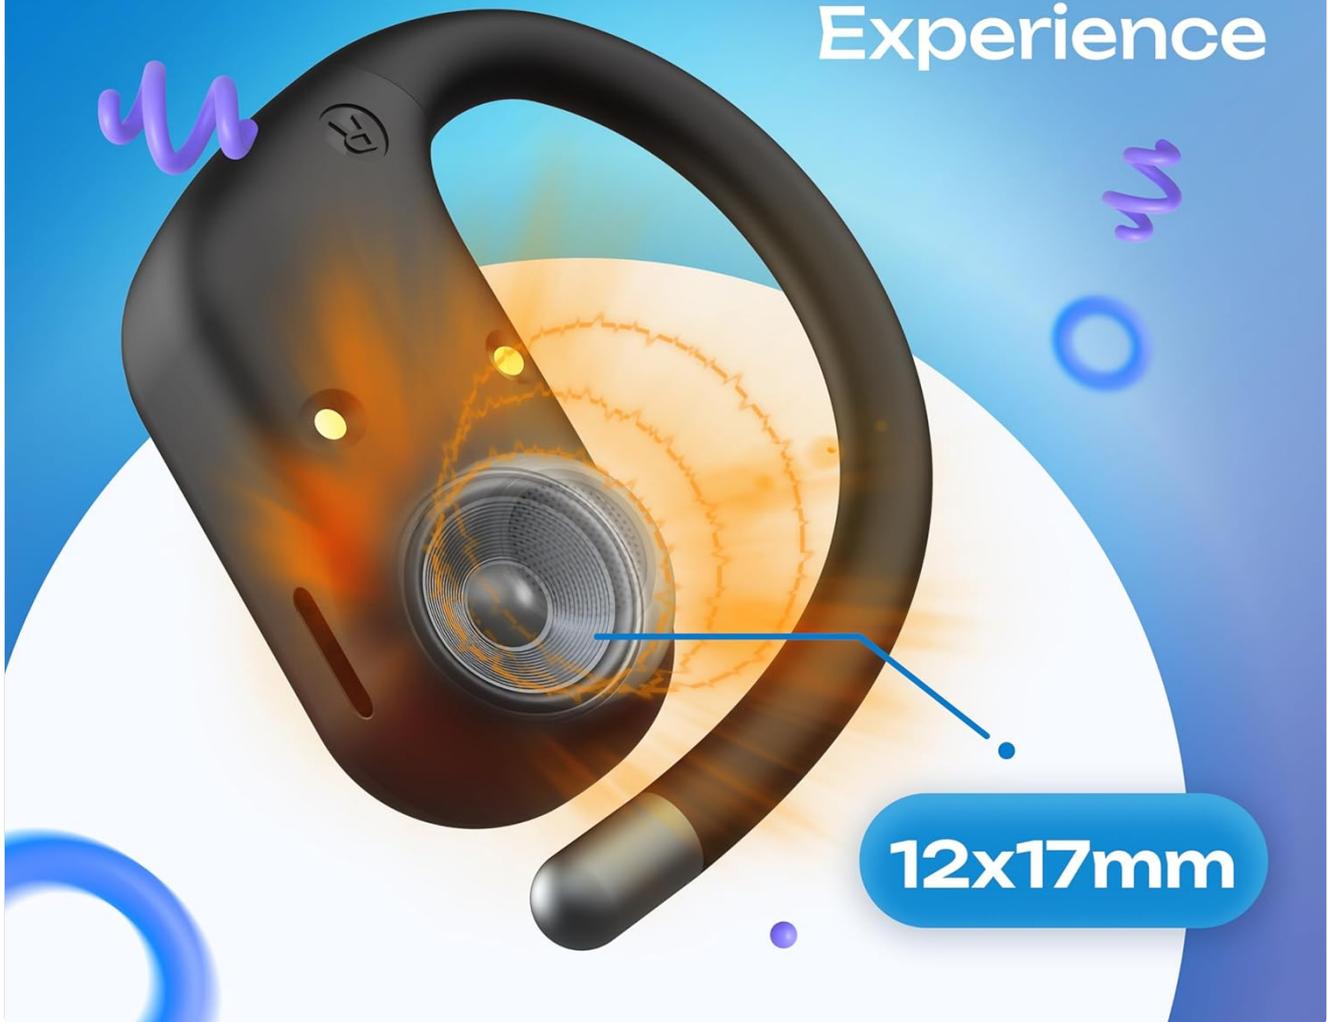


Image: A detailed view of the PowerLocus Jumpy earbud, highlighting its 12x17mm audio drivers designed for an immersive audio experience.

SAFETY INFORMATION

The PowerLocus Jumpy earbuds are designed with your child's safety in mind.

- **Volume Limit:** The earbuds feature an 85dB safe volume limit, adhering to recommendations from the World Health Organization (WHO) to prevent hearing damage in children.
- **Material Safety:** Constructed from BPA-free, hypoallergenic, and safe certified materials.
- **Choking Hazard:** Keep small parts, such as eartips, out of reach of very young children.
- **Supervision:** Adult supervision is recommended for young children using electronic devices.
- **Environmental Safety:** Do not expose to extreme temperatures, fire, or immerse in water.




PowerLocus



Secure your kids against the hearing loss with Maximum safe volume recommended by the WHO

85dB Safe Volume Limit

Safe Sound for Their Little Ears

Image: A child wearing PowerLocus Jumpy earbuds, illustrating the product's commitment to hearing safety with an 85dB safe volume limit, as recommended by the WHO.

WARRANTY AND SUPPORT

PowerLocus stands behind the quality of its products.

- **Warranty:** Your PowerLocus Jumpy earbuds come with a 2-year extended coverage service. Please retain your proof of purchase for warranty claims.
- **Customer Support:** For any questions, technical assistance, or warranty inquiries, please contact PowerLocus customer support through the retailer's platform or the official PowerLocus website.