

[Manuals.plus](#) /

› [DINDIN](#) /

› DINDIN Portable Bluetooth Speaker DINDIN-007 User Manual

DINDIN DINDIN-007

DINDIN Portable Bluetooth Speaker DINDIN-007 User Manual

Model: DINDIN-007

INTRODUCTION

Thank you for choosing the DINDIN Portable Bluetooth Speaker DINDIN-007. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your speaker. Please read it thoroughly before use to ensure optimal performance and longevity of your device.

WHAT'S IN THE BOX



STEREO SOUND

Delivers rich crystal-clear sound
with deep bass crisp highs

Image: The DINDIN-007 speaker, a Type-C charging cable, an AUX cable, and the instruction manual are neatly arranged, indicating the package contents.

- 1 x DINDIN-007 Portable Bluetooth Speaker
- 1 x Type-C Charging Cable
- 1 x 3.5mm AUX Cable
- 1 x Instruction Manual

PRODUCT OVERVIEW

The DINDIN-007 speaker features a robust design with intuitive controls for a seamless audio experience. Below is a diagram detailing the various ports and buttons on the speaker.



Image: A close-up view of the speaker's top panel, highlighting the charging indicator, Bluetooth indicator, MIC microphone jack, headphone jack, AUX 3.5mm interface, USB interface, Type-C charging port, battery level display, and control buttons (Power, Play/Pause, Volume Up/Next, Volume Down/Previous, Bass Boost).

Controls and Indicators:

- **Power Button:** Press and hold to power on/off.
- **Play/Pause Button:** Press to play or pause audio.
- **Volume Up / Next Track Button:** Press to increase volume. Hold to skip to the next track.
- **Volume Down / Previous Track Button:** Press to decrease volume. Hold to go to the previous track.
- **Bass Boost Button:** Press to activate/deactivate bass boost.
- **Bluetooth Indicator:** Shows Bluetooth connection status.
- **Charging Indicator:** Shows charging status.
- **Battery Level Display:** Indicates current battery charge.

Ports:

- **Type-C Charging Port:** For charging the speaker.
- **USB Interface:** For USB drive playback or power bank function.
- **AUX 3.5mm Interface:** For wired audio input.
- **MIC Microphone Jack:** For connecting an external microphone.
- **Headphone Jack:** For connecting headphones.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided Type-C charging cable to the speaker's Type-C port and the other end to a compatible USB power adapter (not included). The charging indicator will illuminate, and the battery level display will show progress. A full charge takes approximately 6 hours.

2. Powering On/Off

Press and hold the Power button for a few seconds until you hear an audible prompt and the indicators light up. To power

off, press and hold the Power button again.

3. Bluetooth Pairing

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing Bluetooth indicator.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "DINDIN-007" from the list.
4. Once connected, the Bluetooth indicator will become solid, and you will hear a confirmation sound.

4. TWS (True Wireless Stereo) Pairing

To achieve 160W surround sound, you can pair two DINDIN-007 speakers together.

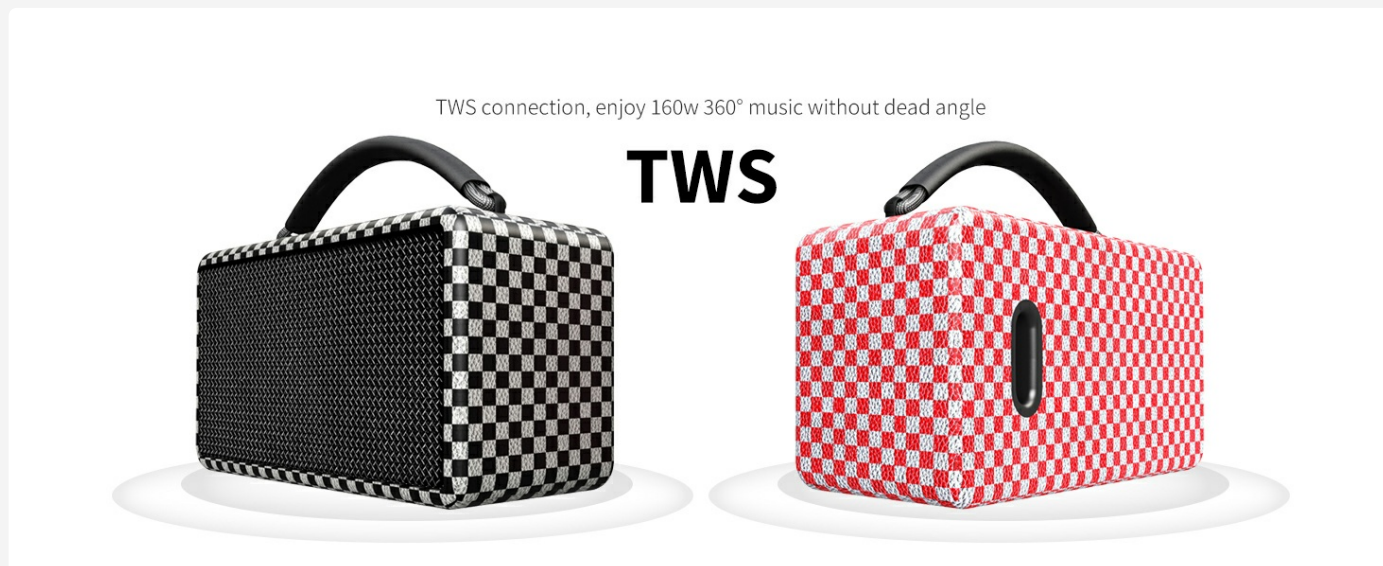


Image: Two DINDIN-007 speakers are shown side-by-side, illustrating their ability to connect wirelessly for a combined stereo audio experience.

1. Ensure both DINDIN-007 speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), press and hold the Bass Boost button for 3 seconds. You will hear a prompt indicating TWS pairing mode.
3. The two speakers will automatically search for and connect to each other. Once connected, you will hear a confirmation sound.
4. Now, connect your device to the primary speaker via Bluetooth as described in the Bluetooth Pairing section. Audio will play through both speakers in stereo.

5. AUX and USB Input

- **AUX Input:** Connect one end of the 3.5mm AUX cable to the speaker's AUX port and the other end to the audio output of your device. The speaker will automatically switch to AUX mode.
- **USB Input:** Insert a USB flash drive containing audio files into the USB port. The speaker will automatically detect and play the audio files.

OPERATION

Basic Audio Control

- **Volume Adjustment:** Press the '+' button to increase volume, and the '-' button to decrease volume.
- **Play/Pause:** Press the Play/Pause button to toggle playback.
- **Next/Previous Track:** Hold the '+' button for the next track, and hold the '-' button for the previous track.

Bass Boost Function

Press the Bass Boost button to enhance the bass output of the speaker. Press it again to return to standard audio mode.

Power Bank Function

The DINDIN-007 speaker features a built-in 10000mAh power bank. You can use the USB port to charge other devices, such as your smartphone, in emergency situations.



Image: The DINDIN-007 speaker is placed on a table outdoors, connected via a cable to a smartphone, illustrating its reverse charging capability as a portable power bank.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's surface. Do not use abrasive cleaners, alcohol, or other chemical solvents, as these may damage the finish.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. If storing for an extended period, charge the battery to about 50% every few months.
- **Water Resistance:** While designed for outdoor use, avoid submerging the speaker in water. Ensure all port covers are securely closed if exposed to moisture.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker is already connected to another device.	Disconnect from the current device or turn off Bluetooth on other nearby devices. Ensure the speaker is in pairing mode.

Problem	Possible Cause	Solution
No sound from speaker.	Volume too low; incorrect input mode; device not playing.	Increase speaker and device volume. Check if the correct input mode (Bluetooth, AUX, USB) is selected. Ensure audio is playing on your connected device.
TWS pairing fails.	Speakers are too far apart; already connected to a device.	Ensure both speakers are within close proximity and not connected to any other Bluetooth device before initiating TWS pairing.
Poor sound quality.	Low battery; interference; source audio quality.	Charge the speaker. Move speaker closer to the source device. Try a different audio source or file.

SPECIFICATIONS

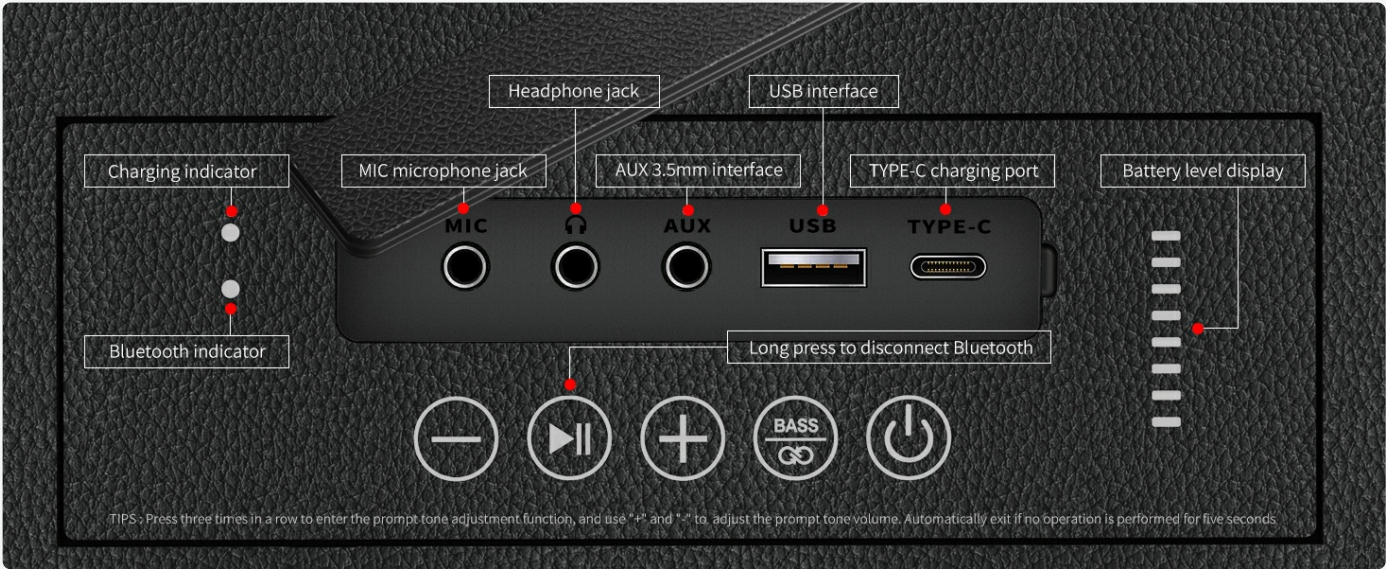


Image: The DINDIN-007 speaker is shown next to a badminton shuttlecock for scale, with its dimensions (9.88"D x 3.78"W x 4.92"H) clearly labeled.

Feature	Detail
Model Name	DINDIN-007 (MA-B)
Speaker Type	Portable Bluetooth Speaker
Peak Power Output	80W
Battery Life	Up to 20 Hours
Battery Capacity	10000mAh
Charging Time	Approx. 6 Hours
Bluetooth Version	5.3
Bluetooth Range	Up to 33 feet (10 meters)
Connectivity	Bluetooth, AUX (3.5mm), USB

Feature	Detail
Special Features	Bass Boost, Built-In Power Bank, TWS Pairing
Material	Wood
Product Dimensions (D x W x H)	9.88" x 3.78" x 4.92"
Item Weight	4.13 pounds

WARRANTY AND SUPPORT

DINDIN provides a **one-year after-sales service** for this product. We are committed to offering high-quality products and timely support. If you encounter any issues or have questions regarding your DINDIN Portable Bluetooth Speaker DINDIN-007, please contact our customer service team. We aim to respond within 24 hours to ensure your satisfaction. For support, please refer to the contact information provided with your purchase or visit the official DINDIN store on Amazon.

© 2025 DINDIN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question