

Tefal FV6670E0

Tefal FV6670 Freemove Power Cordless Steam Iron User Manual

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the Tefal FV6670 Freemove Power Cordless Steam Iron. This appliance is designed to provide efficient and convenient ironing with its powerful steam output and cordless design. Please read this manual carefully before first use and keep it for future reference.



Image 1.1: The Tefal FV6670 Freemove Power Cordless Steam Iron in action, demonstrating its powerful steam.

Key Features:

- **Powerful Performance:** 2600 W for rapid 30-second heat-up, 40 g/min continuous steam, and a 220 g/min steam boost for stubborn creases.
- **Cordless Convenience:** Offers total freedom of movement and quick recharging on its base.
- **Lightweight Design:** Weighs only 960g for comfortable and effortless ironing.
- **Safe and Stable:** Features a horizontal base for enhanced stability and a smart, protective design.
- **Durable and Repairable:** Designed for a 15-year reparability period with affordable parts available globally.

2. SETUP AND FIRST USE

2.1 Unpacking

Carefully remove the iron and all accessories from the packaging. Retain the packaging for future storage or transport. Ensure all components are present and undamaged.

2.2 Positioning the Charging Base

Place the charging base on a stable, heat-resistant surface, preferably near an electrical outlet and your ironing board. Ensure the power cord is not obstructed and is safely positioned to prevent tripping hazards.



Image 2.1: The iron correctly placed on its charging base, ready for use or recharging.

2.3 Initial Cleaning

Before first use, wipe the soleplate with a damp cloth to remove any manufacturing residues. Fill the water tank and perform a test iron on an old piece of fabric to clear any internal impurities.

3. OPERATING INSTRUCTIONS

3.1 Filling the Water Tank

1. Ensure the iron is unplugged from the mains and has cooled down.
2. Open the water inlet cover.
3. Fill the water tank with tap water up to the 'MAX' level indicator. Do not overfill.
4. Close the water inlet cover securely.

3.2 Powering On and Temperature Selection

1. Place the iron onto its charging base.

2. Plug the power cord into a suitable electrical outlet.
3. Turn the temperature dial to the desired setting according to the fabric type. The indicator light on the base will illuminate, signaling that the iron is heating.
4. Wait for the indicator light to turn off, indicating the iron has reached the selected temperature.



Image 3.1: The illuminated indicator light on the charging base, showing the iron is heating or ready.

3.3 Steam Functions

- **Continuous Steam:** Once the iron is at the correct temperature, select the desired steam level using the steam control slider.
- **Steam Boost:** For stubborn creases, press the steam boost button. This delivers a powerful burst of steam.
- **Vertical Steaming:** Hold the iron vertically, close to the fabric (e.g., hanging clothes or curtains), and press the steam boost button repeatedly.



Image 3.2: Demonstrating the vertical steaming function on hanging garments.

3.4 Cordless Usage

The iron can be used cordlessly for short periods. After each ironing pass, return the iron to its charging base to maintain optimal temperature. The indicator light will signal when it's ready to use again.



Image 3.3: A user ironing with the cordless steam iron, highlighting ease of movement.

4. MAINTENANCE

4.1 After Each Use

- Unplug the iron and allow it to cool completely.
- Empty any remaining water from the tank.
- Wipe the soleplate with a damp cloth to remove any fabric starch or residue.

4.2 Self-Cleaning Function

The iron features a self-cleaning function to remove mineral deposits. Refer to the detailed instructions in the full product manual for the specific procedure. Typically, this involves filling the tank, heating the iron, and then activating a self-clean button over a sink.

4.3 Storage

Store the iron upright on its base in a safe, dry place, out of reach of children. Ensure the cord is neatly wrapped around the base if a cord storage feature is present.

5. TROUBLESHOOTING

If you encounter issues with your iron, please consult the following common problems and solutions:

- **Iron not heating:** Ensure the iron is correctly placed on its charging base and the base is plugged into a working electrical outlet. Check the temperature dial setting.
- **No steam or insufficient steam:** Check if the water tank is filled. Ensure the temperature setting is high enough for steam production (usually above the 'MIN' steam setting). The iron needs to be hot enough to produce steam.
- **Water leakage:** Ensure the water tank is not overfilled and the water inlet cover is closed properly. Make sure the temperature is set correctly for steam ironing; if the iron is too cool, water may leak instead of turning into steam. The anti-drip feature helps prevent this.



Image 5.1: The anti-drip feature helps prevent water stains on fabrics.

6. SPECIFICATIONS

Feature	Detail
Model Number	FV6670E0

Feature	Detail
Brand	Tefal (T-Fal)
Wattage	2600 W
Continuous Steam Output	40 g/min
Steam Boost	220 g/min
Soleplate Material	Scratch-resistant Ceramic
Item Weight	1.74 kg (960g iron only)
Product Dimensions (L x W)	34.4L x 24.4W cm
Voltage	230 VAC
Special Features	Cordless, Anti-drip, Self-cleaning
Country of Origin	China

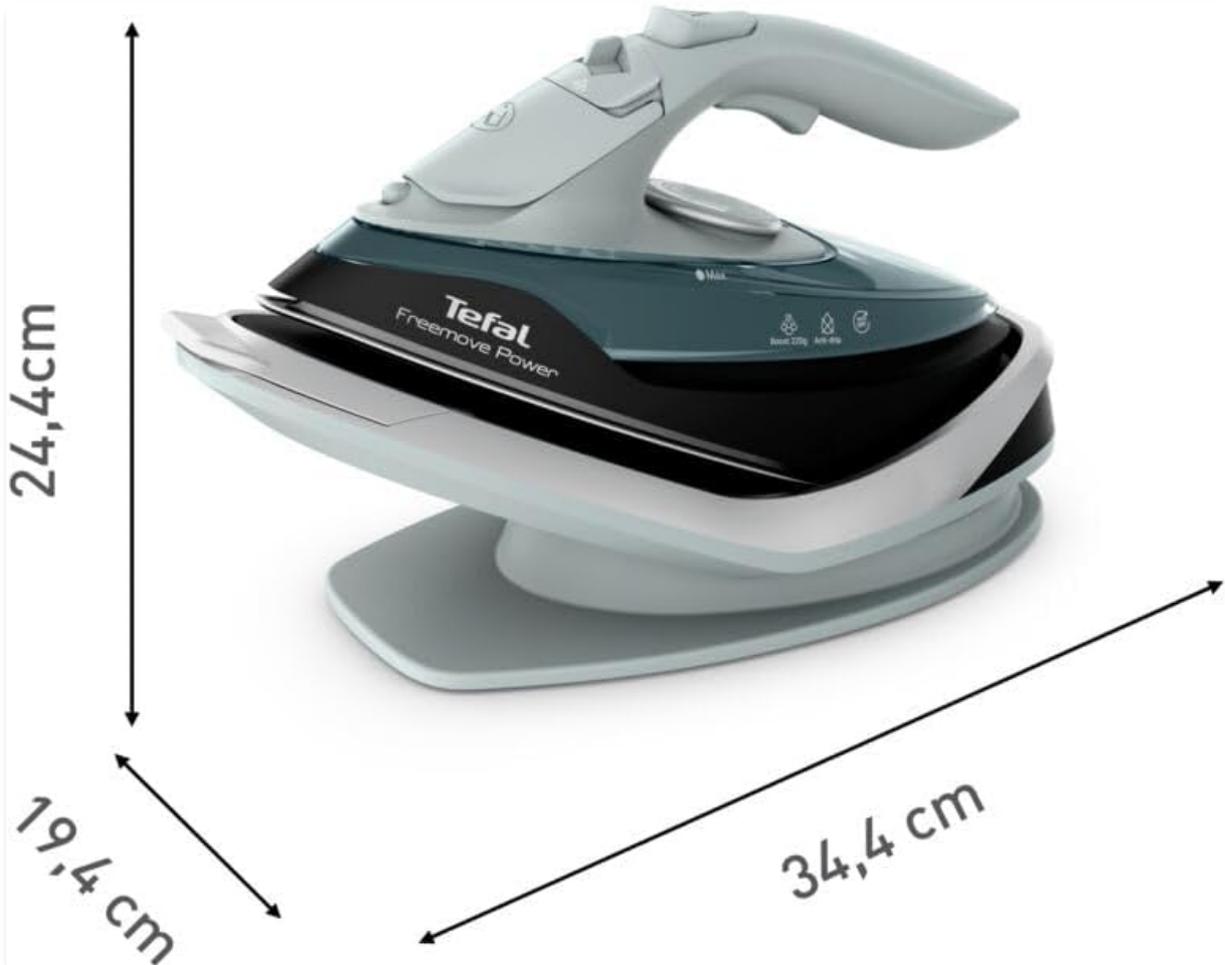


Image 6.1: Product dimensions for the Tefal FV6670 Freemove Power Cordless Steam Iron.

7. WARRANTY AND SUPPORT

This product is backed by a manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your purchase or contact Tefal customer support. Tefal is committed to product longevity, offering 15-year reparability with parts available through 6200 repair centers worldwide.

For technical assistance, spare parts, or service, please visit the official Tefal website or contact their customer service helpline in your region.