

[Manuals.plus](#) /

› [LUMISOL](#) /

› LUMISOL 75-inch TV Stand with 44-inch Electric Fireplace User Manual (Model FA42V60L-6)

LUMISOL FA42V60L-6

LUMISOL 75" TV Stand with 44" Electric Fireplace User Manual

Model: FA42V60L-6 | **Brand:** LUMISOL

1. INTRODUCTION

Thank you for purchasing the LUMISOL 75" TV Stand with 44" Electric Fireplace. This entertainment center is designed to accommodate TVs up to 80 inches and features a built-in electric fireplace with realistic log-like flame effects. It includes two cabinets with barn doors for storage. This manual provides essential information for safe assembly, operation, and maintenance of your new product.



Figure 1.1: The LUMISOL 75" TV Stand with 44" Electric Fireplace, showcasing its design and functionality in a living room environment.

2. SAFETY INFORMATION

Please read all safety warnings and instructions carefully before assembly and use to prevent injury or damage. Keep this manual for future reference.

- **Electrical Safety:** Ensure the electric fireplace is connected to a properly grounded outlet. Do not overload electrical circuits. Keep power cords away from heated surfaces and foot traffic.
- **Placement:** Position the TV stand on a flat, stable surface. Avoid placing it near flammable materials, curtains, or in areas with high humidity.
- **Weight Capacity:** The top surface of the TV stand is designed to support televisions up to 80 inches and a maximum weight of **75 pounds (34 kg)**. Do not exceed this weight limit.
- **Ventilation:** Ensure adequate clearance around the electric fireplace for proper ventilation. Do not block air vents.
- **Children and Pets:** Keep children and pets away from the fireplace and moving parts. Supervise children when the fireplace is in operation.
- **Assembly:** Follow all assembly instructions precisely. Do not use power tools for assembly unless specifically instructed, as this may overtighten screws and damage the furniture.

3. PACKAGE CONTENTS

Your LUMISOL TV Stand and Electric Fireplace may arrive in multiple packages. Verify all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

Typical components include:

- TV Stand wooden panels (top, bottom, sides, shelves, barn doors)
- Electric Fireplace insert
- Hardware pack (screws, dowels, cam locks, hinges, handles)
- Remote control for fireplace
- Instruction manual for TV stand assembly
- Instruction manual for electric fireplace operation



Figure 3.1: Overall dimensions of the TV stand and an illustration indicating delivery in two separate packages (Box A and Box B).

4. ASSEMBLY AND SETUP

Assembly requires two adults. Clear a spacious area for assembly. Refer to the separate assembly instructions

included with your product for detailed, step-by-step guidance.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a soft, clean surface to prevent scratches.
2. **Identify Hardware:** Match all hardware to the parts list in the assembly manual.
3. **Assemble TV Stand Frame:** Follow the provided diagrams to connect the main panels of the TV stand.
4. **Install Shelves and Doors:** Secure internal shelves and attach the barn doors using the provided hinges and hardware.
5. **Insert Electric Fireplace:** Carefully slide the electric fireplace insert into the designated opening in the TV stand. Ensure it is flush and securely seated.

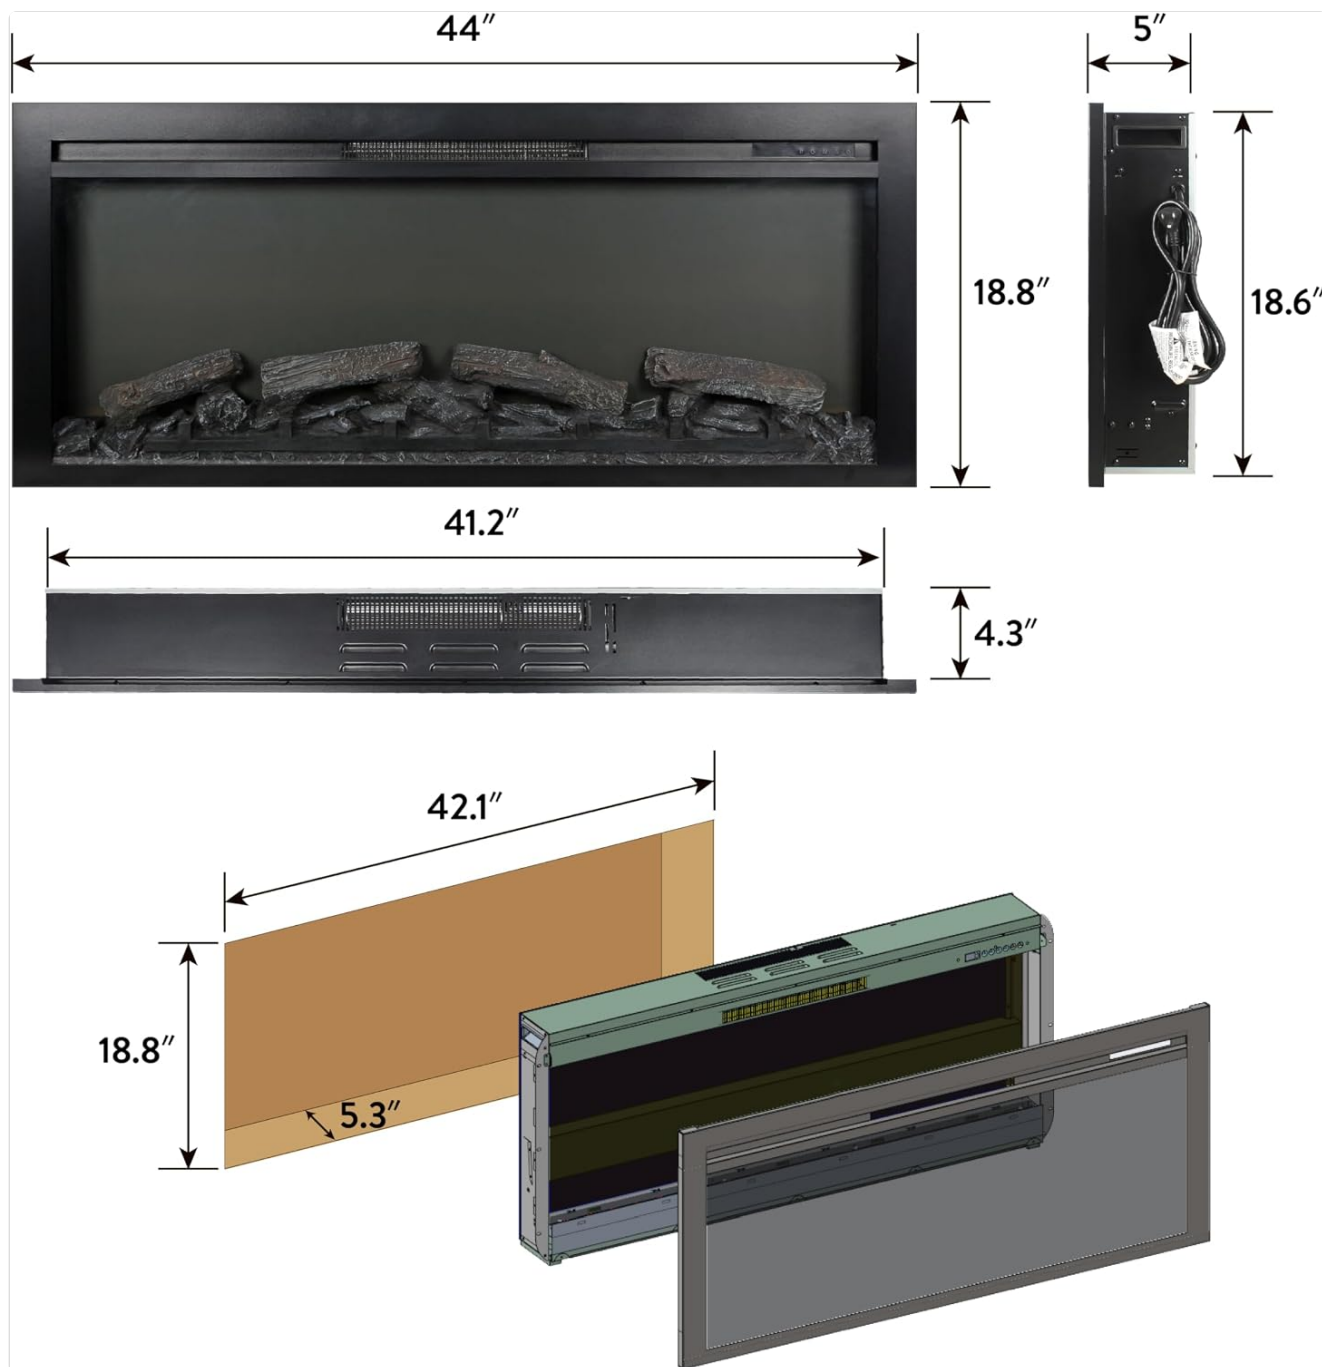


Figure 4.1: Detailed dimensions of the 44-inch electric fireplace insert, including its front panel, internal components, and depth requirements for installation.

After assembly, ensure all connections are tight and the stand is stable before placing a television or other items on it.

5. OPERATING INSTRUCTIONS (ELECTRIC FIREPLACE)

The electric fireplace can be operated using the control panel on the unit or the included remote control.

5.1. Control Panel and Remote Functions



Figure 5.1: The digital display and control buttons on the fireplace unit, along with the included remote control for convenient operation.

- **Power (U):** Press to turn the fireplace ON or OFF.
- **Heat ())) :** Activates or deactivates the heating function. The fireplace has a power rating of 1400 W / 5000 BTU.
- **Temperature (↑↓):** Adjusts the heat output. The temperature can be set from 64°F to 82°F (11 settings).
- **Flame Brightness (G):** Cycles through 3 levels of flame brightness.
- **Timer (C):** Sets the operating duration from 1 to 9 hours. The fireplace will automatically shut off after the set time.
- **Digital Display:** Shows current temperature setting or timer duration.

5.2. Realistic Flame Effect

The fireplace features an advanced electronic technology to create a realistic log-like flame effect, enhancing the ambiance of your room. The flame effect can be operated independently of the heating function.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your TV stand and electric fireplace.

- **Cleaning the TV Stand:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Cleaning the Fireplace:** Ensure the fireplace is turned off and unplugged before cleaning. Use a soft, dry cloth to clean the exterior. Do not spray liquids directly onto the unit.
- **Dust Removal:** Periodically vacuum or wipe dust from the air intake/output vents of the fireplace to maintain proper airflow.
- **Cord Inspection:** Regularly inspect the power cord for any signs of damage. If damaged, discontinue use and contact a qualified electrician.

7. TROUBLESHOOTING

If you encounter issues with your LUMISOL TV Stand or Electric Fireplace, refer to the following common solutions:

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, power switch off, circuit breaker tripped.	Check power cord connection, ensure wall switch is on, reset circuit breaker.
No heat output.	Heat function not activated, temperature set too low, thermal cut-off activated.	Press the Heat button, increase temperature setting, unplug unit for 15 minutes to reset thermal cut-off.
Remote control not working.	Dead batteries, obstruction, remote out of range.	Replace batteries, remove obstructions, operate remote within recommended range.
Flame effect not visible.	Flame brightness set to minimum or off.	Adjust flame brightness setting using the control panel or remote.

If the problem persists after attempting these solutions, please contact LUMISOL customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	LUMISOL
Model Name	FA42V60L-6
Overall Assembled Length	75 inches (190.5 cm)
Overall Assembled Width (Depth)	15.5 inches (39.4 cm)
Overall Assembled Height	25.5 inches (64.8 cm)

Feature	Detail
Product Weight	132.94 Pounds (60.3 kg)
Main Material	Tempered Glass, Stainless Steel, MDF
Color	Gray Wash
Fireplace Type	Electric Insert
Fireplace Power Rating	1400 W / 5000 BTU
Temperature Settings	11 settings (64°F to 82°F)
Timer Settings	1 – 9 hours
Flame Brightness Levels	3 levels
Remote Control	Included

9. WARRANTY AND SUPPORT

Specific warranty details for the LUMISOL 75" TV Stand with 44" Electric Fireplace (Model FA42V60L-6) are typically provided with your purchase documentation or can be obtained directly from the retailer or manufacturer. Please retain your proof of purchase for warranty claims.

For technical assistance, missing parts, or warranty inquiries, please contact LUMISOL customer support through the retailer where the product was purchased or visit the official LUMISOL website for contact information.