

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Shark](#) /

> [Shark FlexBreeze Pro Mist Fan - Indoor & Outdoor User Manual](#)

## Shark FA302WH

# Shark FlexBreeze Pro Mist Fan

Model: FA302WH

## IMPORTANT SAFETY INFORMATION

---

Please read all instructions carefully before using your Shark FlexBreeze Pro Mist Fan. Keep this manual for future reference.

- Always ensure the fan is placed on a stable, level surface.
- Do not immerse the fan or power cord in water or other liquids.
- Unplug the fan from the power outlet when not in use, before cleaning, or when moving.
- Keep fingers, hair, and loose clothing away from the fan blades during operation.
- Use only clean, fresh water in the misting tank. Do not add chemicals or other substances.
- Do not operate the fan with a damaged cord or plug.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

## WHAT'S INCLUDED

---

- FlexBreeze Pro Mist Fan Head
- Pedestal Pole (2-Piece)
- Pedestal Base
- Portable Misting Tank
- Charging Cable
- Remote Control
- Hose (for misting connection)

## SETUP

---

### 1. Assembly

The Shark FlexBreeze Pro Mist Fan can be assembled in two configurations: Pedestal Mode or Tabletop Mode.

#### **Pedestal Mode Assembly:**

1. Connect the two pieces of the pedestal pole.
2. Insert the assembled pole into the pedestal base, ensuring it clicks securely into place.
3. Attach the fan head to the top of the pedestal pole. Ensure the connection is firm.
4. If using the misting function, attach the portable misting tank to the designated slot on the pedestal pole and connect the hose from the tank to the fan head.





Image: The Shark FlexBreeze Pro Mist Fan fully assembled in pedestal mode, showing the fan head, pole, base, and integrated misting tank.

**Tabletop Mode Assembly:**

1. Detach the fan head from the pedestal pole by pressing the release button.
2. Extend the integrated tripod legs on the base of the fan head for stable placement on a tabletop.
3. If using the misting function, the portable misting tank can be placed separately next to the fan head and connected via the hose.



## Transform to tabletop with the touch of a button

Image: A woman demonstrating how to transform the Shark FlexBreeze fan from pedestal to tabletop mode by detaching the fan head from the pole.

### **2. Initial Charging**

Before first use, fully charge the fan using the provided charging cable. The battery indicator lights will show charging progress.



Customize your  
cool remotely

Image: The Shark FlexBreeze fan in pedestal mode, plugged into a wall outlet with its charging cable, illustrating corded operation and charging.

### 3. Filling the Misting Tank

To use the misting function, fill the portable misting tank with clean, fresh water. You may add ice for cooler misting. Ensure the tank is securely closed before connecting it to the fan.



**Attach for outdoor mist,  
and detach for indoor breeze**

Image: A man attaching the portable misting tank to the Shark FlexBreeze fan, demonstrating the connection for outdoor misting.



## Mist beyond the backyard No hose needed

Image: The Shark FlexBreeze fan in tabletop mode, misting outdoors with its portable tank placed nearby, highlighting its use without a hose connection.

### OPERATING INSTRUCTIONS

#### Fan Controls:

The fan features multiple speed settings and breeze modes for customized cooling. Use the control panel on the fan head or the remote control.

- **Power Button:** Press to turn the fan ON/OFF.
- **Fan Speed:** Cycle through 5 fan speeds (1-5) including BreezeBoost for maximum airflow.
- **Breeze Modes:** Select from Natural Breeze or Eco Mode for varying airflow patterns.
- **Oscillation:** Activate 180-degree side-to-side oscillation for wider coverage.
- **Tilt:** Manually adjust the fan head's tilt up to 55 degrees for directional airflow.

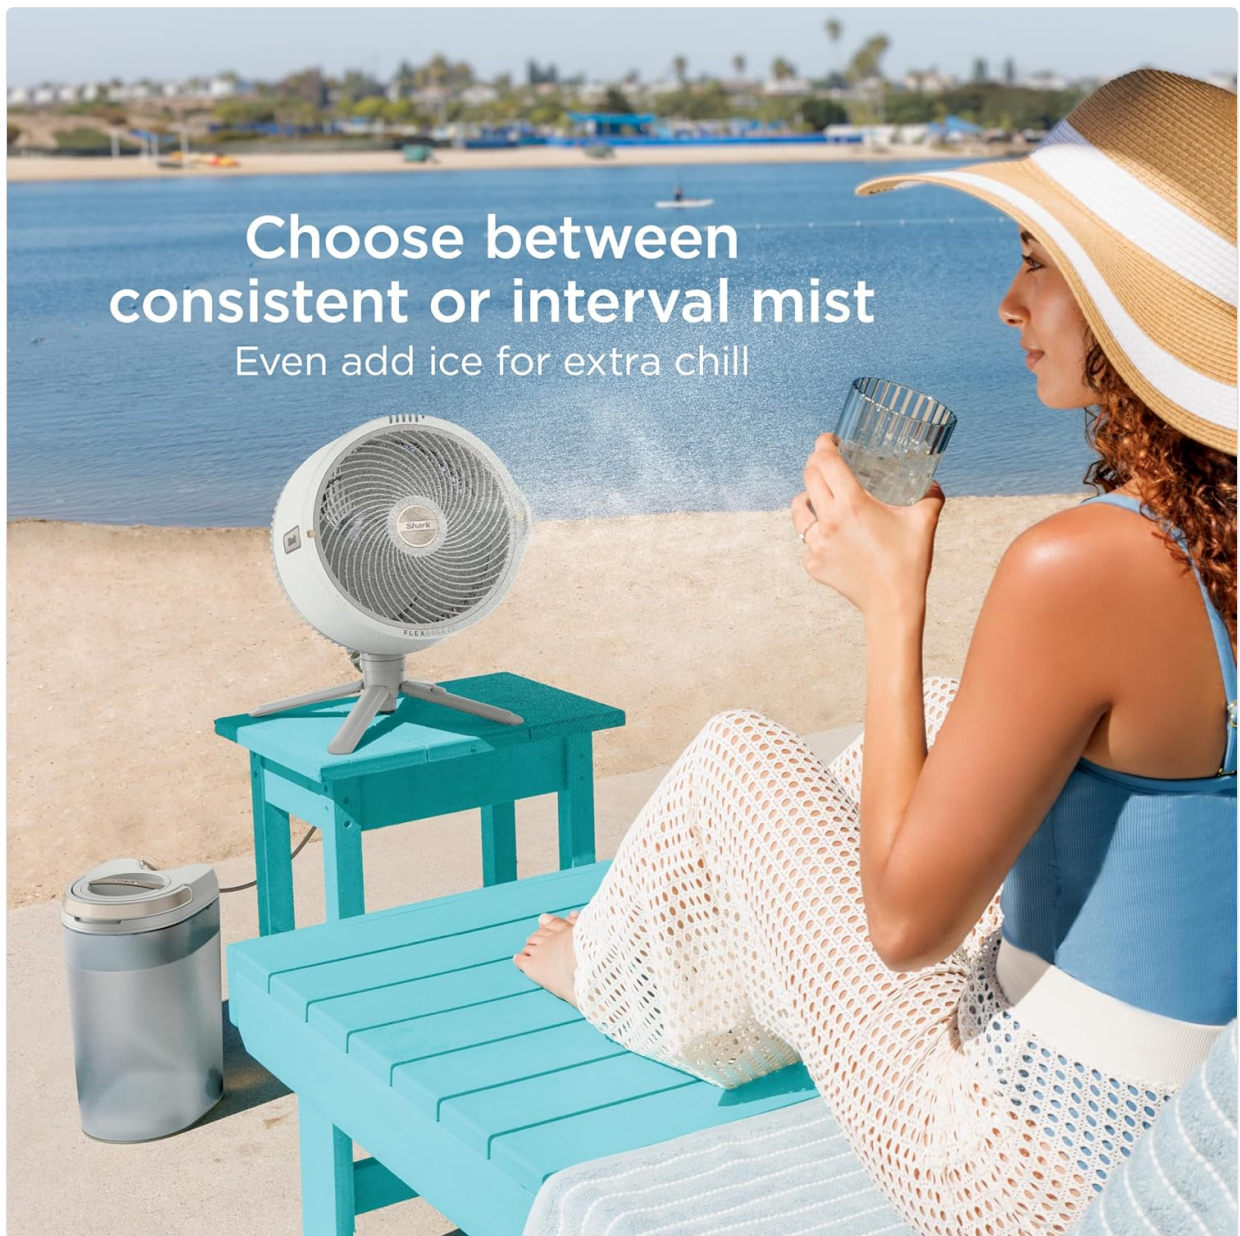


Image: A woman using the remote control to adjust settings on the Shark FlexBreeze fan, emphasizing remote customization.

### **Misting Controls:**

The misting function can be activated independently or in conjunction with the fan.

- **Misting Button:** Press to activate misting. Cycle between high-consistent, low-consistent, and low-interval mist modes.
- Ensure the misting tank is filled and properly connected for optimal performance.



Ultra-powerful  
Feel the breeze up to  
**70 feet\***

\*Based on highest fan speed.

Image: A woman relaxing outdoors with the Shark FlexBreeze fan providing mist, illustrating the choice between consistent or interval mist and the option to add ice.

### **Cordless vs. Cordless Operation:**

The fan offers flexible power options.

- **Corded:** Plug the fan into a power outlet for continuous operation.
- **Cordless:** Utilize the integrated battery for portable use. Battery life varies by speed setting (up to 24 hours at speed 1, 6 hours at speed 3, 2 hours at max speed).



Image: The Shark FlexBreeze fan in pedestal mode, plugged into a wall outlet with its charging cable, illustrating corded operation and charging.

## MAINTENANCE

---

### Cleaning the Fan:

- Always unplug the fan before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.
- For the fan blades, use a soft brush or vacuum cleaner attachment to remove dust.

### Misting Tank Care:

- Empty and rinse the misting tank after each use to prevent mineral buildup.
- For stubborn mineral deposits, use a solution of white vinegar and water.
- Ensure the tank is completely dry before storing.

### Storage:

Store the fan in a cool, dry place when not in use. If storing for an extended period, ensure the battery is fully charged and the misting tank is empty and dry.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan not turning on	No power; Low battery; Power button not pressed correctly.	Ensure fan is plugged in or battery is charged. Press power button firmly.
Misting not working	Misting tank empty; Hose not connected; Misting nozzles clogged.	Fill misting tank. Securely connect hose. Clean misting nozzles.
Reduced misting range	Low fan speed; Wind conditions.	Increase fan speed. Relocate fan to a less windy area.
Short battery life	Operating at high speeds/boost mode.	Reduce fan speed for extended battery life. Max speed provides approx. 2 hours.

## SPECIFICATIONS

**Brand:** Shark

**Model Name:** FlexBreeze Pro Mist

**Model Number:** FA302WH

**Power Source:** Battery Powered / Corded Electric

**Product Dimensions:** 13.93"D x 13.93"W x 36.77"H

**Item Weight:** 15.42 Pounds

**Wattage:** 36 watts

**Air Flow Capacity:** 956 Cubic Feet Per Minute

**Number of Power Levels:** 5

**Special Features:** Adjustable Height, Misting, Oscillating, Portable, Remote Controlled

**Indoor/Outdoor Usage:** Indoor, Outdoor

**Batteries:** 1 P76 battery required (included)

## WARRANTY AND SUPPORT

For warranty information or product support, please refer to the warranty card included with your purchase or visit the official Shark website. You may also contact Shark customer service for assistance.

**Website:** [www.sharkclean.com](http://www.sharkclean.com)