

MyMini MWSKGR5BB

MyMini 5-inch Noodle Cooker & Skillet Electric Hot Pot User Manual

Model: MWSKGR5BB

Brand: MyMini

INTRODUCTION

The MyMini 5-inch Noodle Cooker & Skillet Electric Hot Pot is a compact and versatile appliance designed for efficient cooking in small spaces. This manual provides essential information for safe and effective use, maintenance, and troubleshooting of your electric hot pot.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The MyMini Noodle Cooker & Skillet consists of the following main components:

- **Main Heating Base:** The core unit with the heating element and power indicator light.
- **Non-Stick Skillet:** A removable 5-inch non-stick pan with a cool-touch handle, ideal for cooking noodles, pasta, stir-fries, and more.
- **Transparent Lid:** A glass lid with a cool-touch knob to cover the skillet during cooking.
- **Power Cord:** Detachable power cord for connecting to an electrical outlet.



Image: Disassembled MyMini Noodle Cooker & Skillet, showing the main heating base, the removable non-stick skillet with handle, and the transparent lid with knob.



Image: The MyMini Noodle Cooker highlighting its two cooking surfaces: the removable non-stick skillet for ramen, eggs, and stir-fry, and the lower non-stick cooking surface for pancakes or burgers.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Cleaning:** Before first use, wash the non-stick skillet and transparent lid with warm, soapy water. Rinse thoroughly and dry completely. Wipe the main heating base with a damp cloth. Do not immerse the heating base in water.
3. **Placement:** Place the main heating base on a stable, heat-resistant, and dry surface.
4. **Assemble:** Place the non-stick skillet onto the main heating base. Ensure it is seated properly.
5. **Power Connection:** Insert the power cord into the appliance's power socket, then plug the other end into a standard 120V electrical outlet.

OPERATING INSTRUCTIONS

The MyMini Noodle Cooker & Skillet is designed for simple, one-touch operation. It features a single power setting.

1. **Preheating:** Once plugged in, the red indicator light will illuminate, signaling that the appliance is preheating. Preheating typically takes 1-3 minutes.

2. **Cooking:**

- **For Noodles/Pasta/Soups:** Add water and desired ingredients to the non-stick skillet. Place the transparent lid on top. The appliance will maintain a consistent cooking temperature. Stir occasionally as needed.
- **For Stir-Fries/Eggs/Pancakes:** Lightly grease the non-stick skillet if necessary. Add your ingredients. The appliance will heat up quickly for efficient cooking. Use the transparent lid to retain heat or steam if desired.
- **Using the Lower Surface:** For items like pancakes or small patties, you can also use the lower non-stick surface directly on the heating base (without the removable skillet).

3. **Monitoring:** Always monitor your food during cooking. The transparent lid allows for easy viewing.

4. **Completion:** Once cooking is complete, unplug the appliance from the wall outlet. The indicator light will turn off.

5. **Serving:** Use the cool-touch handle to safely remove the skillet from the heating base.



Image: MyMini Noodle Cooker with a serving of cooked noodles and vegetables, demonstrating its compact size for on-the-go meals.



Image: MyMini Noodle Cooker containing a stir-fry dish, showcasing its versatility for various meal types.

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and performance of your MyMini Noodle Cooker & Skillet.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Skillet and Lid:** The non-stick skillet and transparent lid are dishwasher safe or can be washed by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. **Heating Base:** Wipe the exterior of the main heating base with a damp cloth. Do not use abrasive cleaners or scouring pads. **Never immerse the heating base in water or any other liquid.**
4. **Storage:** Ensure all parts are clean and dry before storing. Store the appliance in a cool, dry place. The detachable power cord can be stored separately or wrapped neatly.

TROUBLESHOOTING

If you encounter any issues with your MyMini Noodle Cooker & Skillet, please refer to the following common solutions:

- **Appliance not turning on:**
 - Ensure the power cord is securely plugged into both the appliance and a working electrical outlet.
 - Check if the electrical outlet is functional by plugging in another appliance.
- **Food not cooking evenly:**

- Ensure ingredients are spread evenly in the skillet.
- Stir food periodically during cooking to promote even heat distribution.
- **Indicator light not working:**
 - If the appliance is heating but the light is off, there might be an issue with the indicator light itself. The appliance may still be functional.
 - If the appliance is not heating and the light is off, refer to "Appliance not turning on" steps.

For issues not covered here, please contact MyMini customer support.

SPECIFICATIONS

Brand	MyMini
Model Number	MWSKGR5BB
Color	Gray
Material	Aluminum, Plastic
Product Dimensions	5.25"D x 6.5"W x 3.7"H
Wattage	700 watts
Voltage	120 Volts
Item Weight	4 Pounds
Special Features	Non-Stick Surface, Compact and Lightweight, Cool-Touch Handle, Preheat Indicator Light
Included Components	1 electric skillet, 1 transparent lid, and a user manual

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or contact the manufacturer directly. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question