

**Hisense BIM320G41X**

# Hisense BIM320G41X 20L Built-in Microwave Oven Instruction Manual

Model: BIM320G41X

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Hisense BIM320G41X 20L built-in microwave oven. Please read these instructions thoroughly before using the appliance and retain them for future reference.

The Hisense BIM320G41X is a 20-liter built-in microwave oven with 1000W power, offering 5 power levels, 15 preset programs, a grill combo function, and defrosting options by time or weight. It features an Eco function for energy saving and hydrolytic cleaning for easy maintenance.

## 2. SAFETY INFORMATION

### General Safety Precautions:

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Always use microwave-safe cookware. Metal containers or dishes with metallic trim are not suitable for microwave cooking.
- Supervise children closely when the microwave is in use. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Liquids and other foods must not be heated in sealed containers since they are liable to explode.

- Do not heat eggs in their shell or whole hard-boiled eggs in the microwave oven as they may explode, even after microwave heating has ended.
- Regularly clean the oven and remove any food deposits. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

#### **Child Lock Function:**

The Hisense BIM320G41X includes a child lock feature to prevent accidental operation. Refer to the "Operation" section for instructions on how to activate and deactivate this function.



*Image: Illustration of the child lock feature, showing a child reaching for the microwave control panel with a lock icon overlay.*

## **3. PRODUCT OVERVIEW**

The Hisense BIM320G41X is designed for seamless integration into your kitchen cabinetry. It features a sleek stainless steel finish and an intuitive control panel.



Image: Front view of the Hisense BIM320G41X built-in microwave oven, showcasing its stainless steel exterior and black glass door.

## Components and Controls:

- **Control Panel:** Digital display and touch/dial controls for various functions.
- **Oven Cavity:** Interior space for cooking.
- **Glass Turntable:** Rotates food for even cooking.
- **Grill Rack:** For use with the grill function, included with the microwave.
- **Door:** Opens to access the oven cavity.
- **LED Illumination:** Energy-efficient interior lighting for clear visibility during cooking.



Image: Detailed view of the microwave's control panel with digital display and buttons, alongside a glimpse into the interior cavity with the grill rack and turntable.



Image: The interior of the microwave oven illuminated by LED lighting, highlighting the grill rack and turntable.

## 4. INSTALLATION

This microwave oven is designed for built-in installation. Ensure proper ventilation and follow the dimensions provided for cabinet integration.

### Installation Dimensions:

- **Product Dimensions (H x W x D):** 38.8 cm x 59.5 cm x 34.4 cm
- **Required Cabinet Opening (H x W x D):** Approximately 38 cm x 56 cm x 55 cm (minimum depth). Refer to the diagram for precise measurements.



*Image: Technical drawing showing the dimensions of the Hisense BIM320G41X microwave and the recommended cabinet opening for built-in installation.*

### Installation Steps:

1. Prepare the cabinet opening according to the specified dimensions.
2. Ensure adequate ventilation space around the appliance.
3. Carefully slide the microwave into the prepared opening.
4. Secure the microwave to the cabinet using the provided screws and mounting brackets.
5. Connect the power cord to a grounded electrical outlet.

**Warning: Installation should be performed by a qualified technician to ensure safety and proper operation.**

## 5. OPERATING INSTRUCTIONS

Your Hisense BIM320G41X microwave offers various cooking modes and functions for versatile meal preparation.

### 5.1 Power Levels

The microwave features 5 power levels, allowing precise control over cooking intensity, from gentle warming to rapid heating.



## 5 Niveles de Potencia

Microondas con 5 niveles de potencia y descongelación para mayor flexibilidad y una cocción precisa.



*Image: Visual representation of the 5 power levels (10%, 30%, 50%, 80%, 100%) suitable for different food types like ice cream, meat, fish, and vegetables.*

- **100% Power (1000W):** For fast cooking and reheating.
- **80% Power:** For general cooking.
- **50% Power:** For medium cooking, such as baking or simmering.
- **30% Power:** For defrosting or delicate cooking.
- **10% Power:** For softening butter or ice cream.

## 5.2 Preset Programs

Utilize the 15 pre-set automatic programs for common dishes, simplifying your cooking process. These programs are optimized for various food types, from popcorn to beverages.



## 15 Programas Preestablecidos

Microondas Hisense con nueve programas automáticos para hacer tus recetas favoritas más fáciles de preparar, desde palomitas hasta bebidas.




*Image: Icons representing various preset programs including heating, meat, vegetables, pasta, potatoes, fish, beverages, and popcorn.*

To use a preset program:

1. Place food in the microwave.
2. Select the desired preset program from the control panel.
3. The microwave will automatically set the cooking time and power level.
4. Press start to begin cooking.

## 5.3 Grill Combo Function

The grill combo function allows you to cook with the grill alone or combine it with microwave power for faster, crispier results. Ideal for dishes like grilled meat, chicken wings, or pizza.

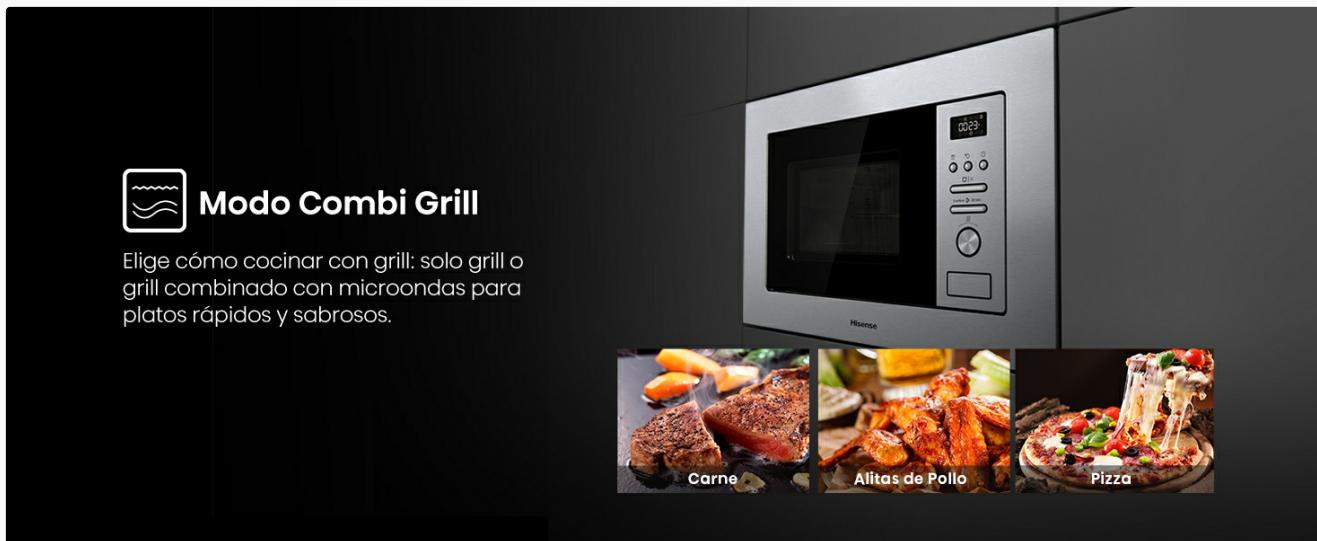


*Image: The Hisense microwave installed in a kitchen, with examples of food cooked using the grill combo function: meat, chicken wings, and pizza.*

When using the grill function, ensure you use the provided grill rack and appropriate heat-resistant cookware.

## 5.4 Defrost Function

Defrost food quickly and evenly by time or weight, ensuring optimal thawing without cooking the edges.

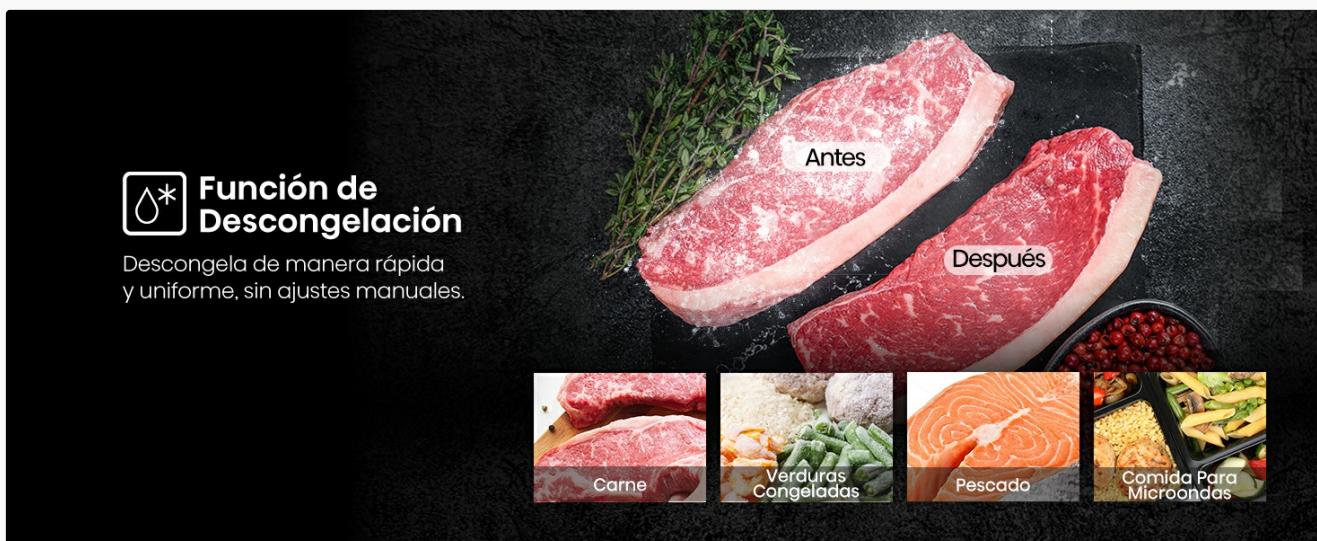

*Image: Before and after comparison of frozen meat, alongside icons for various food types suitable for defrosting: meat, frozen vegetables, fish, and microwaveable meals.*

To defrost by weight, select the defrost function and input the weight of the food. The microwave will calculate the appropriate defrosting time. To defrost by time, simply set the desired duration.

## 5.5 Multi-Stage Cooking

Program multiple cooking stages in advance, combining microwave and grill functions for complex recipes. The oven will automatically transition between stages for perfect results.



*Image: Illustration showing a dish of baked potatoes and text indicating two stages: 1. Microwave, 2. Grill.*

## 6. MAINTENANCE

### 6.1 Eco Function

The Eco function helps conserve energy by turning off the LED display and clock when the microwave is not in use. This contributes to overall energy savings.



*Image: The Hisense microwave in a kitchen setting, with an overlay illustrating energy saving benefits of the Eco function, including reduced power consumption and LED display off.*

### 6.2 Hydrolytic Cleaning

Maintain a clean oven interior with the hydrolytic cleaning function. Place a tray of water inside the oven, and in approximately 30 minutes, the steam will loosen grease and dirt, making it easy to wipe clean.



## Auto-Limpieza Hidrolítica

Mantén el horno siempre limpio e impecable de forma rápida y segura. Coloca una bandeja llena de agua y en sólo 30 minutos, el vapor desincrustará la grasa y la suciedad.

*Image: A split image showing a steamy, dirty microwave interior on the left and a clean, sparkling interior on the right, illustrating the effectiveness of hydrolytic cleaning.*

## 6.3 General Cleaning

- Always unplug the microwave before cleaning.
- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners.
- Clean the interior with a mild detergent and water.
- The glass turntable can be removed and washed by hand or in a dishwasher.
- Ensure all parts are dry before plugging the microwave back in.

## 7. TROUBLESHOOTING

If you encounter issues with your microwave, refer to the table below for common problems and solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Microwave does not start.	Door not closed properly; power cord unplugged; fuse blown/circuit breaker tripped.	Ensure door is securely closed; check power connection; reset circuit breaker or replace fuse.
Food not heating.	Incorrect power level selected; cooking time too short; microwave-safe cookware not used.	Adjust power level and cooking time; ensure cookware is microwave-safe.
Turntable not rotating.	Turntable not correctly placed; debris under turntable.	Reposition turntable; clean under the turntable.
Sparks or arcing inside oven.	Metal objects inside; foil touching oven walls; food residue.	Remove all metal objects; ensure foil does not touch walls; clean oven interior.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Hisense
Model Number	BIM320G41X
Capacity	20 Liters
Microwave Power	1000 Watts
Power Levels	5
Preset Programs	15
Special Features	Eco Mode, Defrost, Turntable, Child Lock, Grill Combo, Hydrolytic Cleaning, Multi-Stage Cooking, LED Illumination
Installation Type	Built-in
Color	Inox (Stainless Steel)
Material	Stainless Steel
Product Dimensions (H x W x D)	38.8 cm x 59.5 cm x 34.4 cm
Weight	6 kg
Components Included	Grill, Microwave Rack

## 9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Hisense website. For technical support, service, or spare parts, please contact Hisense customer service. Keep your proof of purchase for any warranty claims.

© 2025 Hisense. All rights reserved.

### Related Documents - BIM320G41X

 <p><b>Microwave Encastre 20L</b> BIM320G41X</p> <p><b>Principais Características</b></p> <ul style="list-style-type: none"> <li><b>20L</b> Capacidade 20L</li> <li><b>AUTO</b> 23 prg. Auto</li> <li><b>*W</b> Aquecimento de 20s</li> <li><b>Lava</b> Lava Automática</li> <li><b>Modo Corte</b> Modo Corte</li> <li><b>Alimento para crianças</b> Alimento para crianças</li> <li><b>Modo ECO</b> Modo ECO</li> </ul>	<p><a href="#"><u>Hisense BIM320G41X 20L Built-in Microwave Oven - Specifications and Features</u></a></p> <p>Detailed specifications and features for the Hisense BIM320G41X 20L built-in microwave oven, including dimensions, cooking modes, performance, and installation guidance.</p>
 <p><b>Hisense</b> INSTRUCTIONS FOR USE OF A BUILT-IN MICROWAVE OVEN BIM320G41X</p>	<p><a href="#"><u>Hisense BIM320G41X Built-in Microwave Oven: Instructions for Use</u></a></p> <p>Comprehensive instructions for the Hisense BIM320G41X built-in microwave oven, covering safety precautions, usage, cleaning, and troubleshooting. Available in English, Spanish, and Portuguese.</p>
 <p><b>H20MOMSS4HGUK</b> Microwave oven, 20 L, 700 W, Touch control, Reflective glass</p> <p></p>	<p><a href="#"><u>Hisense H20MOMSS4HGUK Microwave Oven: 20L, 700W, Touch Control - Product Specifications</u></a></p> <p>Detailed product specifications for the Hisense H20MOMSS4HGUK microwave oven. Features include 20L capacity, 700W power, touch control, grill combo, defrost function, 9 preset programmes, and easy clean interior.</p>
 <p><b>H20MOMS4HG</b> Hisense</p> <p></p>	<p><a href="#"><u>Hisense H20MOMS4HG Mikrovalovna pečica - Tehnične specifikacije</u></a></p> <p>Podrobne tehnične specifikacije in funkcije za mikrovalovno pečico Hisense H20MOMS4HG, vključno z močjo, prostornino, programi in dimenzijami.</p>
 <p><b>Hisense</b></p>	<p><a href="#"><u>Hisense H20MOBS4HG / H20MOMS4HG Microwave Oven Instruction Manual</u></a></p> <p>Comprehensive instruction manual for the Hisense H20MOBS4HG and H20MOMS4HG microwave ovens, covering safety instructions, control panel operation, and various cooking modes.</p>



### [Hisense H25MOBS7HUK Microwave Oven - Features & Specifications](#)

Explore the Hisense H25MOBS7HUK microwave oven, a 25L capacity appliance with 900W power, 11 power levels, and advanced features like Tailored Cooking, Smart Cook, and Easy Cleaning. View detailed specifications and product information.