

bonsaii C283-A

bonsaii C283-A Auto Feed Micro Cut Shredder User Manual

Model: C283-A

1. INTRODUCTION

Thank you for choosing the bonsaii C283-A Auto Feed Micro Cut Shredder. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your shredder. Please read it thoroughly before use and keep it for future reference.

The bonsaii C283-A is designed for both automatic and manual document processing, offering a powerful auto-feed mode for up to 200 sheets and a manual feed for smaller quantities. Its low-noise design ensures a comfortable working environment, whether in an office or home setting. The shredder features a 31-liter large capacity bin with a 4x12mm micro-cut for enhanced privacy and efficient waste disposal. It also includes an energy-saving sleep mode and comes with a 1-year product warranty and dedicated customer support.

2. IMPORTANT SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, always follow these safety guidelines:

- Keep hands, hair, and loose clothing away from the paper entry slot.
- Do not allow children to operate the shredder.
- Do not insert flammable materials or aerosols into the shredder.
- Avoid overfilling the shredder beyond its maximum sheet capacity.
- Do not shred CDs/DVDs frequently; use only for occasional, small quantities.
- Regularly lubricate the blades with maintenance sheets (12 sheets included) to ensure optimal performance and longevity.
- Ensure the dustbox is correctly seated and the lid is closed before operation.
- In case of paper jam or overheating, the shredder will automatically stop. Refer to the troubleshooting section.

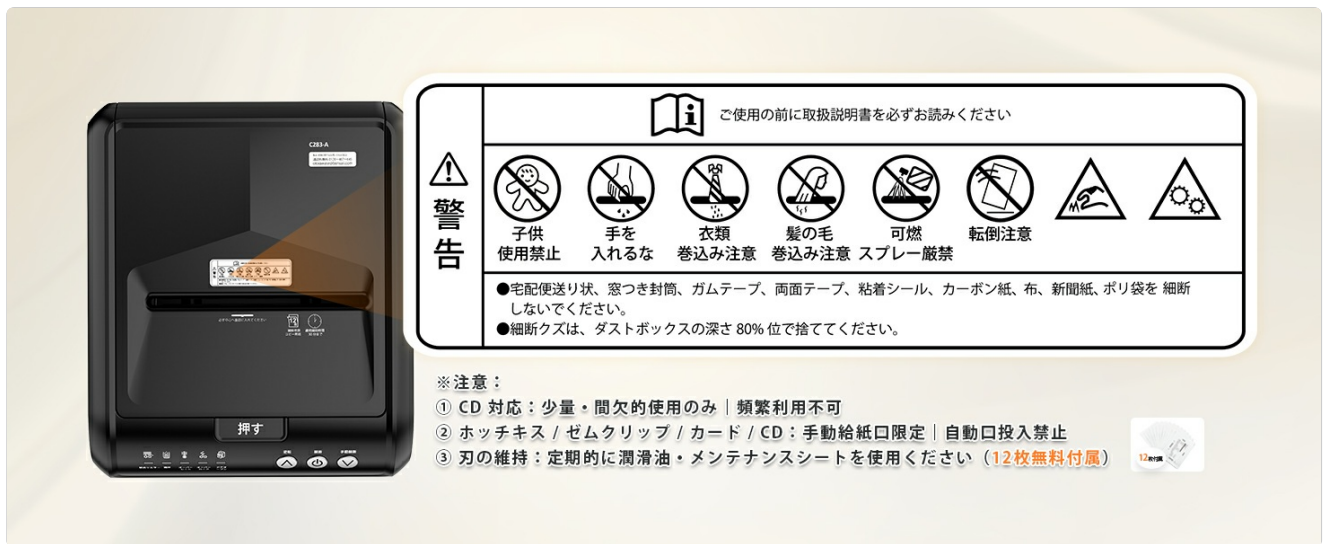


Image: Important safety warnings and usage guidelines for the shredder.

3. PRODUCT FEATURES

- **Auto-Feed Capacity:** Up to 200 sheets (A4 only) for continuous shredding.
- **Manual Feed Capacity:** Up to 12 sheets for quick shredding tasks.
- **Continuous Operation:** 60 minutes in auto-feed mode, 30 minutes in manual feed mode.
- **Shred Type:** Micro-cut (4x12mm) for high-security document disposal (DIN P-4 standard).
- **Quiet Operation:** Low noise level, ≤58dB, suitable for office and home environments.
- **Large Waste Bin:** 31-liter pull-out bin with hooks for easy garbage bag installation.
- **Shreddable Materials:** Paper, staples, paper clips, credit cards. (CDs/DVDs for occasional use only).
- **Safety Features:** Overheat protection, overload protection, bin full indicator, door open sensor, auto-reverse, auto-cleaning.
- **Energy Saving:** Automatic sleep mode after 10 minutes of inactivity.
- **Mobility:** Equipped with casters for easy movement.



Image: Key features of the bonsai C283-A shredder.



Image: Micro-cut size comparison and acceptable items for shredding.



Image: The shredder's quiet operation in an office setting.


4. SETUP

- Unpacking:** Carefully remove the shredder from its packaging. Retain packaging for future transport or storage.
- Placement:** Place the shredder on a flat, stable surface. Ensure adequate ventilation around the unit.
- Power Connection:** Plug the power cord into a standard electrical outlet.
- Waste Bin:** Ensure the 31-liter pull-out waste bin is correctly inserted and closed. You may install a garbage bag using the internal hooks for easier disposal.
- Power On:** Locate the main power switch on the back or side of the unit and switch it to the 'ON' position.



Image: Step-by-step guide for initial setup and operation.

4x12mm 細かく細断

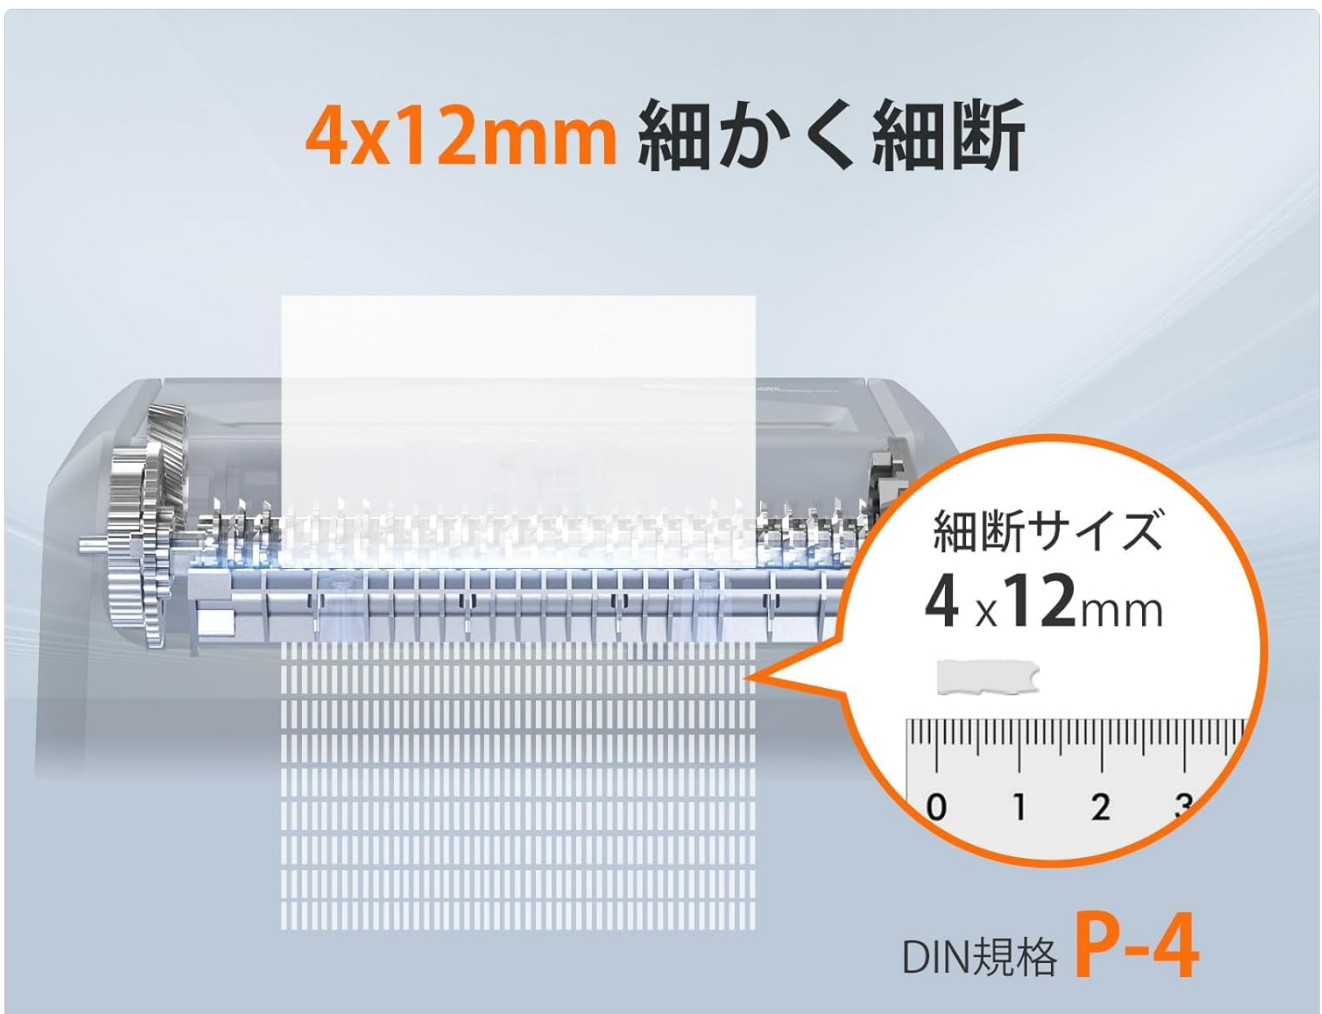

又を祝の 4mm
12mm

bonsai 😊

情報を読み取りにくし 5mm
35mm

Other



Image: The large capacity waste bin with bag hooks and casters.

5. OPERATING INSTRUCTIONS

5.1. Automatic Feed Mode

1. Ensure the shredder is powered on.
2. Open the auto-feed tray lid.
3. Stack up to 200 sheets of A4 paper neatly into the auto-feed tray.
4. Close the auto-feed tray lid. The shredder will automatically begin shredding.
5. The shredder can operate continuously for up to 60 minutes in this mode.

5.2. Manual Feed Mode

1. Ensure the shredder is powered on.
2. Insert up to 12 sheets of paper, or one credit card, into the manual feed slot.
3. The shredder will detect the paper and begin shredding.
4. This mode is suitable for shredding small quantities, including paper with staples or paper clips, and credit cards.
5. The shredder can operate continuously for up to 30 minutes in this mode.

Your browser does not support the video tag.

Video: Demonstration of the bonsai C283-A shredder's automatic and manual feed functions, including shredding paper, staples, and credit cards, and emptying the waste bin.



Image: Visual comparison of auto-feed and manual feed capabilities.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your shredder.

- **Emptying the Waste Bin:** Empty the waste bin regularly, especially when the 'Bin Full' indicator lights up. Do not let it overflow to prevent paper jams and maintain cleanliness.
- **Blade Lubrication:** Use the provided lubrication sheets (12 included) periodically to maintain the cutting blades. This is crucial for smooth operation and extending the life of the shredder.
- **Cleaning:** Wipe the exterior of the shredder with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Auto-Cleaning Function:** The shredder features an auto-cleaning function that automatically reverses the blades for 1-3 seconds when powered on and after each shredding cycle to clear small paper debris.



Image: The shredder in an office, emphasizing the use of maintenance sheets.

オートクリーニング機能

自動で清掃運転を行い、刃に残った細断くずを落とします。



※毎回電源をオンにする時：自動的に逆転1~3秒
※毎回細断終了時：2~3秒回転を延長して逆転1~3秒

オートリバース機能

紙詰まりを防ぐため、正しく細断されないと自動的に刃が逆転します。



※規格の枚数を超える ※斜めに紙を入れる
※その他の誤った使い方

省エネルギー設計

10分以上作業されていない場合、スリープモードになっています。



※「細断」ボタンを押して機械をスタートさせます。

Image: Details on auto-cleaning, auto-reverse, and energy-saving features.

7. TROUBLESHOOTING

If you encounter issues with your shredder, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Shredder does not start.	Power switch off, power cord loose, waste bin not properly inserted, lid not closed.	Ensure power switch is ON, power cord is secure, waste bin is fully inserted, and lid is closed.
Paper jam.	Overfeeding, paper inserted incorrectly.	Press the 'Reverse' button to clear the jam. If persistent, unplug, remove paper manually, and re-lubricate blades.
Overheat indicator (red light) is on.	Continuous operation exceeding duty cycle.	Allow the shredder to cool down for at least 30 minutes. The light will turn off when ready for use.
Overload indicator (red light) is on.	Too much paper inserted at once.	Reduce the amount of paper. Use the 'Reverse' button to clear any partially shredded paper.

Problem	Possible Cause	Solution
Bin full indicator (red light) is on.	Waste bin is full.	Empty the waste bin.
Door open indicator (red light) is on.	Waste bin is not properly closed or inserted.	Ensure the waste bin is fully and correctly inserted.



Image: Control panel indicators for various operational states.



Image: Waste bin and associated indicators.

8. SPECIFICATIONS

Feature	Specification
Model Number	JP-C283A-V1
Shred Type	Micro Cut
Shred Size	4x12mm
Auto Feed Capacity	200 sheets (A4)

Feature	Specification
Manual Feed Capacity	12 sheets
Continuous Run Time (Auto)	60 minutes
Continuous Run Time (Manual)	30 minutes
Waste Bin Capacity	31 Liters
Noise Level	≤58dB
Dimensions (D x W x H)	40.5 x 35 x 56.3 cm
Weight	15.1 kg
Power Source	Corded Electric
Color	Black
Origin	China

9. WARRANTY AND SUPPORT

bonsaii provides a **1-year product warranty** from the date of purchase. In the event of any malfunction or defect, please contact our dedicated customer support. Our professional staff in Japan will provide prompt, courteous, and thorough assistance. No international calls or overseas inquiries are necessary.

For support, please refer to the contact information provided with your product or visit the official bonsaii website.





日本国内サポート拠点



日本語でのお問い合わせ



迅速な対応



国内での修理対応



正規保証書付き

★ **日本語対応・国内サポートの安心保証**
 ご購入後も万全のアフターサービスをご提供します。お問い合わせは日本語で専任スタッフが日本国内から迅速に対応いたしますので、ご安心ください。

★ **保証と修理に関するご案内**
 製品保証期間は1年間です。万が一不具合が生じた場合、日本国内のサービスセンターにて迅速な修理・交換に対応させていただきます。

Image: Information regarding bonsaii's warranty and customer support services.