



Manuals.plus /

› T4TREAM /

› T4TREAM 60" Fluted Dresser with Sliding Doors and 4 Drawers, Natural Oak - Instruction Manual

T4TREAM FPSC602DDS-NO

T4TREAM 60" Fluted Dresser (Model FPSC602DDS-NO) - Instruction Manual

Natural Oak Finish with Sliding Doors and 4 Drawers

1. INTRODUCTION

Thank you for choosing the T4TREAM 60" Fluted Dresser. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.



Image 1.1: The T4TREAM 60" Fluted Dresser in Natural Oak.

2. SAFETY INFORMATION

WARNING: To prevent serious injury, always adhere to the following safety guidelines.

- Always supervise children when they are near the dresser to prevent injuries from splayed legs or curved edges.
- Use caution when assembling the dresser to avoid injury from tools or falling components.
- This furniture must be securely anchored to the wall using the provided anti-tip kit (feet metal plates and wall anchor) to prevent tipping. Failure to do so can result in serious or fatal crushing injuries.
- Do not allow children to climb on drawers or shelves.
- Do not place heavy items on top of the dresser that could cause it to become unstable.

3. PRODUCT SPECIFICATIONS

| Feature | Detail |
|-----------------------------------|--|
| Brand | T4TREAM |
| Model Name | FPSC602DDS-NO |
| Color | Natural Oak |
| Product Dimensions (D x W x H) | 16" x 60" x 32" |
| Material | Engineered Wood (FSC-Certified, Optimal MDF, P2 engineered wood), Melamine Veneer (Faux Marble Top) |
| Special Features | Blister Molding Surface, Curved Profile, Faux Marble Top, Fluted Panel Design, Sliding Doors |
| Mounting Type | Floor Mount (with included wall anchor) |
| Included Components | Assembly Instructions, Feet metal plates (anti-tip), Hardware, Repair stickers, Wall anchor |
| Assembly Required | Yes |

Dimensions

☑ Overall: 60" W × 16" D × 32" H

☑ Packaging Dimensions & Weight: 66" × 23" × 7.5", 132 lbs



*Feet metal plates are included to prevent furniture from tipping over

Image 3.1: Product Dimensions and Key Features.

4. ASSEMBLY INSTRUCTIONS

Assembly of the T4TREAM Fluted Dresser is designed to be straightforward. We recommend two adults for assembly. Please ensure all parts are present before you begin.

4.1. Before You Begin

- **Unpack Carefully:** Lay out all components on a soft, clean surface to prevent scratches.
- **Verify Parts:** Check the included hardware and components against the parts list in your separate assembly instructions booklet. Each component is meticulously labeled with serial numbers. A pack of spare parts is included in case of loss.
- **Tools Required:** Typically, a screwdriver (preferably a power drill/driver for efficiency) and a hammer are needed.

4.2. General Assembly Steps (Refer to your specific instruction booklet for detailed diagrams)

1. **Base Assembly:** Attach the splayed legs and the central steel support to the bottom panel of the

dresser. Ensure all connections are secure.

2. **Frame Construction:** Connect the side panels and back panel to the base and top support beams.
3. **Drawer Slides Installation:** Install the drawer slides onto the internal frame according to the instructions.
4. **Drawer Assembly:** Assemble the four drawers, ensuring the chic metal handles are properly attached.
5. **Sliding Door Mechanism:** Install the tracks and rollers for the sliding doors.
6. **Door and Shelf Installation:** Insert the adjustable shelves into the side cabinets and hang the sliding doors.
7. **Faux Marble Top Placement:** Carefully place the faux marble top onto the assembled frame.
8. **Anti-Tip Kit Installation:** Securely attach the feet metal plates and wall anchor to the dresser and your wall. This step is crucial for safety.

5. OPERATING INSTRUCTIONS

5.1. Sliding Doors

The dresser features two smooth-gliding sliding doors. To open or close, gently push the door along its track. The fluted panel design allows for a seamless look whether open or closed.



Image 5.1: Sliding Door and Adjustable Shelf.

5.2. Drawers

The four spacious drawers are designed for smooth operation. Pull the chic metal handle to open and push to close. Avoid forcing drawers if they feel stuck; check for obstructions.

4 Smooth Sliding Drawers

Keep your space tidy and organized



Image 5.2: Smooth Sliding Drawers with Chic Metal Handles.

5.3. Adjustable Shelves

The side cabinets feature adjustable shelves. To reposition a shelf, remove any items, lift the shelf, and place it on the desired shelf pins. Ensure the shelf is level and secure before placing items on it.

6. MAINTENANCE

Proper care will ensure the longevity and appearance of your T4TREAM dresser.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, especially on the faux marble top, which is water-resistant and easy to clean.
- **Spills:** Promptly wipe up any spills to prevent staining or damage.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration of the wood finish.
- **Hardware:** Periodically check and tighten all hardware connections to maintain stability.
- **Repair Stickers:** Use the provided repair stickers to cover any visible screw holes or minor imperfections for a cleaner finish.

60" Spacious Faux Marble Top

Elegant, waterproof, and easy-to-clean



Wear-Resistant



Waterproof

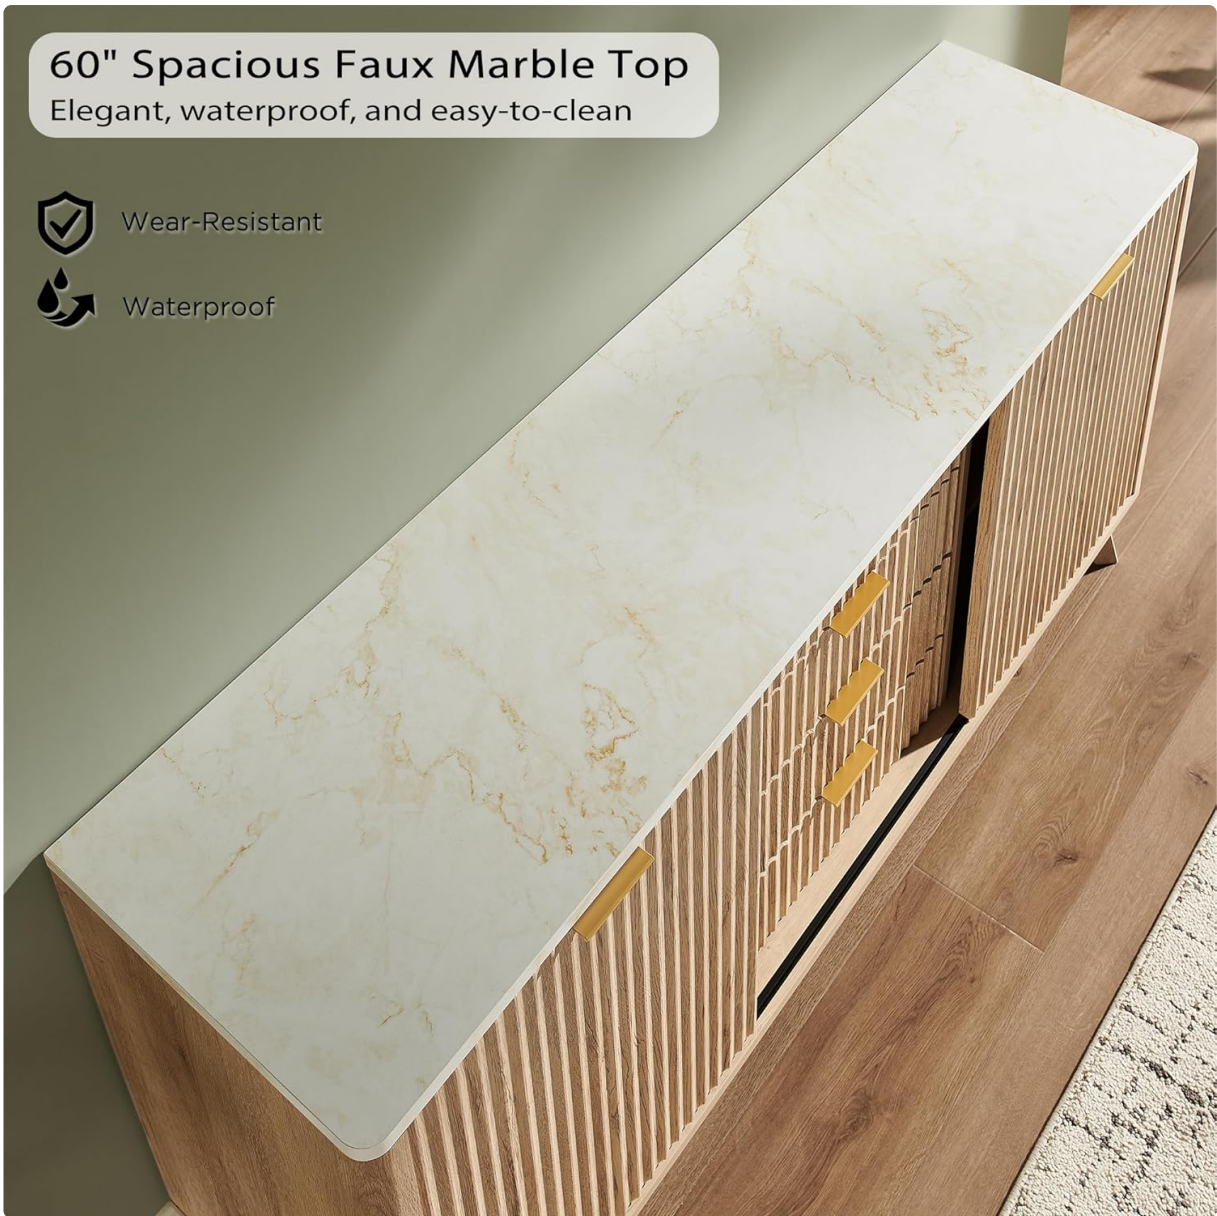


Image 6.1: Faux Marble Top - Wear-Resistant and Waterproof.

7. TROUBLESHOOTING

- **Damaged Packaging:** If the shipping box arrives damaged, do not be alarmed. The internal foam and wood protective boards are designed to shield your item from direct damage. Inspect the contents thoroughly.
- **Missing or Damaged Parts:** If any parts are missing or damaged upon inspection, please contact customer support immediately. Do not attempt to assemble with incomplete or damaged parts.
- **Drawers Not Sliding Smoothly:** Ensure drawer slides are correctly installed and aligned. Check for any obstructions within the drawer tracks.
- **Dresser Instability:** Verify that all screws and fasteners are tightened. Ensure the anti-tip kit is properly installed and secured to the wall.

8. WARRANTY AND SUPPORT

T4TREAM is committed to providing quality products. If you encounter any issues or have questions regarding your dresser, please do not hesitate to reach out to our customer support team. We are here to

assist you every step of the way.

For support, please refer to the contact information provided with your purchase documentation or visit the official T4TREAM website.