

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Oilsky](#) /

› [Oilsky D26 64GB MP3 Player with Bluetooth 5.0 User Manual](#)

Oilsky D26

Oilsky D26 64GB MP3 Player User Manual

Model: D26

INTRODUCTION

Thank you for purchasing the Oilsky D26 MP3 Player. This device combines a 2.8-inch full touchscreen with Bluetooth 5.0 connectivity, a built-in speaker, and a robust alloy design. It offers 64GB of internal storage, expandable up to 128GB with a microSD card, and supports various audio formats. This manual provides essential information for setup, operation, and maintenance to ensure optimal performance.

PACKAGE CONTENTS

Please check the package for the following items:

- Oilsky D26 MP3 Player Unit
- Earphones
- Type-C USB Cable
- Instruction Manual
- Protective Case

付属品



MP3プレーヤー



イヤホン



TypeCケーブル



保護ケース



日本語取扱説明書



Image: Contents of the Oilsky D26 MP3 Player package.

If any items are missing or damaged, please contact customer support.

PRODUCT OVERVIEW

The Oilsky D26 MP3 Player features a sleek alloy design with a 2.8-inch full touchscreen for intuitive navigation. It includes a home button for easy return to the main menu.



Image: Front view of the Oilsky D26 MP3 Player.

SETUP

1. Charging the Device

Before first use, fully charge the MP3 player. Connect the provided Type-C USB cable to the player's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status.

2. Inserting a microSD Card (Optional)

The device has 64GB of internal storage. To expand storage up to 128GB, insert a microSD card into the designated slot. Ensure the card is inserted correctly until it clicks into place.



Image: Inserting a microSD card into the player.

3. Transferring Files

Connect the MP3 player to your computer using the Type-C USB cable. The device will appear as a removable disk. You can then drag and drop audio files (MP3, WMA, APE, FLAC, AAC, WAV, OGG) into the player's internal storage or the inserted microSD card.

OPERATING INSTRUCTIONS

1. Basic Navigation

The D26 features a 2.8-inch full touchscreen. Tap icons to select functions and swipe to navigate menus. The physical home button at the bottom allows you to return to the main menu from any application.



Image: Touchscreen interaction on the MP3 player.

2. Music Playback

Tap the 'Music' icon on the main screen to access your audio library. The player supports various formats including MP3, WMA, APE, FLAC, AAC, WAV, and OGG, ensuring high-quality audio playback with minimal loss.

内蔵64GBメモリ



Image: Music playback interface and supported audio formats.

3. Bluetooth Connectivity

The D26 features Bluetooth 5.0 for stable wireless connections. To pair with Bluetooth headphones or speakers:

1. Go to 'Settings' and select 'Bluetooth'.
2. Turn on Bluetooth and scan for available devices.
3. Select your Bluetooth headphones or speaker from the list to pair.

Note: This device can only pair with Bluetooth headsets or speakers. It cannot pair with mobile phones, cars, or computers. Ensure you are in an area free from strong electromagnetic interference to maintain a stable Bluetooth connection.



Bluetooth 5.0

Bluetoothヘッドホン、Bluetoothスピーカーで接続可能です。



Image: Bluetooth 5.0 connectivity for wireless audio.

4. FM Radio

To use the FM radio function, connect the wired earphones (included) as they act as the antenna. Tap the 'FM Radio' icon on the main screen. You can then scan for stations and listen to broadcasts.

FMラジオ搭載

FMラジオ聴取、録音機能と多く機能があり、とても便利な商品です。

2.8in
タッチスクリーン

76-90MHz
周波段

410mAh
バッテリー



Image: FM Radio function with wired earphones.

5. Recording Function

The D26 includes a recording function, useful for lectures, meetings, or personal notes. Tap the 'Record' icon to start and stop recordings. Recorded files are saved on the device.



Image: Recording function in use.

6. Other Functions

The device also includes additional utilities such as a timer, calendar, and calculator. Access these features from the main menu.

多機能

様々な機能を備えております



Image: Main menu displaying various functions.

MAINTENANCE

- Keep the device dry. Avoid exposure to moisture or liquids.
- Clean the screen and body with a soft, dry cloth. Do not use abrasive cleaners.
- Avoid extreme temperatures.
- Do not attempt to disassemble or repair the device yourself.

TROUBLESHOOTING

Device not turning on:

- Ensure the device is fully charged.
- Press and hold the power button for a few seconds.

Cannot connect via Bluetooth:

- Ensure Bluetooth is enabled on both the player and the receiving device (headphones/speaker).
- Make sure the receiving device is in pairing mode.
- Confirm that you are attempting to pair with a compatible device (Bluetooth headphones or speakers only).
- Move away from potential sources of electromagnetic interference.

No sound:

- Check the volume level.
- Ensure earphones are properly connected or Bluetooth device is paired and connected.
- Test with different earphones or Bluetooth device.

Files not playing:

- Verify that the audio file format is supported (MP3, WMA, APE, FLAC, AAC, WAV, OGG).
- Ensure the files are not corrupted.

SPECIFICATIONS

Feature	Specification
Model Number	D26
Brand	Oilsky
Screen Size	2.8 inches
Display Technology	LCD
Internal Storage	64 GB
Expandable Storage	Up to 128GB via microSD card
Connectivity	Bluetooth 5.0
Supported Audio Formats	MP3, WMA, APE, FLAC, AAC, WAV, OGG
Other Functions	FM Radio, Built-in Speaker, Recording, Calculator, Timer, Calendar
Dimensions	14.7 x 14.6 x 1.9 cm
Weight	200 g

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the warranty card included in your package or contact the seller directly. If you encounter any issues or have questions regarding your Oilsky D26 MP3 Player, please reach out to our customer support team for assistance.

Contact Information: Please refer to the contact details provided on the product packaging or the seller's information page.

