

[Manuals.plus](#) /

› [Nsyee](#) /

› Nsyee 4K 64MP Digital Camera User Manual

Nsyee WD07

Nsyee 4K 64MP Digital Camera User Manual

Model: WD07

INTRODUCTION

This manual provides detailed instructions for the Nsyee 4K 64MP Digital Camera, Model WD07. Please read this manual thoroughly before using the camera to ensure proper operation and to maximize its features. Keep this manual for future reference.

Key Features

- **4K Video Recording:** Capture high-resolution videos with anti-shake technology, pause function, time-lapse, and slow-motion capabilities.
- **64MP Photo Resolution:** Take detailed photos with autofocus, 18x digital zoom, and various filters.
- **3.0" 180° Flip Screen:** Ideal for selfies and vlogging, offering flexible viewing angles.
- **Built-in Flash:** Ensures clear photos and videos in low-light conditions.
- **Multifunctional:** Includes features like date stamp, beauty face, smile & face detection, self-timer, and Wi-Fi transfer.
- **Webcam Functionality:** Use the camera for live streaming or video calls.

What's in the Box

Verify that all items listed below are included in your package:

- 1 x Nsyee 4K 64MP Digital Camera
- 1 x 64GB SD Card
- 2 x Rechargeable Batteries (BL-5C type)
- 1 x Type-C Charging Cable
- 1 x User Manual (this document)
- 1 x Lens Cap
- 1 x Lanyard
- 1 x Storage Bag



Figure 1: Nsyee 4K 64MP Digital Camera and its accessories.



Figure 2: Visual representation of all items included in the product package.

1. Battery Installation

1. Locate the battery compartment cover on the bottom of the camera.
2. Slide the cover to open it.
3. Insert a fully charged BL-5C battery into the compartment, ensuring the correct orientation according to the polarity indicators.
4. Close the battery compartment cover until it clicks securely into place.

2. SD Card Installation

1. Locate the USB/TF silicone cover on the side of the camera.
2. Gently pull out the silicone cover.
3. Insert the 64GB Micro SD card into the TF card slot with the gold contacts facing down, until it clicks into place.
4. Close the silicone cover to protect the ports.



Figure 3: Step-by-step guide for battery and SD card installation.

3. Charging the Battery

- Connect the Type-C charging cable to the camera's Type-C port.
- Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
- The charging indicator light will illuminate during charging and turn off when fully charged.
- It is recommended to fully charge the battery before first use.

OPERATING INSTRUCTIONS

 
 
Power On/Off

- To power on, press and hold the Power button until the screen illuminates.
- To power off, press and hold the Power button again until the screen turns off.

Taking Photos

1. Turn the mode dial to the Photo mode icon.
2. Frame your shot using the 3.0" flip screen.

3. Half-press the shutter button to activate autofocus. The focus frame will turn green when focus is achieved.
4. Fully press the shutter button to take the photo.

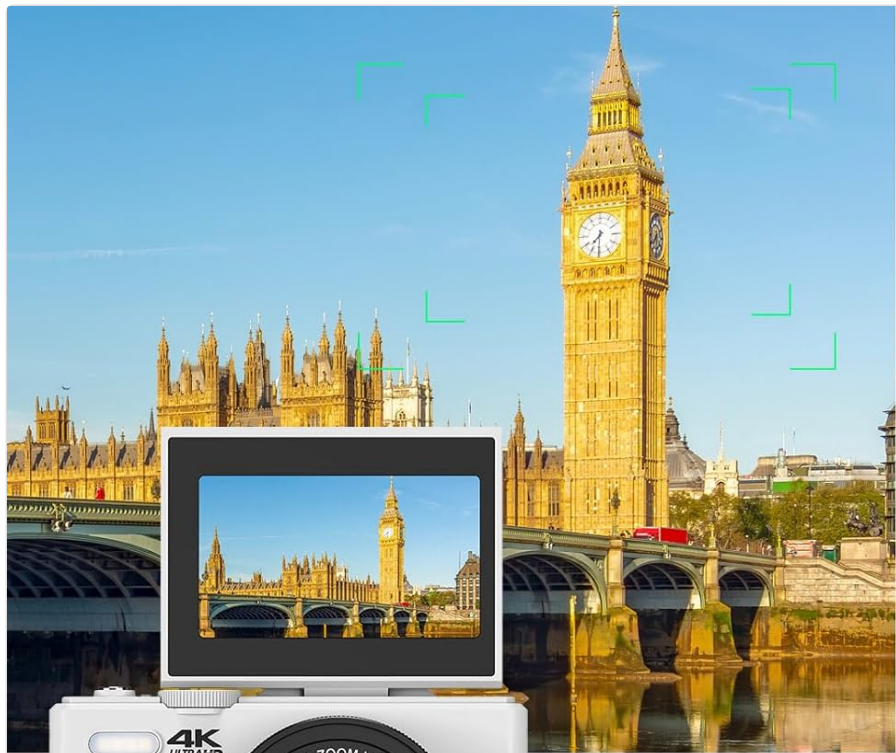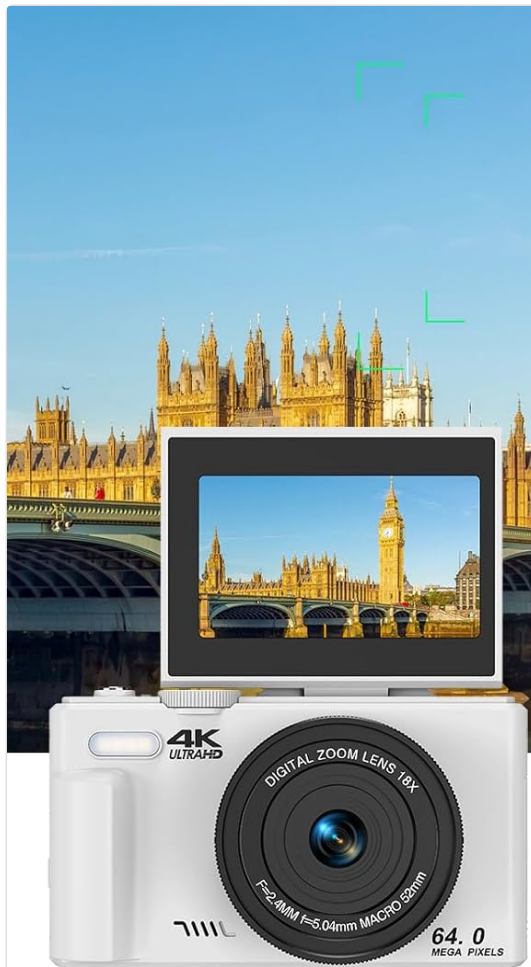

Auto Focus Camera

1. Half-press the shutter to focus
2. After autofocus, press the shutter button to take a photo



Others: Blurry Quality

Ours: Autofocus More Clear

Figure 4: Autofocus operation for clear photography.

64MP Autofocus Camera



Figure 5: Example of 64MP autofocus in action.

Recording Videos

1. Turn the mode dial to the Video mode icon.
2. Press the shutter button to start recording. A red recording indicator will appear on the screen.
3. Press the shutter button again to stop recording.
4. The camera supports 4K (3840p) and 1080p video resolutions.

UKD 4K 64MP Digital Camera

4K/30FPS 03:07:53

4K
ULTRA HD

1080P
FULL HD


video
4k30fps/2.7k30fps/
1080p60fps/720p60fps




photo
64mp/48mp/
24mp/8mp

Figure 6: Camera display showing video and photo resolution options.



Ultra-High Definition 4K Digital Camera

Easily capture UHD and true color images.

Figure 7: Capturing ultra-high definition 4K video.

Using the 180° Flip Screen

The camera features a 3.0-inch screen that can flip 180 degrees, allowing you to easily frame yourself for selfies and vlogs. Simply rotate the screen upwards until it faces you.



Figure 8: The 180° flip screen in action, perfect for vlogging and selfies.

Zoom Function

The camera supports 18x digital zoom. Use the zoom buttons (usually marked 'W' for Wide and 'T' for Telephoto) to adjust the zoom level. This allows you to capture distant subjects more closely.



Figure 9: Demonstrating the 18X digital zoom capability.

Using the Built-in Flash

The camera has a built-in flash for illuminating subjects in low-light conditions. The flash can be set to various modes (e.g., Auto, Fill Flash, Off) via the camera's menu settings. For optimal results, ensure the flash is enabled when shooting in dark environments.

Bright Flash, Night As Day

1150mAh*2 Long-lasting Standby

Exposure Compensation $-3.0\text{EV} \sim +3.0\text{EV}$

Figure 10: Capturing clear images in low light using the built-in flash.

Fill Light

OFF ON

Figure 11: Effect of the camera's fill light in dark environments.

Creative Shooting Modes

The camera offers several creative modes to enhance your photography and videography. Turn the mode wheel to switch between these options:

- **Timed Photo:** Set a delay (e.g., 2s, 5s, 10s, 15s, 30s) before the photo is taken, ideal for group shots or self-portraits.
- **Burst Mode:** Capture a rapid sequence of photos with a single press of the shutter button, perfect for fast-moving subjects.
- **Time-Lapse:** Record a series of images over an extended period and combine them into a sped-up video.
- **Slow Motion:** Record video at a higher frame rate to play back in slow motion, highlighting details of movement.

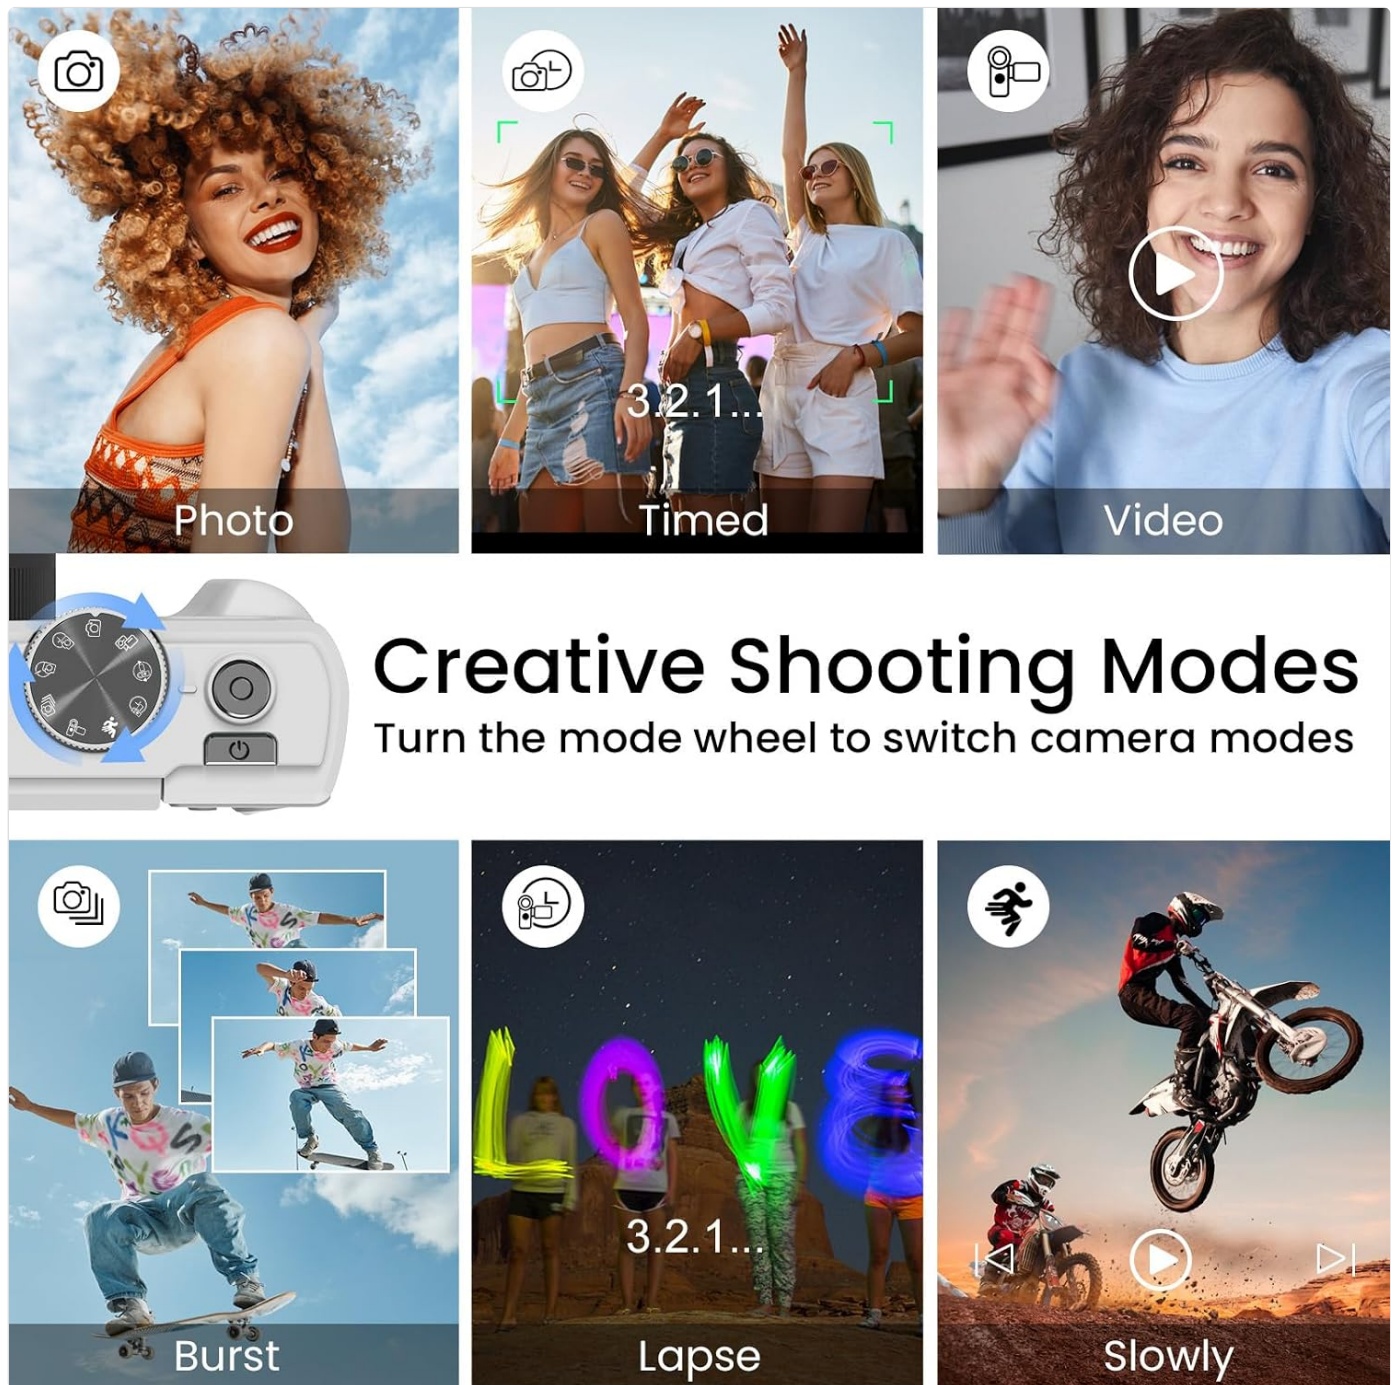 


Figure 12: Overview of creative shooting modes available on the camera.



Timed

| Take a single photo at specified intervals



Figure 13: Examples of timed photo intervals.



Burst

| Take a specified number of photos in succession



Figure 14: Capturing action with burst mode.



Slowly

| Slow motion shooting for video



Figure 15: Slow motion video capture example.

Anti-Shake Function

The camera features digital image stabilization to reduce blur caused by camera shake, especially useful when shooting

handheld or in challenging conditions. Ensure this feature is enabled in the settings for clearer results.

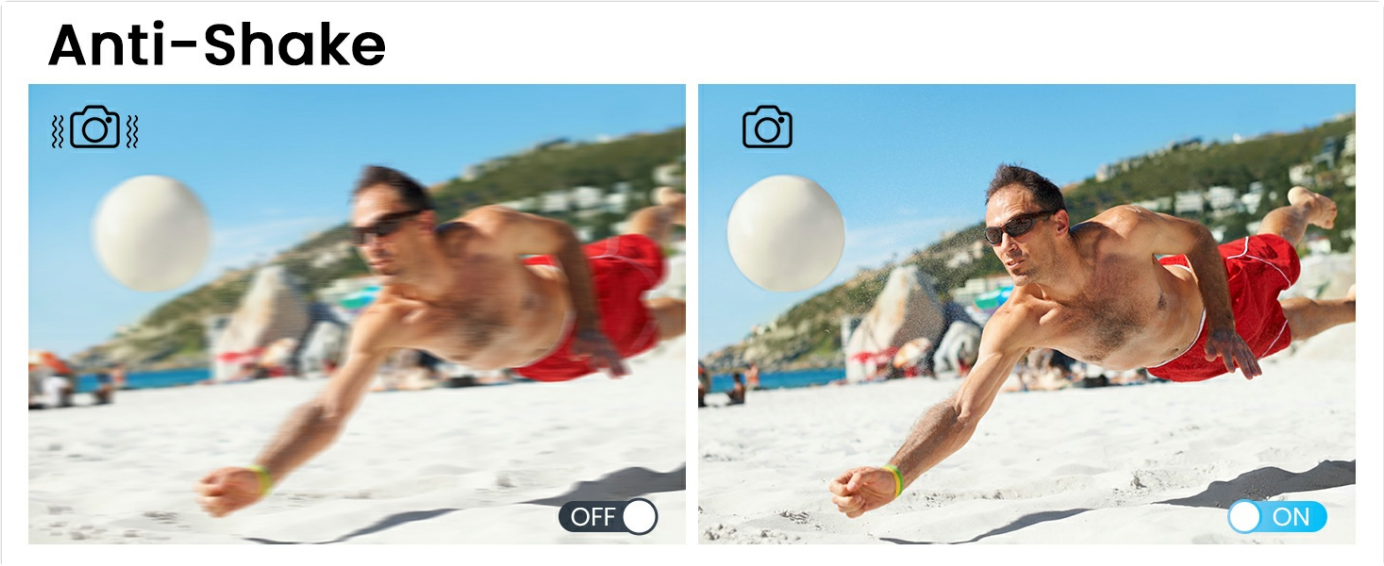 


Figure 16: Anti-shake feature comparison.

Filter Effects and Beauty Mode

Enhance your photos with various built-in filter effects (e.g., Gray, Ins1977, Low Saturation, High Saturation, Japanese Color). The camera also includes a Beauty Effect and Smile/Face Detection to optimize portraits.



Figure 17: Examples of 19 filter effects.



Figure 18: Beauty Effect and Smile Face Detection for enhanced portraits.

Wi-Fi Transfer and Webcam Functionality

- **Wi-Fi Transfer:** Connect the camera to your smartphone or tablet via Wi-Fi to easily transfer photos and videos for sharing on social media. Refer to the camera's on-screen instructions for Wi-Fi setup.
- **Webcam:** Connect the camera to your computer using the Type-C cable to use it as a webcam for live streaming or video calls. Select "PC Camera" mode on the camera when prompted.

4K Vlogging Camera for Transfer/Webcam

Adjust the best condition to video live broadcast



Selfie Vlogging



Transmit



Figure 19: Camera setup for live broadcasting and webcam use.

Webcam for Vlogging



Figure 20: Camera functioning as a webcam for vlogging and video conferencing.



Figure 21: Wireless transfer of media via Wi-Fi.

MAINTENANCE

Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body. For stubborn dirt, dampen the cloth slightly with water.
- For the lens, use a lens brush or a blower to remove dust. Then, gently wipe with a specialized lens cleaning cloth and lens cleaning solution if necessary.
- Do not use organic solvents (e.g., alcohol, thinner) to clean the camera.

Battery Care

- Store batteries in a cool, dry place when not in use.
- Avoid exposing batteries to extreme temperatures.
- If the camera will not be used for an extended period, remove the battery to prevent leakage.

Storage

- Store the camera in a dry, dust-free environment.
- Use the provided storage bag to protect the camera from scratches and dust.
- Avoid storing the camera in direct sunlight or in areas with high humidity.

TROUBLESHOOTING

If you encounter any issues with your Nsyee 4K 64MP Digital Camera, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Camera does not power on.	Battery is not charged or incorrectly inserted.	Ensure battery is fully charged and inserted with correct polarity. Try using the second battery.
Cannot take photos/videos.	SD card is full, locked, or not inserted.	Check SD card capacity, ensure it's unlocked, and properly inserted. Format the SD card if necessary (this will erase all data).

Problem	Possible Cause	Solution
Images are blurry.	Autofocus failed, camera shake, or dirty lens.	Ensure autofocus locks before shooting. Enable Anti-Shake. Clean the lens.
Flash is not working.	Flash mode is set to off or battery is low.	Check flash settings in the menu. Recharge the battery.
Wi-Fi connection issues.	Incorrect password, out of range, or app issue.	Verify Wi-Fi password. Ensure camera and device are close. Restart both devices.

SPECIFICATIONS

Feature	Detail
Brand	Nsyee
Model Name	W7
Model Number	WD07
Maximum Webcam Image Resolution	64 MP
Effective Still Resolution	64 MP
Video Resolution	1080p, 3840p (4K)
Optical Zoom	18 x
Digital Zoom	18 x
Image Stabilization	Digital
Screen Size	3 Inches
Display Type	LCD
Memory Storage Capacity	64 GB (SD Card included)
Supported File Format	MP4 (Video)
Connectivity Technology	Wi-Fi, USB
Battery Type	Lithium Polymer (BL-5C)
Number of Batteries	2 (included)
Flash Modes	Fill Flash
Auto Focus Technology	Face Detection
Self Timer	15 seconds, 30 seconds
Water Resistance Level	Not Water Resistant

Manufacturer's Warranty

The Nsyee 4K 64MP Digital Camera comes with a**2-Year Manufacturer's Warranty**. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or natural disasters.

Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact Nsyee customer support. Refer to the contact information provided on the product packaging or the official Nsyee website.

You can also visit the[Nsyee Store on Amazon](#) for more product information and support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DT9JSG6G>

More documents and user manuals: <https://manuals.plus/>