



Manuals.plus /

› **Outsunny** /

› Outsunny 867-254V00BN Wicker Porch Swing Instruction Manual

## Outsunny 867-254V00BN

# Outsunny 3-Person Wicker Porch Swing Instruction Manual

Model: 867-254V00BN

## INTRODUCTION

---

Thank you for choosing the Outsunny 3-Person Wicker Porch Swing. This manual provides essential information for the safe assembly, operation, and maintenance of your new porch swing. Please read all instructions carefully before use and retain this manual for future reference.



Image: The Outsunny 3-Person Wicker Porch Swing installed on a patio.

## PRODUCT FEATURES

The Outsunny Wicker Porch Swing is designed for comfort and durability, offering a relaxing outdoor seating solution. Key features include:

- **Spacious Seating:** 53-inch wide seat with supportive armrests and curved knee support, accommodating up to three people.
- **Integrated Cup Holders:** Convenient cup holders on armrests for easy access to drinks and snacks.
- **Comfortable Cushions:** Includes a soft cushioned seat and three back cushions for enhanced relaxation.
- **Easy-to-Clean Fabric:** Removable zippered seat cushion covers made with splash-resistant fabric.
- **Weather-Resistant Construction:** Powder-coated steel frame wrapped in plastic wicker for protection against UV, water, rust, and other weather conditions.
- **Reinforced Chains:** Two 8.9 ft steel chains with screw locking carabiners for adjustable height and angle, supporting up to 794 lbs.



Image: Detail of the swing's curved front edge and decorative armrests.



Image: The comfortable seat and back cushions, highlighting splash-resistant fabric.



Image: The convenient folding side tray with an integrated cup holder.



Image: The robust construction featuring hand-woven PE wicker, powder-coated steel frame, and secure screw lock carabiners.

## SETUP AND INSTALLATION

Proper installation is crucial for safety and stability. This swing is designed to be hung from a sturdy support structure. **Note: Additional chains/hooks for ceiling mounting are not included.**

### Required Tools (Not Included):

- Wrench or Pliers (for securing carabiners)
- Measuring Tape
- Ladder (for reaching mounting points)

### Installation Steps:

1. **Identify a Suitable Mounting Location:** Choose a strong, stable overhead structure such as a porch beam, pergola,

or a dedicated swing stand capable of supporting at least 794 lbs (the swing's weight capacity) plus dynamic load from swinging.

2. **Install Mounting Hardware (if not present):** Secure appropriate heavy-duty hooks or hangers into your chosen support structure. Ensure these are rated for outdoor use and exceed the swing's weight capacity.
3. **Attach Chains to Swing:** Connect the provided steel chains to the designated attachment points on the swing frame using the screw locking carabiners. Ensure carabiners are fully tightened and secure.
4. **Hang the Swing:** Carefully lift the swing and attach the top ends of the chains to your installed mounting hardware. Double-check that all connections are secure.
5. **Adjust Height and Angle:** The chains allow for adjustment of the swing's height and angle. Ensure the swing is level and at a comfortable height for users. Test the swing gently before full use.
6. **Place Cushions:** Position the seat cushion and three back cushions onto the swing.



Image: Illustration demonstrating how to adjust the swing's height and angle by manipulating the chains.

## OPERATING INSTRUCTIONS

---

To ensure a safe and enjoyable experience with your Outsunny Porch Swing, please follow these operating guidelines:

- **Weight Capacity:** Do not exceed the maximum weight capacity of 794 lbs (approximately 3 adults).
- **Seating:** Sit gently on the swing. Avoid standing on the swing or using it as a step stool.
- **Swinging Motion:** Use a gentle, controlled swinging motion. Avoid excessive or aggressive swinging, which could strain the chains or mounting structure.
- **Children:** Supervise children at all times when they are using the swing.
- **Side Trays:** The side trays are designed for light items like drinks or small snacks. Do not place heavy objects on them. Ensure items are stable to prevent spills.
- **Weather Conditions:** In strong winds or severe weather, remove cushions and secure the swing to prevent damage or injury.

Your browser does not support the video tag.

Video: An overview of the Outsunny Wicker Porch Swing, showcasing its design and features in an outdoor setting.

## MAINTENANCE

---

Regular maintenance will extend the life and appearance of your porch swing.

- **Cleaning Frame:** Wipe the steel frame and wicker with a damp cloth and mild soap. Rinse thoroughly and dry completely to prevent water spots and rust. Avoid harsh chemicals.
- **Cushion Care:** The cushion covers are removable and splash-resistant. For deeper cleaning, hand wash with mild soap and water, then air dry. Do not machine wash or tumble dry. Store cushions indoors during prolonged periods of

non-use or inclement weather.

- **Chain Inspection:** Periodically inspect the chains, carabiners, and all connection points for signs of wear, rust, or damage. Replace any worn or damaged components immediately.
- **Structural Check:** Regularly check the mounting structure and hardware for stability and integrity. Tighten any loose bolts or connections.
- **Winter Storage:** During winter months or extended periods of non-use, it is recommended to store the swing indoors or cover it with a protective outdoor furniture cover to prevent weather damage.

## TROUBLESHOOTING

If you encounter issues with your porch swing, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Swing feels unstable or wobbly	Loose connections; uneven hanging; damaged mounting point.	Check and tighten all bolts and carabiners. Ensure chains are of equal length and the swing is level. Inspect the overhead mounting structure for damage.
Squeaking noise during swinging	Friction at connection points; dry chains.	Apply a silicone-based lubricant to the chain links and connection points. Avoid oil-based lubricants that can attract dirt.
Cushions slide off easily	No anti-slip features; windy conditions.	Consider adding non-slip pads under the cushions or securing them with ties (not included). Remove cushions in windy conditions.
Wicker appears faded or brittle	Prolonged exposure to direct sunlight or harsh weather.	Ensure the swing is placed in a shaded area or use a protective cover when not in use. Regular cleaning can also help maintain appearance.

## SPECIFICATIONS

Detailed specifications for the Outsunny 3-Person Wicker Porch Swing (Model 867-254V00BN):

**Brand:** Outsunny

**Model Number:** 867-254V00BN

**Color:** Brown

**Material:** Rattan (PE Wicker), Alloy Steel (Frame)

**Overall Dimensions (L x W x H):** 57.1" x 26" x 21.3"

**Seat Size (W x D):** 53.1" x 16.5"

**Item Weight:** 38 lbs

**Maximum Weight Recommendation:** 794 lbs

**Maximum Compatible Number of Seats:** 3

**Chain Length:** 8.9 ft (each)

**Assembly Required:** Yes

**UPC:** 196393236154



Image: Visual representation of the swing's key dimensions.

## WARRANTY AND SUPPORT

---

For warranty information, product support, or to order replacement parts, please contact Outsunny customer service. Refer to your purchase documentation for specific warranty terms and contact details.

**Manufacturer:** Aosom LLC

**Website:** Visit the Outsunny Store on Amazon