

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Tefal](#) /
- › [Tefal Easy Fry Silence Air Fryer User Manual](#)

Tefal EY5528E0

Tefal Easy Fry Silence Air Fryer User Manual

Model: EY5528E0

INTRODUCTION

Welcome to the user manual for your new Tefal Easy Fry Silence Air Fryer. This appliance is designed to provide a healthy and efficient way to cook a variety of meals with significantly less fat. Featuring advanced Silent Technology, it ensures a quiet cooking experience, making it a perfect addition to any kitchen. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image: Front view of the Tefal Easy Fry Silence Air Fryer, showcasing its sleek black design and digital control panel.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.

- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The Tefal Easy Fry Silence Air Fryer (Model EY5528E0) is a 5-liter capacity appliance designed for healthy cooking. It features a powerful 1670 Watts heating element and a user-friendly digital interface.

Key Components:

- **Main Unit:** Houses the heating element and control panel.
- **Removable Cooking Basket:** 5-liter capacity, designed for easy food placement and removal.
- **Non-stick Cooking Grid:** Integrated into the basket for optimal air circulation and easy cleaning.
- **Digital Touch Screen:** Intuitive interface for program selection, temperature, and time adjustments.



Image: Side view of the air fryer with the cooking basket pulled out, revealing chopped vegetables ready for cooking. This illustrates the appliance's capacity and ease of access.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials from the air fryer. Retain packaging for future storage or transport if needed.
2. **Cleaning:** Before first use, clean the cooking basket and non-stick grid with warm soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls and other appliances to allow for proper air circulation. Ensure there is at least 10 cm of clear space around the appliance.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet (220 Volts AC).
5. **Initial Run (Optional but Recommended):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) to eliminate any manufacturing odors. A slight odor may be present, which is normal and will dissipate.

OPERATING INSTRUCTIONS

Control Panel:

The Tefal Easy Fry Silence features an intuitive digital touch screen for easy operation.



Image: Detailed view of the digital control panel, showing temperature, time, and various cooking presets. This highlights the user-friendly interface.

Cooking Process:

1. **Prepare Food:** Place your ingredients into the cooking basket, ensuring not to overfill. For best results, food should be in a single layer or shaken periodically.
2. **Insert Basket:** Slide the cooking basket firmly into the main unit until it clicks into place.
3. **Power On:** Press the power button on the touch screen.
4. **Select Program or Manual Settings:**
 - **Pre-set Programs:** Choose from 10 pre-set programs for common dishes like fries, chicken, fish, vegetables,

etc. The appliance will automatically set the optimal temperature and time.

- **Manual Mode:** Adjust the temperature (40°C to 220°C) and cooking time using the '+' and '-' buttons.

5. **Start Cooking:** Press the 'Start/Stop' button to begin the cooking cycle.
6. **Shaking/Turning (if needed):** For even cooking, some recipes may require shaking or turning the food halfway through the cooking process. The appliance may beep to remind you.
7. **Completion:** The air fryer will automatically shut off when the timer reaches zero. Carefully pull out the basket using the handle.
8. **Serve:** Remove cooked food from the basket. Use non-scratch utensils to avoid damaging the non-stick coating.

Silent Technology:

The Tefal Easy Fry Silence incorporates exclusive Silent Technology, featuring an optimized airflow system and a powerful motor designed to minimize operational noise, particularly during air frying. This allows for a more pleasant cooking environment.



Image: An internal view of the air fryer basket filled with fries, with a visible heating element above, illustrating the hot air circulation technology.

CARE AND MAINTENANCE

Regular cleaning and proper maintenance will extend the life of your Tefal Easy Fry Silence Air Fryer.

- 1. Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- 2. Cleaning the Basket and Grid:** The removable cooking basket and non-stick grid are dishwasher safe. For manual cleaning, wash with warm soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely.
- 3. Cleaning the Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
- 4. Interior Cleaning:** For the interior of the appliance, wipe with a damp cloth. For stubborn residue, a small amount of mild detergent can be used. Ensure no water enters the electrical components.
- 5. Storage:** Ensure the appliance is clean and dry before storing. The unique removable front panel allows for space-saving storage. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; basket not fully inserted.	Check power cord connection; test outlet with another appliance; ensure cooking basket is fully pushed in.
Food is not cooked evenly.	Basket overloaded; food not shaken/turned.	Do not overload the basket; shake or turn food halfway through cooking.
White smoke coming from appliance.	Grease residue from previous use; high-fat food.	Clean the basket and grid thoroughly; drain excess fat from food before cooking.
Fries are not crispy.	Too much oil; not enough cooking time/temperature.	Use minimal oil (1 tablespoon for fresh fries); increase cooking time or temperature.

TECHNICAL SPECIFICATIONS

Model: EY5528E0

Brand: Tefal

Capacity: 5 Liters

Power: 1670 Watts

Voltage: 220 Volts (AC)

Dimensions (L x W x H): 39.5 x 28 x 35 cm

Weight: 4.85 Kilograms

Material: Plastic

Features: 10 pre-set programs, adjustable temperature (40°C to 220°C), Silent Technology, automatic shut-off, non-stick cooking grid.



Image: The air fryer shown with its key dimensions (length, width, height) clearly marked, providing a visual reference for its size.

WARRANTY AND SUPPORT

Tefal products are manufactured to high standards. In the unlikely event of a product defect, please refer to your purchase receipt for warranty details. The availability of spare parts for this model is indicated for 15 years from the date of purchase.

For further assistance, troubleshooting not covered in this manual, or to inquire about spare parts, please contact Tefal customer support or visit the official Tefal website. Keep your proof of purchase for warranty claims.

You can also find additional recipes and tips via the My Tefal application.

