

[Manuals.plus](#) /

› [Legami](#) /

› LEGAMI - Set of 13 Erasable Gel Pens with Thermosensitive Erase Ink, Range of ink colours & barrel designs, 0.7mm Tip, Animal Designs

Legami LEG-ERASABLE-ASRT_14

LEGAMI Erasable Gel Pens User Manual

Model: LEG-ERASABLE-ASRT_14

1. PRODUCT OVERVIEW

The LEGAMI Erasable Gel Pen set features 13 unique pens, each with a distinct animal design and thermosensitive erase ink. These pens allow for smooth writing and easy correction, making them ideal for school, office, and creative activities. The special ink disappears with friction generated by the eraser tip, and can reappear when exposed to very low temperatures.

Key Features:

- **Thermosensitive Ink:** Write, erase, and rewrite without damaging paper.
- **Durable Eraser:** The ball placed at the end of the pen does not wear like normal erasers, does not damage the affected surface and erases perfectly.
- **Smooth Writing:** 0.7mm tip diameter for consistent ink flow.
- **Variety of Designs:** 13 unique animal and themed designs with corresponding ink colors.
- **Eco-Friendly:** Reduces paper waste by allowing corrections without discarding pages.



Figure 1.1: Complete set of LEGAMI Erasable Gel Pens.

2. PACKAGE CONTENTS

Your LEGAMI Erasable Gel Pen set includes the following 13 pens, each with a 0.7mm tip and thermosensitive ink:

- Teddy Bear (red ink)
- Corgi (black ink)
- Tiger (orange ink)
- Giraffe (black ink)
- Panda (black ink)
- Unicorn (pink ink)
- Butterfly (pink ink)
- Llama (blue ink)
- Hippo (blue ink)
- Flora (turquoise ink)
- Penguin (turquoise ink)
- Cat (black ink)
- Panda (black ink) - *Note: There are two panda designs, one with "Hug Me" and another with "Be Yourself and Make Mistakes".*

3. SETUP

The LEGAMI Erasable Gel Pens require no complex setup. Simply remove the cap and begin writing. Ensure the cap is replaced firmly after use to prevent the ink from drying out.

4. OPERATING INSTRUCTIONS

4.1. Writing

Hold the pen comfortably and apply light pressure to write. The 0.7mm tip provides a smooth and consistent line. The ink color corresponds to the pen's design as listed in the Package Contents section.



Figure 4.1: Writing with a LEGAMI Erasable Gel Pen.



Figure 4.2: Detail of the Cat design pen.

4.2. Erasing

To erase, use the special ball-shaped eraser located at the end of the pen. Rub the eraser firmly over the ink you wish to remove. The friction generates heat, which causes the thermosensitive ink to become transparent. The eraser is designed not to wear down or damage the paper surface.

★ Erasable pens ★

BE YOURSELF AND MAKE MISTAKES



Figure 4.3: Illustration of the erasable ink and eraser functionality.

4.3. Creative Use: The Secret Message Trick

The thermosensitive nature of the ink allows for a fun "secret message" trick. Follow these steps:

Send a secret message!

3, 2, 1 Let's go!

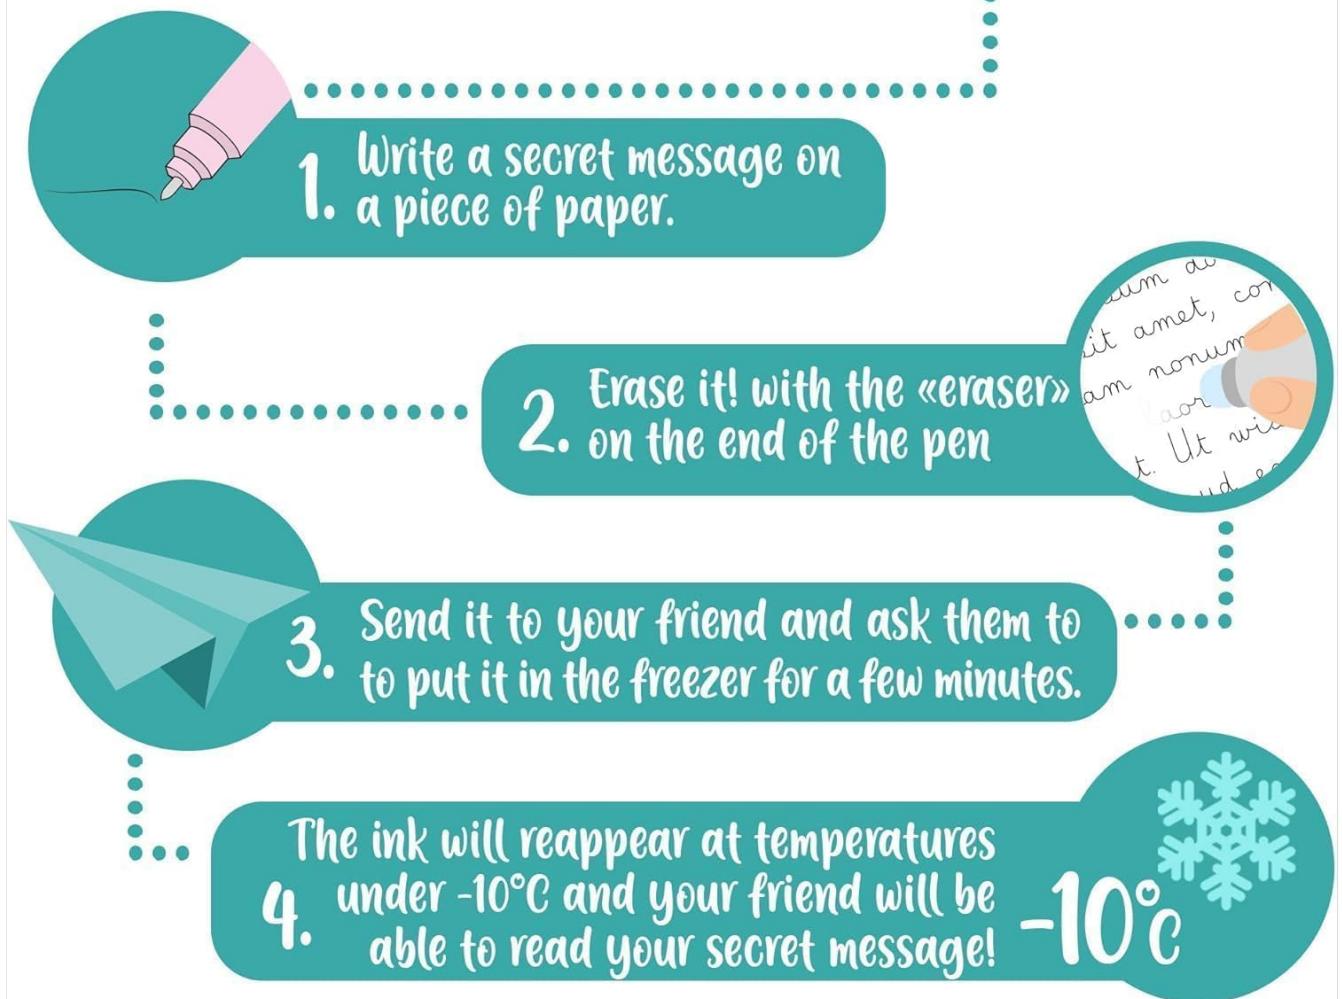


Figure 4.4: Instructions for the Secret Message Trick.

1. Write your secret message on a piece of paper.
2. Erase the message completely using the eraser ball at the end of the pen. The ink will become invisible.
3. Place the paper in a freezer for a few minutes.
4. The ink will reappear at temperatures under -10°C (14°F), revealing your secret message!

5. MAINTENANCE AND CARE

- Always replace the pen cap firmly after use to prevent the ink from drying out.
- Store pens at room temperature, away from direct sunlight or extreme heat, as high temperatures can cause the ink to become transparent.
- Avoid dropping the pens, especially on the tip, to prevent damage.
- The eraser tip is designed for durability; no special maintenance is required for it.

6. TROUBLESHOOTING

- **Ink not flowing:**
 - Ensure the cap is fully removed.
 - Gently scribble on a scrap piece of paper to prime the tip.
 - Check if the pen has been exposed to high temperatures, which can make the ink temporarily invisible. If so, try cooling the pen down.
- **Ink not erasing completely:**
 - Apply more firm pressure when rubbing with the eraser.
 - Ensure the paper surface is smooth and clean.
 - The ink may be too deeply absorbed into certain types of paper.
- **Ink reappearing unexpectedly:**
 - This is normal if the paper or pen is exposed to cold temperatures (below -10°C / 14°F).
 - Allow the paper to return to room temperature, or gently rub the ink with the eraser again.

7. SPECIFICATIONS

Attribute	Detail
Brand	Legami
Model Number	LEG-ERASABLE-ASRT_14
Item Weight	2.75 ounces (78 grams)
Product Dimensions	6.1 x 2.76 x 0.79 inches (15.5 x 7 x 2 cm)
Number of Items	13 pens
Point Type	Medium
Line Size	0.7mm
Ink Color	Multicolor (as per design)
Material Type	Plastic
Closure Type	Click-Off Cap

8. WARRANTY AND SUPPORT

For information regarding warranty, returns, or product support, please refer to the retailer's policy where the product was purchased or visit the official Legami website. Keep your proof of purchase for any warranty claims. For further assistance, you may contact Legami customer service through their official channels.

