

[Manuals.plus](#) /

› [realme](#) /

› realme 14 Pro+ 5G User Manual

realme RMX5051

realme 14 Pro+ 5G User Manual

Model: RMX5051

Brand: realme

INTRODUCTION

The realme 14 Pro+ 5G is a sophisticated smartphone designed to deliver exceptional performance and a premium user experience. It features a vibrant 17.09 cm (6.72") AMOLED display with a high refresh rate for smooth visuals and responsive interaction. Adaptive Brightness technology ensures optimal screen visibility in various lighting conditions. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device.



Image: The realme 14 Pro+ 5G in Pearl White, showcasing its sleek design, large display, and prominent rear camera array. The image highlights the phone's aesthetic appeal and key visual features.

WHAT'S IN THE BOX

Upon unboxing your realme 14 Pro+ 5G, please verify that the following item is included:

- Headset

Note: Standard package contents for smartphones typically include the device, a charger, a USB cable, and a SIM ejector tool. Please refer to your specific product packaging for a complete and accurate list of included accessories.

SETUP

1. SIM Card Installation

1. Locate the SIM card tray on the side of your device.
2. Insert the SIM ejector tool (not included, typically found with new phones) into the small hole next to the tray and press gently until the tray pops out.
3. Place your Nano-SIM card(s) and/or microSD card (if applicable) into the tray with the gold contacts facing down, ensuring they are correctly aligned.
4. Carefully push the tray back into the slot until it is flush with the device.

2. Initial Power On and Setup

1. Press and hold the Power button (usually on the right side) until the realme logo appears.
2. Follow the on-screen prompts to select your language, region, and connect to a Wi-Fi network.
3. Sign in with your Google account or create a new one to access the Google Play Store and other services.
4. Set up screen lock (PIN, pattern, password, fingerprint, or face unlock) for security.

OPERATING YOUR DEVICE

1. Display and Navigation

- **Touch Gestures:** Tap to select, swipe to scroll, pinch to zoom.
- **Navigation Bar/Gestures:** Customize your navigation preference in Settings (buttons or full-screen gestures).
- **Notification Panel:** Swipe down from the top of the screen to access quick settings and notifications.

2. Camera Usage

Your realme 14 Pro+ 5G features advanced camera capabilities. Open the Camera app to capture photos and videos.

- **Photo Mode:** Tap the shutter button to take a picture.
- **Video Mode:** Switch to video mode and tap the record button to start/stop recording.
- **Other Modes:** Explore modes like Portrait, Night, Pro, and Panorama for diverse shooting options.

3. Connectivity

- **Wi-Fi:** Go to *Settings > Wi-Fi* to connect to available networks.
- **Bluetooth:** Enable Bluetooth in *Settings > Bluetooth* to pair with wireless devices like headsets or speakers.
- **NFC:** Use NFC for quick pairing or contactless payments by enabling it in *Settings > Connected devices > Connection preferences > NFC*.
- **Mobile Data:** Ensure mobile data is enabled in quick settings or *Settings > Network & internet > Mobile network* for internet access via your SIM card.

4. Battery Management

- To optimize battery life, adjust screen brightness, disable unused connectivity features (Bluetooth, Wi-Fi, GPS), and close background apps.
- Utilize the built-in battery saver modes found in *Settings > Battery*.

- Avoid extreme temperatures when charging or using the device.

MAINTENANCE

1. Cleaning Your Device

- Use a soft, lint-free cloth to clean the screen and body.
- Avoid using harsh chemicals, abrasive materials, or excessive moisture.
- Gently clean ports with a dry, soft brush if necessary.

2. Software Updates

Regular software updates provide new features, performance improvements, and security patches. Check for updates by going to *Settings > About phone > Software update*.

3. Storage Management

To free up storage space, regularly clear cache, uninstall unused apps, and transfer large files (photos, videos) to cloud storage or an external device.

TROUBLESHOOTING

Common Issues and Solutions

- **Device Not Responding:** Press and hold the Power button for about 10-15 seconds to force a restart.
- **Apps Crashing/Freezing:** Clear the app's cache (*Settings > Apps > [App Name] > Storage & cache > Clear cache*) or reinstall the app.
- **Network Connectivity Issues:** Toggle Airplane Mode on and off, restart your device, or reset network settings (*Settings > System > Reset options > Reset Wi-Fi, mobile & Bluetooth*).
- **Battery Draining Quickly:** Review battery usage in *Settings > Battery* to identify power-hungry apps. Reduce screen brightness and disable unnecessary features.

Factory Reset

Warning: A factory reset will erase all data on your device, including apps, photos, and settings. Back up important data before proceeding.

1. Go to *Settings > System > Reset options*.
2. Select *Erase all data (factory reset)*.
3. Confirm your decision and enter your PIN/pattern if prompted.

SPECIFICATIONS

Feature	Detail
Model Number	RMX5051
Operating System	Android 15
Display	17.09 cm (6.72") AMOLED, 2800 x 1272 Resolution
Processor	Cortex A7, 2.5 GHz CPU Speed
RAM	7.99 GB (approx. 8GB)

Feature	Detail
Internal Storage	128GB (as per product title)
Connectivity	Bluetooth, NFC, Wi-Fi
Dimensions (LxWxH)	16.13 x 7.39 x 0.82 cm
Weight	194 g
Battery Power Rating	6 Amp Hours
Color	Pearl White
Manufacturer	realme Mobiles India Private Limited
First Available	16 January 2025

WARRANTY AND SUPPORT

For detailed warranty information, technical support, and service center locations, please visit the official realme India website or contact realme customer service. Keep your purchase receipt as proof of purchase for warranty claims.

- **Official realme Website:** <https://www.realme.com/in/> (Please verify the exact support URL on the official site)
- **Customer Service:** Refer to the realme website for contact numbers or online support options.

Additional protection plans may be available for purchase, such as screen damage protection or extended warranty. Please check with your retailer for details.

© 2025 realme. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question