

[Manuals.plus](#) /

› [Casio](#) /

› Casio AE-1600H Series Digital Watch Instruction Manual

Casio AE-1600H

Casio AE-1600H Series Digital Watch Instruction Manual

Model: AE-1600H

INTRODUCTION

This manual provides detailed instructions for the proper use and care of your Casio AE-1600H Series Digital Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. The Casio AE-1600H is designed for durability and functionality, featuring a large digital display, 100-meter water resistance, and a 10-year battery life.



Image of the Casio AE-1600H Series Digital Watch, showing its large digital display and robust design.

SETUP

Initial Time and Date Setting

1. In the Timekeeping Mode, press and hold the **ADJUST** button until the seconds digits begin to flash, indicating the setting screen.
2. Press the **MODE** button to cycle through the settings: Seconds → Hour → Minute → Year → Month → Day.
3. Use the **START** button to increase the flashing digit or setting. Use the **LIGHT** button to decrease the flashing digit or setting (if applicable).
4. Once all settings are correct, press the **ADJUST** button to exit the setting screen.

12/24-Hour Format Selection

In the Timekeeping Mode, press the **START** button to toggle between 12-hour and 24-hour time formats.

OPERATING INSTRUCTIONS

Mode Navigation

Press the **MODE** button to cycle through the watch's functions in the following order:

- Timekeeping Mode
- Dual Time Mode
- Alarm Mode (5 alarms + snooze)
- Stopwatch Mode
- Countdown Timer Mode

Timekeeping Mode

This mode displays the current time (hour, minute, second), day of the week, and date. The large digits ensure clear visibility.

Dual Time Mode

The Dual Time mode allows you to keep track of a second time zone. To set the dual time:

1. Navigate to the Dual Time Mode.
2. Press and hold the **ADJUST** button until the hour digits flash.
3. Use the **START** button to adjust the hour and the **LIGHT** button to adjust the minutes.
4. Press **ADJUST** to confirm and exit.

Alarm Mode

The watch features 5 multi-function alarms (AL1-AL5) and one snooze alarm (SNZ). You can set alarms for specific times and dates.

1. Navigate to the Alarm Mode. Use the **START** button to cycle through AL1, AL2, AL3, AL4, AL5, and SNZ.
2. To set an alarm, press and hold the **ADJUST** button until the hour digits flash.
3. Use the **MODE** button to select hour, minute, month, or day.
4. Use the **START** button to change the selected value.
5. Press **ADJUST** to confirm and exit.
6. To turn an alarm on/off, select the alarm and press the **START** button.

Stopwatch Mode

The 1/100-second stopwatch can measure up to 24 hours and includes split time functionality.

1. Navigate to the Stopwatch Mode.
2. Press **START** to begin timing.
3. Press **ADJUST** to record a split time without stopping the timer. Press **ADJUST** again to return to elapsed time display.
4. Press **START** to stop the timer.
5. Press **ADJUST** to reset the stopwatch to zero.

Countdown Timer Mode

The countdown timer can be set for up to 24 hours and features an auto-repeat function.

1. Navigate to the Countdown Timer Mode.
2. Press and hold the **ADJUST** button until the hour digits flash.

- 3. Use the **MODE** button to select hour, minute, or second.
- 4. Use the **START** button to change the selected value.
- 5. Press **ADJUST** to confirm and exit.
- 6. Press **START** to begin the countdown. Press **START** again to pause, and **ADJUST** to reset.

LED Backlight

Press the **LIGHT** button (located at the bottom front of the watch) to illuminate the display with an amber LED backlight for improved visibility in low-light conditions. The backlight features an afterglow function.

Video demonstrating the features and functionality of the Casio AE-1600H digital watch, including button operation and display visibility.

MAINTENANCE

Water Resistance

Your Casio AE-1600H watch is water resistant up to 100 meters (10 BAR). This means it is suitable for recreational swimming, showering, and general water exposure. Do not operate buttons while the watch is submerged in water.

Battery Replacement

The watch is powered by a CR2032 battery with an approximate 10-year lifespan. When the display becomes dim or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance.

Cleaning

Wipe the watch with a soft, dry cloth. For stubborn dirt, use a soft cloth dampened with water and a mild neutral detergent, then wipe dry. Avoid using volatile agents like thinner or benzine, as they may damage the resin components.

TROUBLESHOOTING

Incorrect Time Display

- Ensure the time and date settings are correctly adjusted as per the "Initial Time and Date Setting" section.
- Check if the 12/24-hour format is set to your preference.

Display is Dim or Blank

- The battery may be low. Consider replacing the CR2032 battery.
- Ensure the watch is not exposed to extreme temperatures, which can temporarily affect LCD visibility.

Buttons Not Responding

- Ensure the watch is not in a setting mode that locks other button functions.
- If the watch is wet, dry it thoroughly before operating buttons.

SPECIFICATIONS

Model Name	AE-1600H
Display Type	Digital
Movement Type	Quartz

Case Material	Resin
Band Material	Resin
Water Resistance Depth	100 Meters (10 BAR)
Battery Life	Approx. 10 years (CR2032)
Case Dimensions (H x W x D)	54.1 x 49.7 x 15.9 mm
Weight	3.99 ounces (approx. 113g)
Features	LED Backlight (Amber with Afterglow), Dual Time, 1/100-second Stopwatch, Countdown Timer (Auto-repeat), 5 Multi-function Alarms, Hourly Time Signal, 12/24-hour format

WARRANTY AND SUPPORT

Limited Warranty

Your Casio AE-1600H Series Digital Watch comes with a limited warranty against manufacturing defects. Please refer to the warranty card included with your purchase for specific terms and conditions, including coverage duration and claim procedures.

Customer Support

For further assistance, technical support, or service inquiries, please visit the official Casio website or contact their customer service department. Contact information can typically be found on the Casio website or in the packaging materials.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DTB5SM9P>

More documents and user manuals: <https://manuals.plus/>