

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GOCKERA](#) /

› [GOCKERA F16 Ultra-thin 5000mAh Battery Powered Desk Fan Instruction Manual](#)

GOCKERA F16

GOCKERA F16 Ultra-thin Desk Fan Instruction Manual

Model: F16

INTRODUCTION

Thank you for choosing the GOCKERA F16 Ultra-thin Desk Fan. This portable and versatile fan is designed to provide personal cooling with advanced features for various environments. Please read this manual carefully to ensure proper use and maintenance of your device.

MAIN COMPONENTS

Familiarize yourself with the parts of your GOCKERA F16 Desk Fan:

- **Front Shield:** Protective cover for the fan blades.
- **On/Off Button:** Powers the fan on or off.
- **Fan Blade:** Generates airflow.
- **LED Indicator/Digital Display:** Shows speed level, battery percentage, and timer settings.
- **Battery:** Integrated 5000mAh rechargeable battery.
- **Type-C Port:** For charging the fan.
- **Rack (Foldable Stand):** Allows for adjustable positioning.
- **Rear Shield:** Back protective cover.



Front view of the GOCKERA F16 Desk Fan, showcasing its compact design and digital display.

SETUP

Charging the Fan

Before first use, fully charge the fan. Use the provided Type-C cable to connect the fan to a compatible USB power adapter (DC 5V/1A recommended).

- The LED digital display will show the charging progress.
- A full charge typically takes 2-3 hours.
- Ensure the fan is fully charged before extended use or travel.

Upgraded brushless motor & Ultra-quiet

Noise<40dB, You won't be disturbed while resting or working



Internal view illustrating the 5000mAh rechargeable battery and the digital display indicating battery level.

OPERATING INSTRUCTIONS

Power On/Off

Press the On/Off button once to turn the fan on. Press and hold the button to turn the fan off.

Speed Adjustment

The fan features 100 adjustable speed levels. Rotate the control knob to increase or decrease the fan speed. The digital display will show the current speed level (1-100).

1-100 Speed Adjustable Powerful Wind



The fan offers 1 to 100 adjustable speeds, providing powerful wind for various cooling needs.

Timer Function

The fan includes a timer function allowing you to set operation for 1 to 8 hours. Consult the full user manual for specific instructions on setting the timer.

Adjusting Fan Angle

The fan's rack allows for 180° folding and adjustment. Flexibly position the fan to direct airflow as needed.



Built-in **5000mAh** rechargeable Battery

Ensures long working time

*About 2-3 hours fully charged USB-C fast-charging cable



1 Speed

About 23.5 hours



50 Speed

About 23.5 hours



100 Speed

About 23.5 hours

The fan's 180° foldable design allows for versatile positioning and easy portability.

Digital Display

The smart LED digital display provides real-time information on the current fan speed and remaining battery power, ensuring you know when to recharge.

LED Digital Display



Timer
0-9 hours



Battery
level display



Speed
display



Memory
function

The LED digital display provides clear information on fan speed and battery status.

Official GOCKERA video demonstrating the portable desk fan's features and operation.

FEATURES

- Powerful Wind & 100 Speeds:** Equipped with an upgraded brushless motor, offering strong and customizable airflow.
- Long Battery Life:** 5000mAh rechargeable battery provides 20-25 hours of operation on minimum speed and 3-5 hours on maximum speed.
- Ultra-thin & Portable:** Compact dimensions (1.38"D x 5.51"W x 6.61"H) and lightweight (300g) for easy transport.
- Ultra Quiet Operation:** Noise levels are below 40dB at maximum speed and below 7dB at minimum speed, ensuring minimal disturbance.
- Durable Design:** Crafted from odorless, ultra-durable ABS material with a finger-proof grille for safety.

MAINTENANCE

Cleaning

Always unplug the fan before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use abrasive cleaners or immerse the fan in water.

Storage

When not in use for extended periods, store the fan in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on	Low battery or not charged	Charge the fan fully using the provided Type-C cable.
Weak airflow	Fan speed set too low	Increase the fan speed using the control knob.
Unusual noise during operation	Obstruction in fan blades or damaged blades	Turn off and unplug the fan. Carefully check for any obstructions and remove them. If blades are damaged, contact support.

SPECIFICATIONS

Feature	Detail
Brand	GOCKER
Model Name	F16
Product Dimensions	1.38"D x 5.51"W x 6.61"H
Item Weight	5.1 ounces
Power Source	Battery Powered
Battery Capacity	5000mAh Lithium Ion (included)
Voltage	5 Volts
Wattage	2 watts
Number of Speeds	100
Noise Level	<40dB (max), <7dB (min)
Special Features	Foldable, Smart Digital Display, Rechargeable, Timer (1-8 hours)
Included Components	Personal fan, Instructions, Type-C cable

WARRANTY AND SUPPORT

Warranty

This product comes with a 1-year warranty from the date of purchase. The warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, or unauthorized modifications.

Customer Support

For any questions, concerns, or warranty claims, please contact GOCKERA customer support through the retailer's platform or the official GOCKERA website. Please have your purchase details and model number ready for assistance.