

[Manuals.plus](#) /

› [CleverMade](#) /

› CleverMade Natural Bamboo Double Laundry Hamper LUXE (103L) Instruction Manual

CleverMade BMHLD-NATB

CleverMade Natural Bamboo Double Laundry Hamper LUXE (103L) Instruction Manual

Model: BMHLD-NATB

1. INTRODUCTION

Thank you for choosing the CleverMade Natural Bamboo Double Laundry Hamper LUXE. This hamper is designed for efficient laundry organization with its dual compartments, removable liner, and collapsible design. This manual provides essential information for assembly, proper use, and maintenance to ensure optimal performance and longevity of your product.

2. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your CleverMade Bamboo Laundry Hamper:

- Unpack Components:** Carefully remove all parts from the packaging. Verify that all components are present: bamboo hamper body, bottom board, wire rim, and removable liner bag.
- Expand Hamper Body:** Gently unfold the bamboo hamper body until it forms its rectangular shape.
- Insert Bottom Board:** Place the rigid bottom board inside the hamper, ensuring it lies flat at the base to provide stability.
- Secure Wire Rim:** Position the metal wire rim along the top edge of the hamper. Align the J-hooks on the wire rim with the designated slots or loops on the hamper's interior fabric. Securely hook the wire into place to maintain the hamper's open structure.
- Attach Lid:** The lid is designed to snap onto the top edge of the hamper. Align the lid with the hamper opening and press down firmly until it is securely attached.
- Place Liner Bag:** Insert the removable, machine-washable liner bag into the hamper. Ensure the top edge of the liner is folded over the hamper's rim for easy access and removal.



Figure 1: Visual guide for hamper assembly, showing steps to open, insert bottom, secure wire rim, snap lid, and place liner.

3. OPERATING INSTRUCTIONS

Using your CleverMade Bamboo Laundry Hamper is straightforward:

- **Loading Laundry:** Lift the lid to access the interior. Place dirty laundry into the removable liner bag. The double hamper design allows for separation of laundry types (e.g., lights and darks).
- **Closing the Lid:** After placing laundry, close the lid to keep contents out of sight and maintain a tidy appearance.
- **Transporting Laundry:** When the liner bag is full, lift it out of the hamper using its integrated handles. The hamper itself also features side handles for moving the entire unit if needed.



Figure 2: The hamper with its lid open, revealing the removable liner bag ready for laundry.



Figure 3: Key features of the hamper, including its washable liner and snap-on lid.

4. MAINTENANCE

- **Liner Bag Cleaning:** The removable cotton liner bag is machine washable. Wash in cold water with similar colors and tumble dry on low heat. Do not bleach.
- **Hamper Body Cleaning:** Wipe the bamboo exterior with a damp cloth as needed. Avoid using harsh chemicals or abrasive cleaners, which can damage the bamboo finish. Ensure the bamboo is thoroughly dry after cleaning.
- **Storage:** For long-term storage, the hamper can be collapsed flat. Remove the bottom board and wire rim, then fold the bamboo body. Store in a dry place.

5. TROUBLESHOOTING

Issue	Possible Cause	Solution
-------	----------------	----------

Issue	Possible Cause	Solution
Liner bag sags or falls into hamper.	Liner not properly secured over the rim or overloaded.	Ensure the liner's top edge is fully folded over the hamper's rim. Distribute laundry evenly or avoid overloading one side.
Lid does not fit securely.	Lid not aligned correctly or wire rim not fully engaged.	Re-align the lid and press firmly to snap it into place. Verify the wire rim is securely hooked into all designated slots.
Hamper feels unstable or wobbly.	Bottom board or wire rim not correctly installed.	Check that the bottom board is flat and the wire rim is fully secured in its hooks. Ensure the hamper body is fully expanded.

6. PRODUCT SPECIFICATIONS

- **Model:** BMHLD-NATB
- **Capacity:** 103 Liters (27 Gallons)
- **Dimensions (Open):** 21"L x 13"W x 25"H (approximately)
- **Dimensions (Collapsed):** Approximately 2" wide
- **Material:** Natural Bamboo (exterior), Cotton (liner)
- **Weight Capacity:** Up to 50 lbs
- **Item Weight:** 2.5 pounds
- **Special Feature:** Portable, Foldable, Removable Liner



Figure 4: Hamper dimensions: 21.1"L x 13"W x 24.8"H.

7. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or customer support, please visit the official CleverMade website or contact their customer service department. Keep your purchase receipt for any warranty claims.

CleverMade Official Website: www.clevermade.com

© 2025 CleverMade. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question