

[Manuals.plus](#) /

> [Midea](#) /

> Midea Washing Machine 7Kg Capacity, 1400 RPM, Inverter Quattro Motor, Steam Care, Turbo Wash, Silver (MF100W70B/TT) - User Manual

Midea MF100W70B/TT

Midea Washing Machine User Manual

Model: MF100W70B/TT | Brand: Midea

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Midea Washing Machine, model MF100W70B/TT. Please read it thoroughly before using the appliance and keep it for future reference. This washing machine features an Inverter Quattro Motor for quiet and efficient performance, a Lunar Dial for intuitive control, and advanced functions like Steam Care and Turbo Wash to ensure optimal laundry results.

SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine. This appliance is designed for freestanding installation.

Unpacking

- Carefully remove all packaging materials.
- Inspect the machine for any transit damage. Report any damage immediately to your retailer.
- Remove all transport bolts from the rear of the machine. Refer to the installation guide for detailed instructions on transport bolt removal.

Placement

- Place the washing machine on a firm, level surface.
- Ensure there is adequate space around the machine for ventilation and access.
- Dimensions: Approximately 9D x 9W x 9H centimeters.

Electrical Connection

- Connect the machine to a grounded power outlet.
- Voltage: 220 Volts.
- Ensure the power supply matches the requirements specified on the rating label of the appliance.

Water Connection

- Connect the water inlet hose to a cold water tap.
- Ensure all connections are tight to prevent leaks.
- Position the drain hose correctly to allow for proper water drainage.



Image: Angled view of the Midea Washing Machine, illustrating its compact design suitable for various placements. This view highlights the side panel and the front-load door.

OPERATING INSTRUCTIONS

Your Midea washing machine is designed for ease of use and efficient cleaning. It has a 7Kg capacity and a 1400 RPM spin speed.

Control Panel Overview

The washing machine features an intuitive Lunar Dial, which combines a knob and screen for seamless program selection and monitoring. The control console is primarily knob-based for easy navigation.



Image: Front view of the Midea Washing Machine, showcasing the Lunar Dial control panel and the front-load door. The digital display on the dial shows the remaining time.

Loading Laundry

- Open the front-load door.
- Load laundry loosely into the drum, ensuring not to exceed the 7Kg capacity.
- Close the door firmly.

Adding Detergent and Additives

- Pull out the detergent dispenser drawer.
- Add appropriate amounts of detergent, fabric softener, and other additives to their respective compartments.
- Push the drawer back in gently.

Program Selection

Turn the Lunar Dial to select your desired washing program. The display will show program details. Key programs include:

- **Turbo Wash:** Reduces wash times by 40% for faster cleaning.
- **Pre-Wash:** Ideal for heavily soiled clothes, pre-soaking them for better results.
- **15-Minute Quick Wash:** Perfect for small loads (0.5–2 kg) when you're in a hurry.
- **Steam Care:** Utilizes steam to penetrate fabrics, eliminating bacteria and odors while reducing wrinkles.

Temperature Options

Customize your wash with multiple temperature settings:

- **20°C:** For energy-saving washes of lightly soiled items.
- **40°C:** Effective for general stain removal.
- **60°C:** For tackling tough, greasy stains.

Starting a Wash Cycle

Press the Start/Pause button to begin the selected wash cycle. The machine will automatically proceed through the wash, rinse, and spin phases.

End of Cycle

Once the cycle is complete, the machine will signal. Open the door and remove your laundry promptly to prevent wrinkles and odors.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Midea washing machine.

Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Avoid abrasive cleaners or solvents that could damage the finish.

Cleaning the Detergent Dispenser

- Remove the detergent dispenser drawer.
- Rinse it under running water to remove any detergent residue.
- Clean the housing of the dispenser with a brush if necessary.
- Reinsert the drawer.

Cleaning the Drum

- Periodically run a maintenance wash cycle (e.g., a hot wash with no laundry and a washing machine cleaner) to prevent odor and mold buildup.
- Leave the door slightly ajar after each wash to allow the drum to air dry.

Filter Cleaning

- Locate and clean the drain pump filter regularly to prevent blockages and ensure efficient drainage. Refer to the full user manual for specific filter location and cleaning instructions.

TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Door not closed properly; Program not selected; Start/Pause button not pressed.	Check power connection; Ensure door is securely latched; Select a program; Press Start/Pause.
Water not filling	Water tap closed; Water inlet hose kinked; Water supply pressure too low.	Open water tap; Straighten hose; Check household water pressure.
Machine not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Check and clear drain hose; Clean drain pump filter.
Excessive vibration/noise	Machine not level; Transport bolts not removed; Uneven load.	Adjust leveling feet; Ensure all transport bolts are removed; Redistribute laundry evenly.

If the problem persists after attempting these solutions, please contact Midea customer support.

SPECIFICATIONS

Feature	Detail
Brand Name	Midea
Model Info	MF100W70B/TT
Product Dimensions	9 x 9 x 9 cm
Capacity	7 Kilograms
Noise Level	54 dB
Installation Type	Freestanding
Special Features	Steam Care
Color	Silver
Control Console	Knob (Lunar Dial)
Access Location	Front Load
Voltage	220 Volts
Item Weight	1 Kilograms
ASIN	B0DTF8NPPN
Date First Available	18 January 2025
Cycle Options	spin
Spin Speed	1400 RPM

WARRANTY AND SUPPORT

Your Midea washing machine comes with a manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation included with your purchase or contact Midea customer service.

Extended Warranty Options

Extended warranty plans are available for additional peace of mind:

- 1-Year Extended Warranty by Salama Care (E-mail delivery)
- 2-Year Extended Warranty by Salama Care (E-mail delivery)

For further assistance, product information, or to explore other Midea products, please visit the official Midea Store:

[Visit the Midea Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question