

[Manuals.plus](#) /

› [FLEXISPOT](#) /

› FLEXISPOT XR6 Power Swivel Recliner Chair User Manual

FLEXISPOT XR6

FLEXISPOT XR6 Power Swivel Recliner Chair User Manual

Model: XR6 | Brand: FLEXISPOT

1. IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before assembling and using your FLEXISPOT XR6 Power Swivel Recliner Chair. Failure to follow these instructions may result in injury or damage to the product.

- Ensure the chair is fully and correctly assembled according to the instructions before any use.
- Do not get off the chair while it is in a reclined position. Always return the chair to its upright position before exiting.
- Verify that the chair's maximum weight capacity of 350 pounds (158 kg) is not exceeded to ensure safe operation.
- Keep children and pets away from the chair's moving parts during operation.
- Only use the provided power adapter and ensure it is connected to a suitable power outlet.
- Avoid placing the chair near heat sources or in direct sunlight for prolonged periods.

2. PRODUCT OVERVIEW

The FLEXISPOT XR6 is an oversized power swivel recliner designed for comfort and versatility. It features a 270-degree swivel, 30-degree rocking motion, and a 155-degree electric recline function. The chair is upholstered in easy-to-clean faux leather and includes convenient features like hidden storage and USB/Type-C charging ports.



Figure 2.1: The FLEXISPOT XR6 Power Swivel Recliner Chair.

Key features include:

- **270° Swivel & 30° Rocking:** Allows for flexible movement and gentle rocking.
- **155° Electric Recline:** Effortlessly adjust to your preferred position for reading, watching TV, or napping.
- **Oversized Seat:** A 40.95-inch wide armless design provides ample space for comfort.
- **Durable Construction:** Built with an overbuilt steel frame and hardwood base, supporting up to 350 lbs.
- **Easy-Clean Faux Leather:** Water-resistant and gentle on skin, ideal for various environments.
- **Silent Swivel:** Operates quietly (under 25dB).
- **Hidden Storage:** A discreet compartment for small items.
- **USB & Type-C Charging:** Convenient ports for charging electronic devices.

3. PACKAGE CONTENTS

The FLEXISPOT XR6 recliner is shipped in two separate packages. Please ensure you have received both packages before beginning assembly.

- **Package 1:** Chair Base

- **Package 2:** Chair Body, Backrest, Footrest, Power Adapter, Assembly Hardware



Figure 3.1: The recliner is shipped in two packages. This image also shows the dimensions of the recliner.

4. ASSEMBLY INSTRUCTIONS

Assembly of the FLEXISPOT XR6 recliner is designed to be straightforward and typically takes less than 10 minutes. It is recommended to have two people for assembly due to the weight of the base.

1. Unpack all components from both packages. Verify all parts are present against the packing list (not provided in this manual, refer to included documentation).
2. Place the chair base (from Package 1) on a flat, stable surface.
3. Carefully align the chair body (from Package 2) with the base and securely attach it. Ensure all connections click into place or are fastened as per the detailed instructions provided with the product.
4. Attach the backrest to the chair body. Push firmly until it locks into position.
5. Connect the power adapter to the chair's power input and then plug it into a wall outlet.



Figure 4.1: Visual representation of the recliner's components and assembly process, highlighting easy assembly.

5. OPERATING INSTRUCTIONS

The FLEXISPOT XR6 recliner offers multiple functions for enhanced comfort.

5.1 Electric Recline Function

The chair features an effortless power recline mechanism. Locate the control buttons on the side of the chair.

- To recline: Press and hold the recline button (usually indicated by an arrow pointing backward or a recline icon). Release the button when you reach your desired position.
- To return to upright: Press and hold the upright button (usually indicated by an arrow pointing forward or an upright icon). Release the button when the chair is fully upright.

LOCK IN COMFORT



Effortless Power Recline

Lock In Comfort,
No Bounce Back



Manual Recline

Need To Use Upper Body
Weight To **Press**



Figure 5.1: The electric recline mechanism allows for smooth, controlled adjustments without requiring body weight.

5.2 Swivel and Rocking Functions

The chair's base allows for a smooth 270-degree swivel and a gentle 30-degree rocking motion. These functions operate independently of the recline and do not require any specific controls; simply move the chair as desired.

5.3 Hidden Storage

A hidden storage compartment is located on the side of the chair. Lift the flap to access this space, suitable for remote controls, books, or other small items.



HIDDEN STORAGE

Holds much **more** than
a side pocket

Figure 5.2: The hidden storage compartment provides convenient access to personal items.

5.4 USB & Type-C Charging Ports

Integrated USB and Type-C charging ports are available on the side control panel. Use these ports to conveniently charge your electronic devices while relaxing in the chair.



Figure 5.3: The recliner adapts to various activities, with easy control via the power recline buttons, which also include USB and Type-C charging ports.

6. MAINTENANCE AND CARE

Proper care will extend the life and appearance of your FLEXISPOT XR6 recliner.

- **Cleaning:** The faux leather upholstery is designed for easy cleaning. Wipe spills immediately with a clean, damp cloth. For general cleaning, use a soft cloth with mild soap and water, then wipe dry. Avoid harsh chemicals or abrasive cleaners.
- **Dusting:** Regularly dust the chair with a soft, dry cloth.
- **Inspection:** Periodically check all connections and fasteners to ensure they are secure. Tighten if necessary.
- **Placement:** Avoid prolonged exposure to direct sunlight, which can cause fading and material degradation. Keep the chair away from direct heat sources.

7. TROUBLESHOOTING

If you encounter any issues with your FLEXISPOT XR6 recliner, please refer to the following basic troubleshooting steps:

- **Chair not reclining/no power:**
 - Ensure the power adapter is securely plugged into both the chair and a working wall outlet.
 - Check if the wall outlet is functional by plugging in another device.
 - Inspect the power cord for any visible damage.
- **Unusual noises during operation:**
 - Ensure all assembly bolts and connections are tight.
 - Verify that no objects are obstructing the moving parts of the chair.
- **Storage compartment not staying closed:**
 - Check if anything is overfilling the compartment or obstructing the latch mechanism.

If these steps do not resolve the issue, please contact FLEXISPOT customer service for further assistance.

8. SPECIFICATIONS

Feature	Specification
Brand	FLEXISPOT
Model Name	XR6
Product Dimensions (D x W x H)	39.37"D x 40.95"W x 40.55"H
Seat Depth	20.87 inches
Maximum Weight Recommendation	350 Pounds (158 kg)
Material	Faux Leather, Foam, Wood Frame, Steel Frame
Color	Blue Pu (as per current variant)

Feature	Specification
Special Features	Adjustable Height, Ergonomic, Reclining, 270° Swivel, 30° Rocking, Electric Operation, USB & Type-C Charging
Power Source	Electric (Power Adapter)
Assembly Time	Approximately 10 minutes
Item Weight	99.5 pounds (45.1 kg)
UPC	840460405034

9. CUSTOMER SUPPORT

For any questions, concerns, or assistance with your FLEXISPOT XR6 Power Swivel Recliner Chair, please do not hesitate to contact our dedicated customer service team. We are available 24/7 to provide support.

Please refer to the contact information provided in your product packaging or visit the official FLEXISPOT website for support details.

For more information about FLEXISPOT products, visit the [FLEXISPOT Store on Amazon](#).