

TeoTeeo Kindle Holder with Remote Page Turner

TeoTeeo Kindle Holder with Remote Page Turner User Manual

Model: Kindle Holder with Remote Page Turner

Brand: TeoTeeo

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your TeoTeeo Kindle Holder with Remote Page Turner. This product is designed to enhance your reading experience by providing a stable, adjustable holder for your e-reader, tablet, or smartphone, coupled with a remote page-turning function for hands-free use across various activities.



Figure 1.1: Versatile Applications

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Remote Controller x 1

- Receiver Sensor Clip x 1
- Hand Lanyard x 1
- Type-C Cable x 1
- User's Manual x 1
- Tablet Holder (Gooseneck Arm with Clamp) x 1

Check Compatibility Before You Buy

Works with simulated touch page turners (clip-on). Not a Bluetooth HID device.



COMPATIBLE

- Paperwhite (all generations)
- Kindle 10th / 11th (2019 / 2022)
- Voyage, Oasis (2016 / 2017 / 2019)
- Scribe (2022 / 2024 refresh)
- Colorsoft - Signature / Base / Kids



NOT COMPATIBLE

- Kindle Touch (2011) - infrared touch
- Kindle 7th (2014) - infrared touch
- Kindle 8th (2016) - infrared touch
- Kindle 1 / 2 / DX / Keyboard - non-touch
- Kindle 4 (2011) & Kindle 5 (2012) - non-touch

Tip: Place the touch head on the page-turn hotspot (left/right edge).

Figure 2.1: Included Components

3. SETUP INSTRUCTIONS

3.1 Assembling the Holder

1. **Attach the Clamp:** Securely fasten the clamp base of the gooseneck arm to a stable surface, such as a bedside table or desk. Ensure the clamp is tightened to prevent movement. The clamp is designed with a soft EVA protective surface to prevent damage to your furniture.
2. **Adjust the Gooseneck Arm:** Position the flexible gooseneck arm to your desired reading angle. The arm is made of thickened and hardened solid aluminum for stability and can be adjusted 360 degrees.
3. **Insert Your Device:** Place your e-reader, tablet, or smartphone into the device holder. The holder is compatible with devices ranging from 4.5 to 10 inches in width. Ensure the device is securely gripped by the holder.

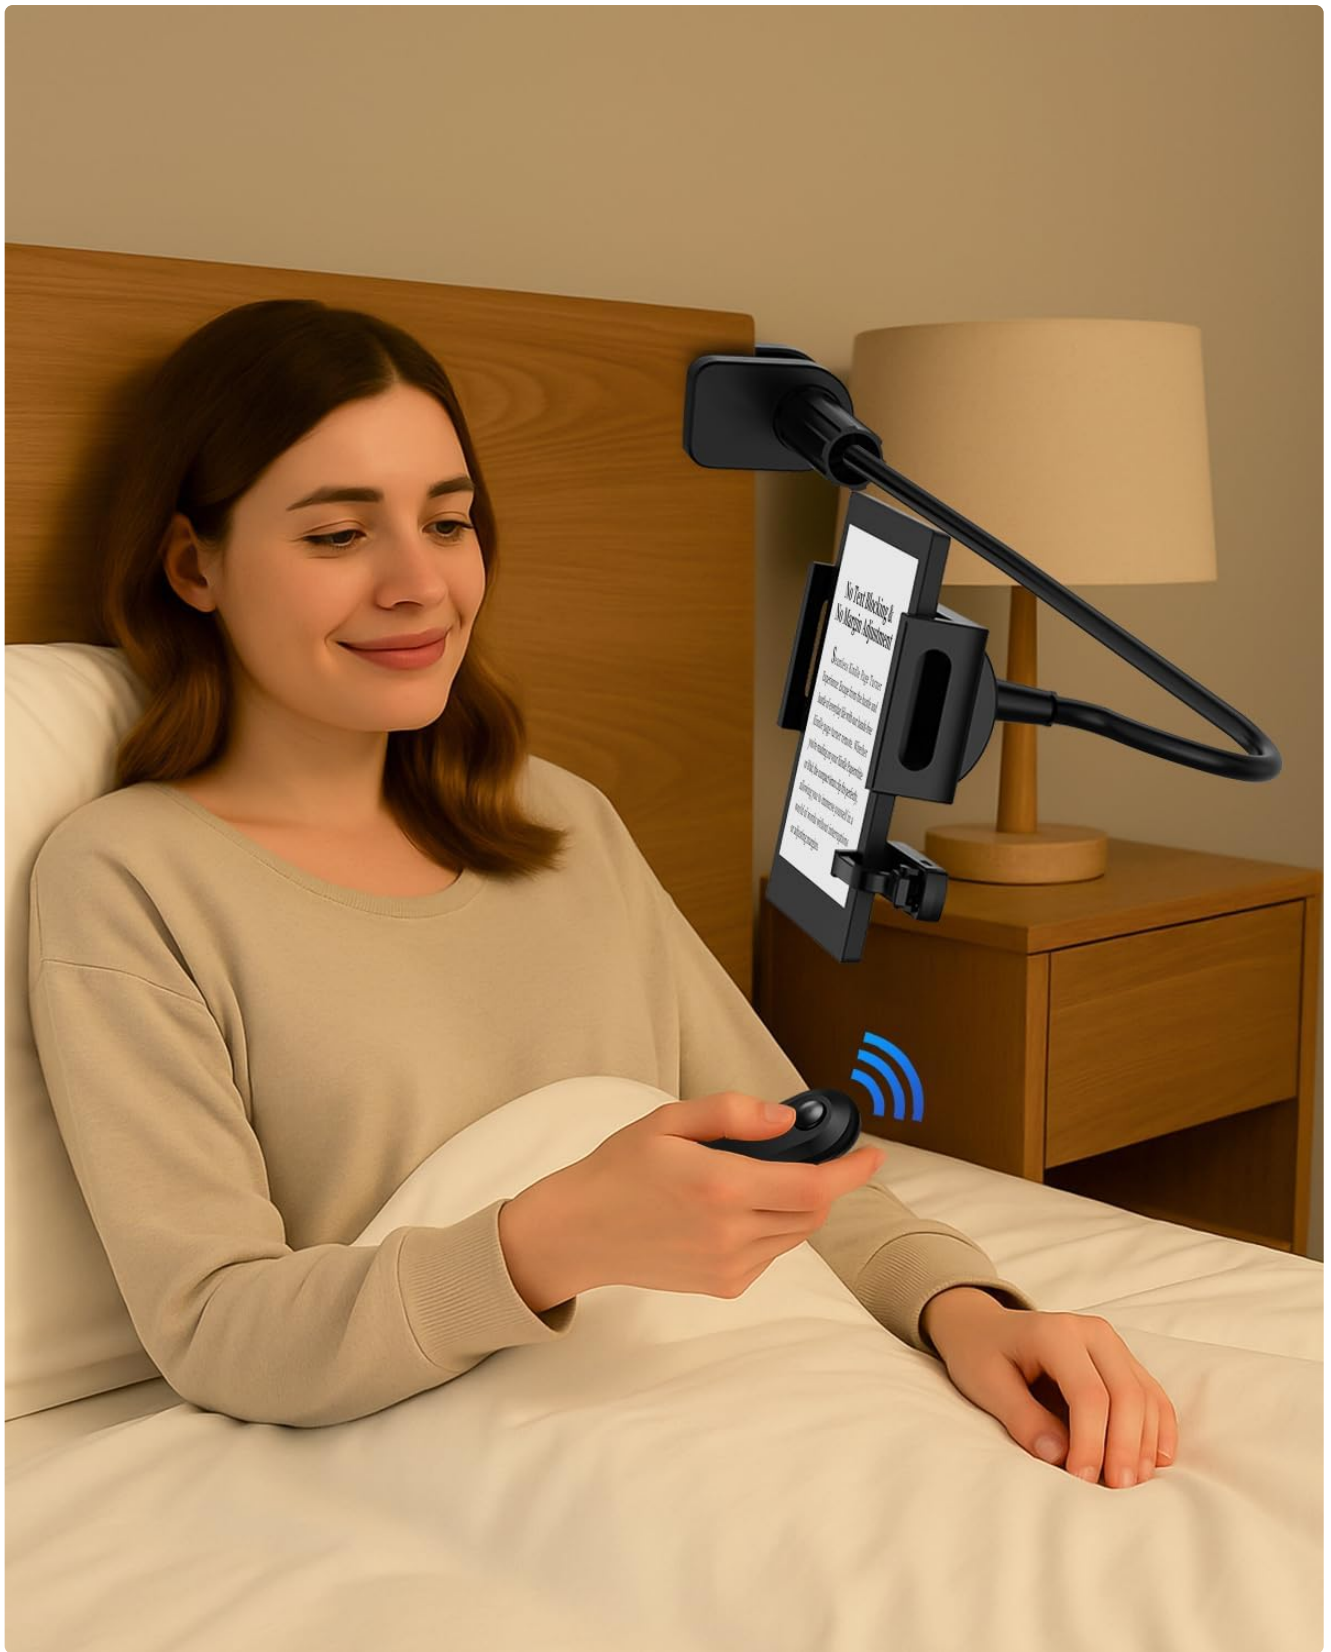


Figure 3.1: Holder in Use



Figure 3.2: Holder Dimensions and Adjustment Features

3.2 Setting Up the Remote Page Turner

1. **Charge the Remote:** Ensure the remote controller and receiver sensor clip are charged using the provided Type-C cable. The remote uses 2 CR5 batteries (included).
2. **Power On the Receiver Clip:** Short press the power button located on the receiver sensor clip. A blue light will flash, indicating it is powered on.
3. **Pair with Remote:** Short press the remote button once. The blue light on the receiver clip will stay solid for 3 seconds, indicating successful pairing. This device uses RF remote technology and does not require Bluetooth or Wi-Fi pairing.
4. **Attach the Receiver Clip:** Clip the receiver sensor onto your e-reader or device screen. Position the touch head of the clip on the page-turn hotspot (typically the left or right edge of the screen, depending on your reading app settings).



Figure 3.3: Page Turner Setup Steps

4. OPERATING INSTRUCTIONS

4.1 Using the Remote Page Turner

Once the receiver sensor clip is paired and correctly positioned on your device's screen, simply press the button on the remote controller to turn the page. The remote provides a silent operation, ideal for quiet environments.

How To Use Page Turner



Step 1:

Short press the power button on the clip (blue light flashes)



Step 2:

Short press the remote button once. The blue light on the clip will stay solid for 3 seconds, indicate successful pairing.



Step 3:

Clip the sensor clip onto your Kindle and press the remote button to turn pages.

Figure 4.1: Remote Page Turning in Action

Thickened and hardened solid aluminum

Total Length About 31in / 80cm



Figure 4.2: Hands-Free Reading with RF Remote

4.2 Adjusting the Holder

The gooseneck arm allows for flexible positioning of your device. Gently bend and shape the arm to achieve the optimal viewing angle. The 360-degree adjustment angle ensures your device can be oriented horizontally or vertically as needed. The holder's design ensures a full-screen view without blocking text or requiring margin adjustments on your device.

Ours



**Full screen view,
no margin tweaks**

Others



**Covers words,
needs margin setting**

Figure 4.3: Unobstructed Reading Experience

Reading Shouldn't Hurt. Here's Proof.



**Neck pain
every morning**



**Relaxed and
pain-free**

Figure 4.4: Ergonomic Benefits

5. COMPATIBILITY

The TeoTeeo Kindle Holder and Remote Page Turner are designed for broad compatibility with various devices.

5.1 Device Holder Compatibility

The tablet holder can accommodate smartphones and tablets ranging from 4.5 to 10 inches wide. This includes:

- Kindle Paperwhite (all generations)

- Kindle Oasis
- Kindle Scribe
- Kindle Fire
- iPads (various models)
- Android tablets (various models)
- Smartphones (iPhone, Samsung Galaxy, Google Pixel, etc.)

Universal Page Turner Multi-compatible

Competible with Kindle, iPhone, iPad, Android



One key control One direction
Control to turn next page



The following models are not compatible:

Older Kindles X

Kindle 7/8 X

Amazon Fire HD 10(10th/11th generation) X

Figure 5.1: Holder Device Compatibility

5.2 Remote Page Turner Compatibility

The page turner supports capacitive screen devices only. It works with most e-readers, tablets, and smartphones that utilize capacitive touchscreens. It is not a Bluetooth HID device.

Compatible Models:

- Kindle Paperwhite (all generations)
- Kindle 10th / 11th (2019 / 2022)
- Kindle Voyage, Oasis (2016 / 2017 / 2019)
- Kindle Scribe (2022 / 2024 refresh)
- Colorsoft - Signature / Base / Kids
- Most iPhones, iPads, and Android phones/tablets with capacitive screens.

Not Compatible Models:

- Kindle Touch (2011) - Infrared touch
- Kindle 7th (2014) - Infrared touch
- Kindle 8th (2016) - Infrared touch
- Kindle 1 / 2 / DX / Keyboard - Non-touch
- Kindle 4 (2011) & Kindle 5 (2012) - Non-touch
- Amazon Fire HD 10 (10th/11th generation)

Note: The remote page turner is not suitable for controlling camera functions on phones.



Figure 5.2: Detailed Compatibility Chart

6. MAINTENANCE

- **Cleaning:** Wipe the holder and remote with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Storage:** When not in use, store the product in a cool, dry place away from direct sunlight.
- **Battery Care:** The remote controller uses CR5 batteries. Replace them as needed. If storing for an extended period, consider removing batteries to prevent leakage.
- **Gooseneck Arm:** While flexible, avoid excessive or forceful bending of the gooseneck arm to prevent damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Page turner not responding.	◦ Low battery in remote or receiver clip. ◦ Receiver clip not properly paired. ◦ Receiver clip not positioned correctly on screen. ◦ Device is not compatible.	◦ Charge both the remote and receiver clip. ◦ Re-pair the remote and receiver clip (refer to Section 3.2). ◦ Adjust the receiver clip's touch head to the page-turn area of your device's screen. ◦ Verify device compatibility (refer to Section 5.2).
Holder is unstable or sags.	◦ Clamp not tightened sufficiently. ◦ Gooseneck arm not bent into a stable shape. ◦ Device too heavy for the arm's current position.	◦ Ensure the clamp is securely tightened to the surface. ◦ Bend the gooseneck arm into a more stable 'S' or 'Z' shape to distribute weight. ◦ Re-adjust the arm to a position that better supports the device's weight.
Device screen is blocked by the holder.	◦ Device not seated correctly.	◦ Ensure your device is properly centered and secured within the holder's grips, which are designed to avoid blocking the screen.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	5.5 x 4 x 6.7 inches (packaged)
Item Weight	1 pound
Gooseneck Arm Length	Approximately 31 inches (80 cm)
Device Holder Width	Compatible with devices 4.5 to 10 inches wide
Mounting Type	Tabletop Clamp
Remote Page Turner Technology	RF (Radio Frequency), not Bluetooth HID
Remote Batteries	2 CR5 batteries (included)
Compatible Devices (Page Turner)	Capacitive touchscreen e-readers, tablets, smartphones (e.g., Kindle Paperwhite, Oasis, Voyage, Scribe, iPhone, iPad, Android)
Material	Thickened and hardened solid aluminum (gooseneck)

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit

the official TeoTeeo website. Keep your purchase receipt for warranty claims.

© 2024 TeoTeeo. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question