

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Nike](#) /
- > [Nike Girls Cotton Crew Neck Jacket CQ9312 User Manual](#)

Nike CQ9312

Nike Girls Cotton Crew Neck Jacket User Manual

Model: CQ9312

[Product Overview](#) [First Use](#) [Wearing Instructions](#) [Care & Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#)
& [Support](#)

1. PRODUCT OVERVIEW

This manual provides instructions for the Nike Girls Cotton Crew Neck Jacket, model CQ9312. This jacket is designed as a comfortable and lightweight layer, suitable for various activities. It features a soft cotton jersey fabric and a full-zip closure.



Image 1.1: Front view of the Nike Girls Cotton Crew Neck Jacket. The jacket is a vibrant pink (Magic Flamingo) with heathered accents, featuring a full-length zipper and a crew neck design.

2. FIRST USE AND PREPARATION

Upon receiving your Nike Girls Cotton Crew Neck Jacket, please follow these steps:

1. **Unpack:** Carefully remove the jacket from its packaging.
2. **Inspect:** Check the jacket for any visible defects or damage. Ensure all zippers and seams are intact.
3. **Initial Wash:** It is recommended to wash the jacket before its first wear. Refer to the "Care & Maintenance" section for detailed washing instructions.

3. WEARING INSTRUCTIONS

The Nike Girls Cotton Crew Neck Jacket is designed for easy wear and comfort.

- **Putting On:** Slip your arms through the sleeves and adjust the jacket over your shoulders.
- **Zipper Closure:** To close the jacket, align the two sides of the zipper at the bottom and pull the slider upwards until fully closed. To open, pull the slider downwards.
- **Pockets:** Utilize the slant pockets for small items or to keep hands warm.

4. CARE AND MAINTENANCE

Proper care will extend the life and maintain the appearance of your jacket. Always refer to the care label inside the garment for the most accurate instructions.

Washing Instructions:

- **Machine Wash:** Wash the jacket in a washing machine with similar colors.
- **Water Temperature:** Use cold water to help preserve fabric color and prevent shrinkage.
- **Detergent:** Use a mild detergent. Avoid harsh chemicals or bleach.
- **Cycle:** Select a gentle cycle to protect the fabric.
- **Drying:** Tumble dry on low heat or hang dry in a shaded area to prevent fading and maintain shape. Avoid direct sunlight.
- **Ironing:** If necessary, iron on a low setting, inside out, to protect any logos or prints. Do not iron directly on prints or embellishments.

Storage:

Store the jacket in a clean, dry place away from direct sunlight to prevent discoloration and damage.

5. TROUBLESHOOTING

This section addresses common minor issues you might encounter with your jacket.

Issue	Possible Cause	Solution
Zipper gets stuck.	Fabric caught in zipper, or zipper teeth are misaligned.	Gently pull the fabric away from the zipper. If teeth are misaligned, try to slowly move the slider up and down to realign. Do not force.
Fabric pilling (small balls of fiber).	Friction from wear or washing.	Use a fabric shaver or lint roller to carefully remove pills. Wash inside out to reduce friction.
Color fading.	Exposure to direct sunlight, harsh detergents, or hot water washing.	Always wash with cold water and mild detergent. Dry in shade. Avoid prolonged exposure to direct sunlight.

6. SPECIFICATIONS

Brand	Nike
Model Number	CQ9312
Generic Name	Jacket
Material Composition	Cotton
Closure Type	Zipper

Neck Style	Crew Neck
Product Dimensions (LxWxH)	30 x 20 x 5 cm (approximate)
Item Weight	400 g (approximate)
Care Instructions	Machine Wash

7. WARRANTY AND SUPPORT

For information regarding the product warranty, please refer to the documentation provided at the time of purchase or visit the official Nike website. For further assistance or support, please contact Nike customer service through their official channels.

Manufacturer: NIKE INDIA PVT LTD

Contact Information: NIKE INDIA PVT LTD, GROUND & 1ST FLOOR OLYMPIA BUILDING, NO 66/1 BAGMANE TECH PARK, CV RAMAN NAGAR BANGALORE-560093 INDIA