

DigiLand R10 PRO

DigiLand 2025 Tablet R10 Pro

USER MANUAL

Introduction

Welcome to the user manual for your new DigiLand 2025 Tablet R10 Pro. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your device. Please read this manual thoroughly to ensure optimal performance and longevity of your tablet.

The DigiLand R10 Pro is a 10.1-inch Android 14 tablet designed for versatile use, featuring a MediaTek Helio G80 octa-core processor, 12GB RAM, and 128GB storage. It comes with a 6000mAh battery and supports Wi-Fi 6 and BT 5.0 connectivity, making it suitable for work, study, and entertainment.

What's in the Box

- R10 PRO Tablet
- R10 PRO Stand Case
- Charger
- Charging Cable
- User Manual



Image: The DigiLand R10 Pro tablet, its stand case, charger, charging cable, and user manual are included in the box.



Image: A detailed view of the tablet, case, charger, charging cable, and quick start guide as packaged.

Product Overview

Key Features

- **Vibrant 10.1" HD Incell Display:** Enjoy stunning visuals on the 10.1-inch HD Incell display with a resolution of 1280x800. The slim and portable design ensures easy mobility, making it ideal for watching movies, working on projects, or gaming on the go. The display's vibrant colors and sharp details provide an immersive experience wherever you are.
- **Powerful Performance & Incredible Value:** The DigiLand Tab R10 PRO delivers an exceptional combination of performance and value. Powered by the MediaTek Helio G80 octa-core processor, 10GB of RAM, and 128GB of storage (expandable up to 256GB), this tablet ensures top-tier performance for all your digital needs without breaking the bank, making it a cost-effective solution for work, study, and entertainment.
- **Reliable Battery Life:** Featuring a 6000mAh battery with 18W fast charging, the DigiLand Tab R10 PRO keeps you powered throughout the day. Whether you're working, studying, or enjoying videos and e-books, you can trust this tablet to stay charged and ready for all your activities.
- **Convenient Stand Case for Hands-Free Viewing:** The DigiLand Tab R10 PRO includes a durable stand case for effortless hands-free viewing, perfect for watching videos or video calls. The 8MP front camera and 13MP rear camera ensure crystal-clear photos and video calls, making this tablet a great companion for both work and play.



Image: An overview of the tablet's core features and specifications.



Image: Visual representation of the tablet's operating system, memory, storage, battery, and display.

Specifications

Feature	Specification
Standing screen display size	10.1 Inches
Screen Resolution	1280x800
Max Screen Resolution	800 x 1280
Processor	2 GHz
RAM	128 GB
Chipset Brand	ARM
Card Description	Integrated
Wireless Type	802.11a, 802.11ac, 802.11b, 802.11g, 802.11n
Average Battery Life (in hours)	12 Hours
Operating System	Android
Item Weight	1.07 pounds
Product Dimensions	9.54 x 6.35 x 0.31 inches
Color	Gray
Rear Webcam Resolution	13 MP
Processor Brand	MediaTek
Computer Memory Type	DDR4 SDRAM
Flash Memory Size	16 GB
Batteries	1 Lithium Polymer batteries required. (included)

Setup

Initial Power On

To power on your DigiLand R10 Pro tablet for the first time, press and hold the power button located on the top left side (when held in landscape orientation) until the DigiLand logo appears on the screen. Follow the on-screen prompts to complete the initial setup, including language selection and basic settings.



Image: The side of the tablet highlighting the location of the power button and various ports.

Connecting to Wi-Fi

During the initial setup, you will be prompted to connect to a Wi-Fi network. Select your desired network from the list and enter the password if required. A stable Wi-Fi connection is essential for downloading apps, updates, and accessing online content.

Memory Expansion (Fusion Memory)

The DigiLand R10 Pro tablet features a memory expansion option, also known as Fusion Memory, which allows you to use a portion of your internal storage as additional RAM. By default, the tablet uses 4GB of RAM, but you can expand it up to 12GB (4GB physical RAM + 8GB virtual RAM from storage).

To enable or adjust memory expansion:

1. Go to **Settings**.

2. Scroll down and tap on **About Tablet**.
3. Locate the **Memory Expansion** option (often listed as 4GB+8GB(Fusion Memory)).
4. Toggle the switch to enable memory expansion and adjust the size if desired.
5. Restart the device for changes to take effect.

While this feature can improve multitasking, note that using internal storage as RAM may result in slightly slower performance compared to physical RAM.

Operating

Basic Navigation

The tablet operates on Android 14, providing an intuitive user interface. Navigate by tapping, swiping, and pinching on the touchscreen. The home screen provides quick access to your most used apps and widgets. Swipe down from the top for quick settings and notifications.



Image: The tablet being used for online education, reading news, watching videos, and reading e-books.

Using Cameras

The tablet is equipped with an 8MP front camera and a 13MP rear camera. Open the Camera app to capture photos and videos. You can switch between front and rear cameras, apply filters, and adjust settings within the app.



Image: Close-up of the tablet's cameras and sample photos taken with them.

Battery Life

The 6000mAh battery provides extended usage times. Expect approximately 9 hours for video playback, 11 hours for e-books, 14 hours for music, and 7 hours for gaming. Actual battery life may vary based on usage patterns and settings.

Long battery life keep you entertained all day

 9 h Video	 11 h E-Books
 14 h Music	 7 h Game

6000mAh



Image: Visual representation of the tablet's long battery life with usage estimates.

Media Consumption

The 10.1-inch HD IPS display and dual-channel speakers enhance your media experience. Enjoy movies, music, and e-books with vibrant colors and clear audio. The Widevine L1 certification ensures high-quality streaming from supported platforms.



Image: A user holding the tablet, with sound waves emanating from the dual speakers, indicating an immersive audio experience.

Gaming

The MediaTek Helio G80 octa-core processor and 12GB RAM provide sufficient power for casual gaming and some more demanding titles. While the 1280x800 resolution is not Full HD, it helps the GPU maintain smoother frame rates. For optimal gaming, ensure your tablet is charged and close unnecessary background applications.

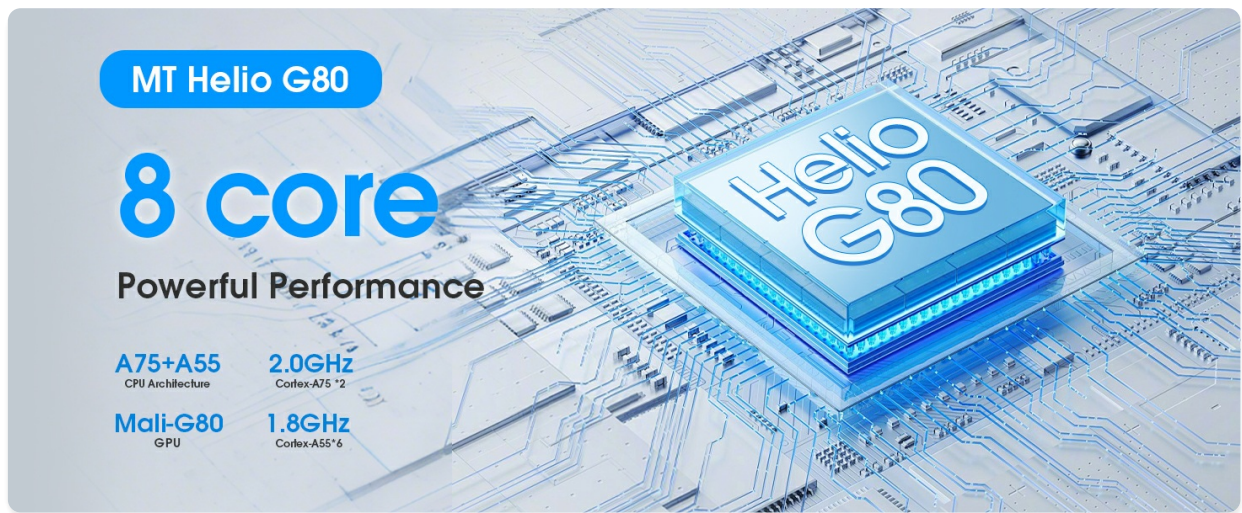


Image: A close-up of the MediaTek Helio G80 processor chip, emphasizing its 8-core architecture and performance capabilities.

Maintenance

Charging

Use the provided charger and USB-C cable to charge your tablet. The tablet supports 18W fast charging. Ensure the charging port is clean and free of debris before connecting the cable.

Cleaning

To clean the screen, use a soft, lint-free cloth. For the tablet body, a slightly damp cloth can be used. Avoid using harsh chemicals or abrasive materials that could damage the finish.

Software Updates

Periodically check for software updates in **Settings > System > System update**. Keeping your tablet's software up to date ensures you have the latest features, security patches, and performance improvements.

Troubleshooting

Common Issues and Solutions

- **Tablet not turning on:** Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again. If unresponsive, press and hold the power button for 10-15 seconds to perform a forced restart.
- **Apps crashing or freezing:** Close background applications. Clear the cache and data of the problematic app in **Settings > Apps > [App Name] > Storage**. If the issue persists, uninstall and reinstall the app.
- **Wi-Fi connectivity issues:** Restart your Wi-Fi router and the tablet. Forget the network in **Settings > Network & internet > Wi-Fi** and reconnect. Ensure you are within range of the Wi-Fi signal.
- **Slow performance:** Close unused apps. Clear cached data regularly. Consider enabling memory expansion if not already active. If performance remains slow, a factory reset (after backing up data) might be necessary.
- **Screen unresponsive:** Try restarting the tablet. If the screen remains unresponsive, contact customer support.

Warranty & Support

For warranty information, technical support, or service inquiries, please refer to the warranty card included in your product packaging or visit the official DigiLand website. Keep your proof of purchase for warranty claims.

DigiLand is committed to providing advanced, smooth, and cost-effective electronic products. For any issues before or after purchase, feel free to contact us for assistance.

Related Documents - R10 PRO

	<p>DIGILAND 10.1 Inch Octa Core Tablet Quick Setup Guide</p> <p>Comprehensive quick setup guide for the DIGILAND 10.1 Inch Octa Core Tablet, covering safety instructions, FCC compliance, charging, setup, and shutdown procedures.</p>
	<p>Digi-Land 10.1 Inch Octa Core Tablet Quick Setup Guide and Safety Information</p> <p>Concise guide for setting up and safely using the Digi-Land 10.1 Inch Octa Core Tablet, including FCC compliance details and important safety instructions.</p>
	<p>DIGILAND 10.1 Inch Quad Core Tablet Quick Setup Guide MID1016</p> <p>Concise setup guide for the DIGILAND 10.1 Inch Quad Core Tablet (Model MID1016), covering safety instructions, FCC compliance, charging, setup, and shutdown procedures.</p>
	<p>Digiland M11 Pro Quick Start Guide</p> <p>A quick start guide for the Digiland M11 Pro tablet, covering initial setup, charging, basic operations, and important FCC compliance information.</p>
	<p>Digiland Limited Product Warranty Information</p> <p>Official limited product warranty details for Digiland electronics, covering terms, exclusions, and claim procedures. Includes 90-day parts and labor warranty.</p>