

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Monster Jam](#) /
- › [Monster Jam Smash & Bash Grave Digger RC Monster Truck User Manual](#)

Monster Jam 6073891

Monster Jam Smash & Bash Grave Digger RC Monster Truck User Manual

Model: 6073891

1. INTRODUCTION

Welcome to the world of Monster Jam! This manual provides essential information for the setup, operation, and maintenance of your new Monster Jam Smash & Bash Grave Digger Remote Control Monster Truck. Please read this manual thoroughly before use to ensure safe and optimal performance.



Figure 1: Monster Jam Smash & Bash Grave Digger RC Monster Truck

2. PACKAGE CONTENTS

Ensure all items are present before beginning setup:

- 1 x Monster Jam Smash & Bash Grave Digger RC Monster Truck
- 1 x Full Function Remote Control
- 1 x USB-C Charging Cable (for truck)
- Instruction Manual

3. SETUP

Follow these steps to prepare your Monster Truck for play:

1. **Unboxing:** Carefully remove the truck and all accessories from the packaging.

2. **Remote Control Battery Installation:** The remote control requires 2 AAA batteries (not included). Locate the battery compartment on the back of the remote, open it, insert the batteries with correct polarity, and close the compartment.
3. **Truck Charging:** The Monster Truck features a built-in rechargeable battery. Connect the included USB-C charging cable to the truck's charging port (typically located on the underside or rear) and to a USB power source. A full charge takes approximately 20 minutes and provides up to 20 minutes of playtime.
4. **Power On:** Once the truck is charged and remote batteries are installed, turn on the truck using its power switch. Then, turn on the remote control. The devices should automatically pair.



Figure 2: Remote Control with One-Touch Repair Button

4. OPERATING INSTRUCTIONS

Your Monster Jam Smash & Bash Grave Digger RC is designed for dynamic play, both indoors and outdoors.

4.1 Basic Controls

- Use the left joystick for forward and reverse movement.

- Use the right joystick for left and right steering.

4.2 Smash & Bash Feature

The truck's unique design allows it to transform into a 'smashed' state upon impact with walls or obstacles. This feature enables exciting stunts and tumbles without damage.



Figure 3: Grave Digger RC in 'Smashed' Mode

4.3 One-Touch Repair Function

After a crash, simply press the dedicated repair button on the remote control to automatically reset the truck to its original form, ready for more action.

4.4 Driving Environment

The truck is suitable for both indoor and outdoor use, featuring soft rubber tires for various terrains. Its 2.4GHz frequency allows for racing up to six vehicles simultaneously and provides a control range of up to 200 feet.

Video 1: Official product video demonstrating the Smash & Bash Grave Digger RC in action, highlighting its crashing and repair features, and indoor/outdoor use.

Video 2: Demonstration of the Smash & Bash feature and easy repair function of the Monster Jam Grave Digger RC.

5. MAINTENANCE

Proper maintenance ensures the longevity of your Monster Truck:

- **Cleaning:** Wipe the truck and remote with a damp cloth to remove dirt and debris. Do not submerge in water.
- **Battery Care:** Always turn off the truck and remote control when not in use. Store in a cool, dry place. For optimal battery life, avoid overcharging or completely draining the truck's battery.
- **Storage:** Keep the truck and remote in a safe place away from extreme temperatures and direct sunlight.

6. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

- **Truck not responding:**
 - Ensure both the truck and remote control are powered on.
 - Check if the remote control batteries are correctly installed and not depleted.
 - Ensure the truck's internal battery is charged.
 - Move closer to the truck to ensure it's within the 200-foot operating range.
- **Truck not charging:**
 - Verify the USB-C cable is securely connected to both the truck and the power source.
 - Try a different USB power source or cable.
- **Smash & Bash feature not working:**
 - Ensure the truck is making sufficient impact with an obstacle.
 - Check for any obstructions in the body's movement mechanism.
- **One-touch repair not working:**
 - Ensure the truck is powered on and the remote control batteries are functional.
 - Press the repair button firmly.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	13.88 x 9.75 x 8 inches
Item Weight	3.13 pounds

Model Number	6073891
Manufacturer Recommended Age	4 - 14 years
Truck Battery	USB-C Rechargeable (built-in)
Remote Control Batteries	2 AAA batteries (not included)
Frequency	2.4GHz (allows up to 6 vehicles)
Control Range	Up to 200 feet
Playtime per Charge	Up to 20 minutes
Manufacturer	Spin Master
Release Date	July 1, 2025

8. WARRANTY AND SUPPORT

This product is covered by the Spin Master Care Commitment. For full details regarding warranty, returns, or customer support, please visit the official Spin Master website or contact their customer service directly. Keep your proof of purchase for any warranty claims.