

[Manuals.plus](#) /

› [Prolux](#) /

› Prolux Phantom Bagged Upright Sealed HEPA Pet Vacuum Cleaner User Manual

Prolux Phantom Residential

Prolux Phantom Bagged Upright Vacuum Cleaner

MODEL: PHANTOM RESIDENTIAL USER MANUAL

Important Safety Instructions

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this vacuum cleaner.
- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up toxic material (e.g., chlorine bleach, ammonia, drain cleaner).
- Do not use without dust bag and/or filters in place.

Package Contents

Verify that all components are present in the packaging:

- Prolux Phantom Upright Vacuum Unit
- Extension Wand
- Duster Tool
- Crevice Tool
- Pet Hair Turbo Brush (Mini Turbo)
- HEPA Bags (initial supply)



Image: Prolux Phantom vacuum cleaner with its main unit, hose, and various attachments including an extension wand, duster tool, crevice tool, pet hair turbo brush, and a HEPA bag.

Setup

Follow these steps to assemble your Prolux Phantom vacuum cleaner:

1. **Handle Assembly:** Insert the upper handle into the main vacuum body until it clicks securely into place.
2. **Hose Connection:** Attach the flexible hose to the designated port on the main unit. Ensure a tight connection to prevent suction loss.
3. **Dust Bag Installation:** Open the dust bag compartment. Insert a new HEPA bag, ensuring it is properly seated and sealed around the intake opening. Close the compartment securely.
4. **Attachment Storage:** Place the included attachments (extension wand, duster tool, crevice tool, pet hair turbo brush) onto their designated onboard storage clips for easy access during operation.



Image: A diagram highlighting key features of the Prolux Phantom, including the easy carrying handle, quick draw hose, LED lights, height adjustment knob, full bag indicator, and onboard attachments.

Operating Instructions

Familiarize yourself with the vacuum's functions for optimal cleaning performance.

Powering On/Off

- Plug the power cord into a suitable electrical outlet.
- Press the power switch located on the main unit to turn the vacuum on or off.

Height Adjustment

The vacuum features a height adjustment knob to optimize cleaning for different carpet pile heights and hard floors.

- Rotate the height adjustment knob, typically located on the front of the vacuum head, to select the appropriate setting for your floor type. Lower settings are for low-pile carpets and hard floors, while higher settings are for thick carpets.



Image: A person using the Prolux Phantom upright vacuum cleaner on a light-colored carpet, demonstrating its use in a typical home environment.

Using Attachments

The quick-draw hose and onboard attachments allow for versatile cleaning beyond floor surfaces.

- **Quick Draw Hose:** Detach the hose from its storage clip to extend its reach for above-floor cleaning.
- **Extension Wand:** Connect the extension wand to the hose for extended reach in high areas or under furniture.
- **Duster Tool:** Use for cleaning delicate surfaces, blinds, and vents.

- **Crevice Tool:** Ideal for narrow spaces, corners, and edges.
- **Pet Hair Turbo Brush:** Attach this tool to the hose or extension wand for effective removal of pet hair from upholstery, stairs, and pet beds.

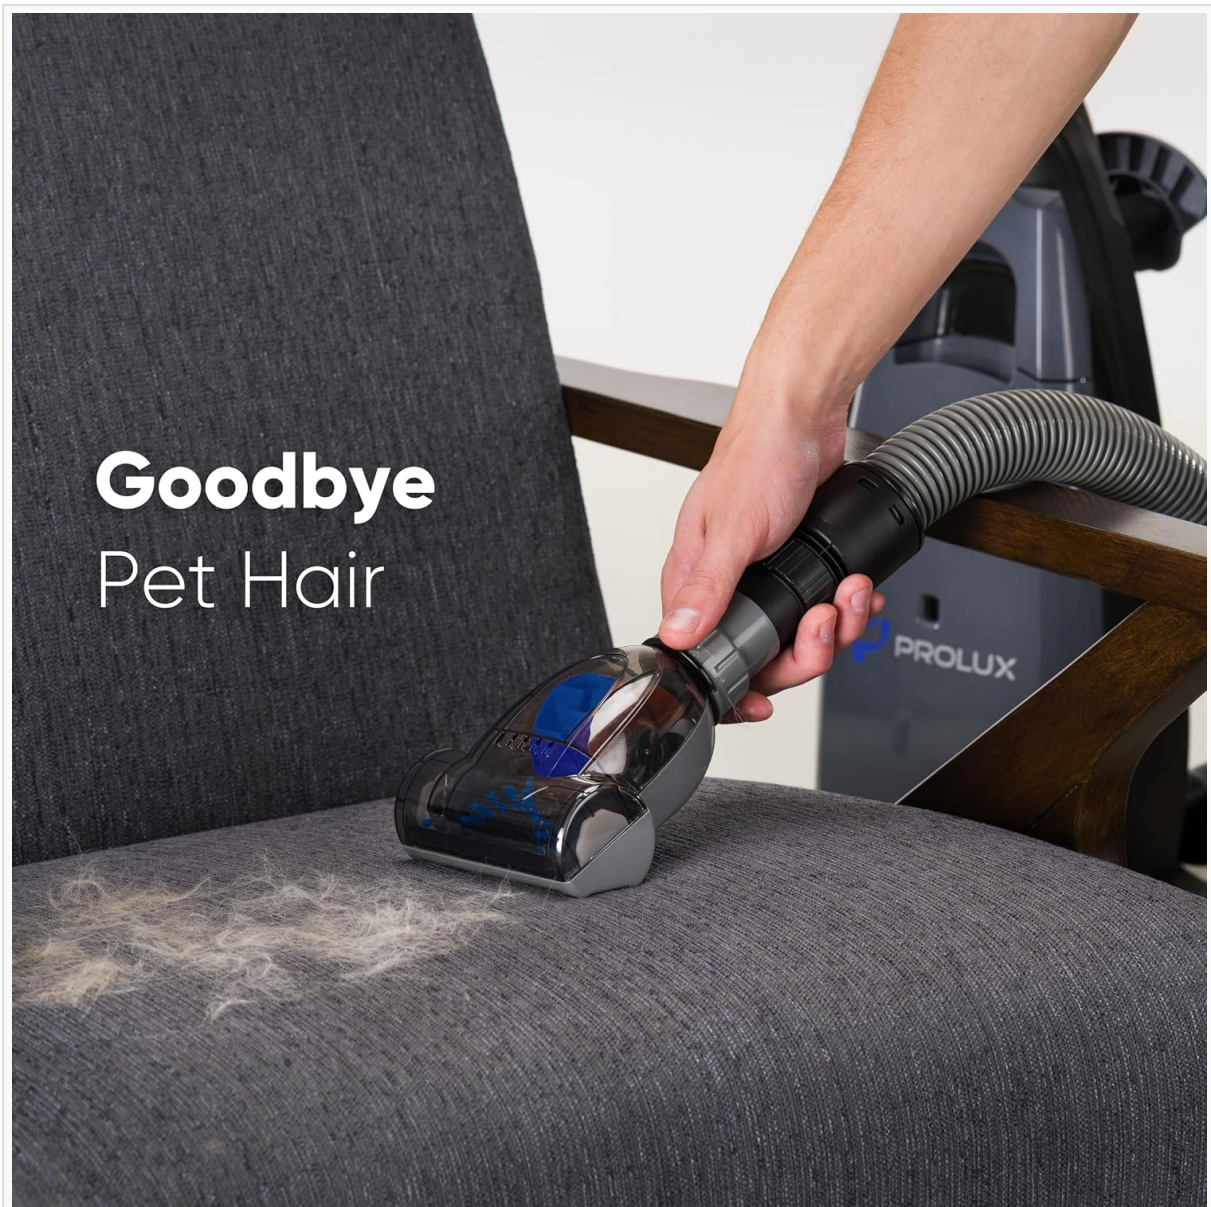


Image: A hand operating the pet hair turbo brush attachment on a grey upholstered chair, effectively removing accumulated pet hair.

Lightweight Design

The Prolux Phantom is designed to be lightweight (approximately 11 lbs) for easy maneuverability and transport throughout your home.



Image: A person holding the Prolux Phantom vacuum cleaner by its carrying handle, illustrating its lightweight design for easy portability.

Maintenance

Regular maintenance ensures the longevity and optimal performance of your vacuum cleaner.

Replacing the Dust Bag

The Prolux Phantom uses 5-layer sealed HEPA bags. Replace the dust bag when the 'Full Bag Indicator' is activated or when suction power noticeably decreases.

1. Unplug the vacuum cleaner from the power outlet.
2. Open the dust bag compartment.
3. Carefully remove the full dust bag, ensuring the opening is sealed to contain dust.
4. Insert a new Prolux 5-layer HEPA bag, making sure it fits securely into the bag holder and seals

properly.

5. Close the dust bag compartment firmly.

Cleaning the HEPA Filter

The sealed HEPA filtration system traps 99.97% of dust and allergens. Periodically check and clean the HEPA filter as recommended.

1. Unplug the vacuum cleaner.
2. Locate the HEPA filter compartment, typically near the exhaust.
3. Remove the HEPA filter. Tap it gently over a waste bin to dislodge accumulated dust. Do not wash the HEPA filter unless specified by the manufacturer.
4. Reinsert the clean HEPA filter and close the compartment.



Image: A close-up view illustrating the internal HEPA filter and the multi-layered HEPA dust bags used in the Prolux Phantom vacuum cleaner.

Cleaning the Brush Roll

Hair and debris can become entangled in the brush roll, reducing cleaning effectiveness. Clean regularly.

1. Unplug the vacuum cleaner.
2. Lay the vacuum flat to access the underside.

3. Using scissors or a seam ripper, carefully cut and remove any hair or threads wrapped around the brush roll.
4. Ensure the brush roll spins freely.



Image: An underside view of the Prolux Phantom vacuum cleaner, clearly showing the rotating brush roll with bristles and the wheels.

Troubleshooting

Refer to this section for solutions to common issues.

Problem	Possible Cause	Solution
Vacuum does not turn on	Not plugged in; Power outlet fault; Power switch off	Ensure plug is fully inserted; Check circuit breaker; Press power switch to ON position
Low or no suction	Full dust bag; Clogged hose/attachments; Blocked filter; Brush roll jammed	Replace dust bag; Clear any blockages from hose/attachments; Clean/replace filters; Clear brush roll of debris
Unusual noise	Foreign object in brush roll; Motor issue; Loose part	Inspect and clear brush roll; If noise persists, contact customer support

Problem	Possible Cause	Solution
Brush roll not spinning	Hair/debris entanglement; Belt broken	Clean brush roll; Inspect and replace belt if broken (refer to service manual or contact support)

Specifications

Feature	Detail
Brand	Prolux
Model Name	Phantom Residential
Item Model Number	phantupres
Form Factor	Upright
Color	Grey and Blue
Item Weight	11 pounds
Product Dimensions	14"L x 14"W x 44"H
Wattage	1100 watts
Amperage	10 Amps
Maximum Suction	65 CFM (Cubic Feet per Minute)
Filter Type	Cloth, HEPA Filter (Sealed HEPA bags)
Bag Capacity	4 Quarts
Power Cord Length	25 feet
Hose Length	5 feet
Cleaning Path Width	14 Inches
Special Features	Bagged, HEPA, Headlight, Hypoallergenic, Lightweight
Recommended Uses	Carpet, Hardfloor, Pet Hair, Rugs, Upholstery
UPC	689466946284

Warranty and Support

The Prolux Phantom vacuum cleaner comes with a manufacturer's warranty:

- **3-Year Body Warranty:** Covers the main body components of the vacuum.
- **5-Year Motor Warranty:** Covers the vacuum's motor against defects.

For warranty claims, technical assistance, or to purchase replacement parts and accessories (such as HEPA bags), please contact Prolux customer support through their official website or the retailer where the product was purchased. Keep your proof of purchase for warranty validation.

