

Disney 83063

Disney Stitch Squish Light User Manual

Model: 83063

INTRODUCTION

The Disney Stitch Squish Light is a soft, squeezable LED night light designed for various spaces such as bedrooms, playrooms, and nurseries. It offers three levels of white light and can be powered via USB-C or AAA batteries, providing both stationary and portable illumination.

This manual provides essential information for the safe and effective use of your Stitch Squish Light, including setup, operation, maintenance, and troubleshooting.

SAFETY INFORMATION

- **Read all instructions before use.** Keep this manual for future reference.
- **Not Water Resistant:** This product is not water resistant. Avoid exposure to liquids.
- **Power Source:** Use only the specified power sources (USB-C 5V, 1A adapter or 3 AAA batteries).
- **Battery Safety:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Remove batteries if the product is not used for an extended period.
- **Placement:** Place the light on a stable, flat surface.
- **Cleaning:** Clean only with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Children:** This product is designed for children aged 2 and up. Adult supervision is recommended.

PACKAGE CONTENTS

- 1 x Disney Stitch Squish Light (Model 83063)
- 1 x USB-C Cable
- *Note: A 5V, 1A USB-A power adapter and 3 AAA batteries are not included.*

SETUP

Powering the Device

The Stitch Squish Light can be powered in two ways:

Option 1: USB-C Cable (Recommended for continuous use)

1. Connect the included USB-C cable to the port located on the back of the Stitch Squish Light.
2. Plug the other end of the USB-C cable into a 5V, 1A USB-A power adapter (not included) or a compatible USB port.
3. Ensure the connection is secure.

Two Power Options



USB-C cable*
(included)



*Power adapter not included

3 AAA batteries
(not included)



Image: Rear view of the Stitch Squish Light, illustrating the USB-C port and the battery compartment. The image also shows the included USB-C cable and indicates that a power adapter and AAA batteries are sold separately.

Option 2: AAA Batteries (For portable use)

1. Locate the battery compartment on the underside of the light.
2. Using a small Phillips head screwdriver, open the battery compartment cover.

3. Insert three (3) new AAA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

When operating on batteries, the light will automatically turn off after 60 minutes to conserve power.

OPERATING INSTRUCTIONS

Turning On/Off

- To turn the light **ON**, press the ON/OFF button located on the underside of the base.
- To turn the light **OFF**, press and hold the ON/OFF button.

Adjusting Brightness

The Stitch Squish Light features three levels of white light: High, Medium, and Low.

1. Once the light is ON, gently tap the underside of the base to cycle through the brightness levels.
2. Each tap will switch the light to the next brightness level (e.g., Low → Medium → High → Low).



Image: A child's hand gently tapping the top of the Stitch Squish Light, demonstrating how to switch between brightness levels.



Image: A visual representation of the Stitch Squish Light illuminated at High, Medium, and Low brightness settings.

MAINTENANCE

Cleaning

- Ensure the light is turned OFF and disconnected from any power source before cleaning.
- Wipe the surface of the light with a soft, dry, lint-free cloth.
- Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the finish or internal components.

Battery Replacement

If using batteries and the light dims significantly or stops working, it may be time to replace the batteries.

1. Turn off the light.
2. Open the battery compartment on the underside of the light using a Phillips head screwdriver.

3. Remove the old AAA batteries and dispose of them properly according to local regulations.
4. Insert three (3) new AAA batteries, observing the correct polarity (+/-).
5. Securely close the battery compartment cover.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power or low batteries.	Ensure USB-C cable is securely connected to a working power source. If using batteries, replace with new AAA batteries.
Light does not dim or change brightness.	Improper tapping or internal issue.	Ensure you are gently tapping the underside of the base. Try turning the light off and on again.
Light turns off automatically after 60 minutes.	Operating on battery power.	This is a normal power-saving feature when using batteries. To keep the light on continuously, use the USB-C cable connected to a power adapter.

SPECIFICATIONS

Model Number	83063
Brand	Disney
Product Dimensions (D x W x H)	5.5" x 5.6" x 5.8"
Material	Silicone (Base and Shade)
Light Source Type	LED
Power Source	USB (5V, 1A) or 3 x AAA Batteries
Control Method	Touch
Features	Dimmable (3 levels), Energy Efficient, Portable
Water Resistance Level	Not Water Resistant
Manufacturer	Jasco Products
UPC	030878830638



Image: A diagram illustrating the approximate dimensions of the Stitch Squish Light: 9.7 inches wide, 7.0 inches high, and 5.5 inches deep.

WARRANTY INFORMATION

This Disney Stitch Squish Light (Model 83063) is covered by a **90-day limited warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use.

The warranty does not cover damage caused by misuse, accident, unauthorized modification, or failure to follow the instructions in this manual. Please retain your proof of purchase for warranty claims.

SUPPORT

For technical support, warranty claims, or further assistance with your Disney Stitch Squish Light, please contact the manufacturer, Jasco Products.

Please visit the official Jasco Products website for contact information or refer to the packaging for customer service details.

Note: Specific contact details are not provided in this manual. Please refer to the product packaging or manufacturer's website for the most current support information.



© 2026 Disney. All rights reserved. Manufactured by Jasco Products.