

[Manuals.plus](#) /

› [TIKATARER](#) /

› TIKATARER Perpetual Motion Machine User Manual

TIKATARER TIKATARERo8510tiycx-11

TIKATARER Perpetual Motion Machine User Manual

Model: TIKATARERo8510tiycx-11

INTRODUCTION

Thank you for purchasing the TIKATARER Perpetual Motion Machine. This device is designed to demonstrate principles of dynamics and provide a visually engaging experience. Please read this manual carefully before use to ensure proper operation and maintenance.

Package Contents:

- 1 x Perpetual Motion Machine
- 10 x Steel Ball
- 1 x Charging Cable
- 1 x User Manual (this document)

SAFETY INFORMATION

Please observe the following safety precautions:

- Keep out of reach of small children due to small parts (steel balls) which may pose a choking hazard.
- Do not disassemble the unit. Refer all servicing to qualified personnel.
- Avoid exposing the device to extreme temperatures or direct sunlight.
- Use only the provided charging cable.
- Do not immerse the device in water or other liquids.

PRODUCT SIZE

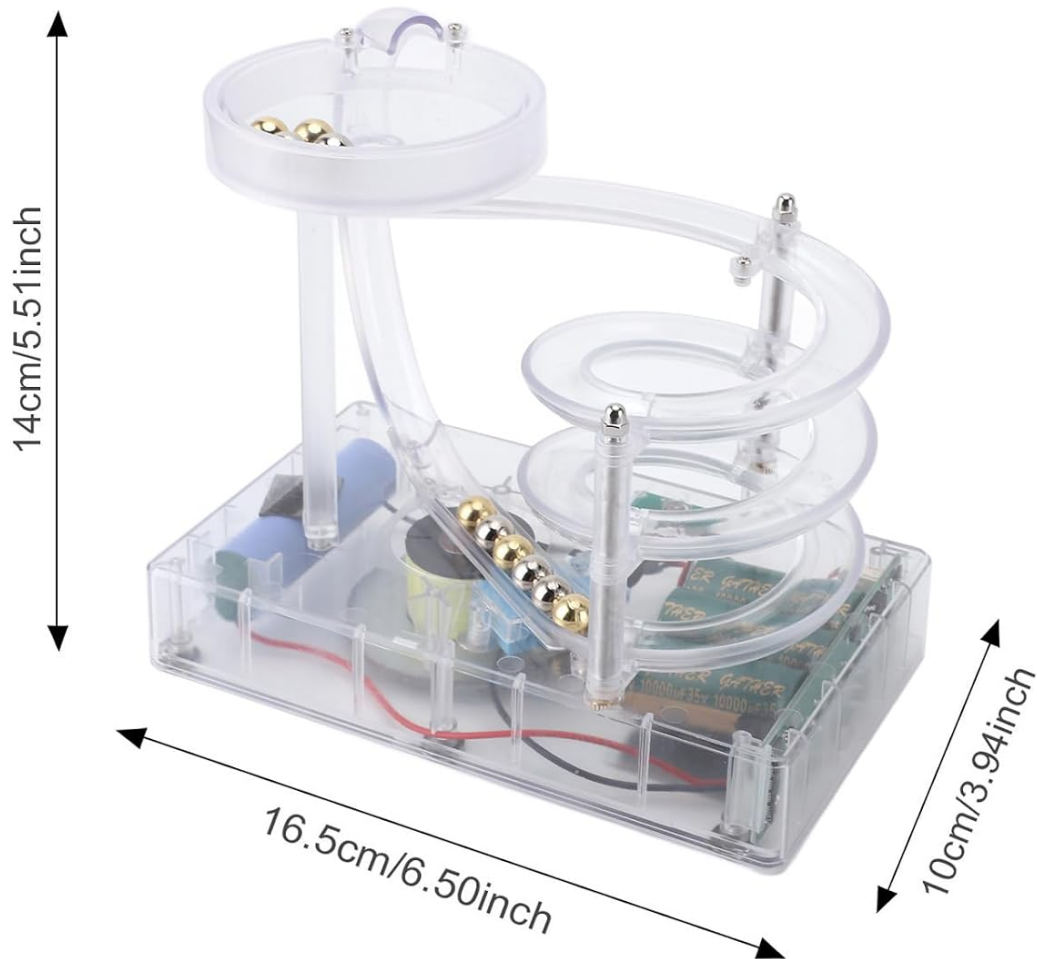


Image: A warning label displaying "Warning" in multiple languages, emphasizing the importance of reading instructions carefully.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all items listed in the "Package Contents" section are present.
2. **Placement:** Place the perpetual motion machine on a stable, flat surface. Ensure there is enough space around the device for optimal viewing and operation.
3. **Charging:** Connect the provided charging cable to the device's charging port and to a suitable USB power source. The built-in lithium battery has a capacity of 1800mAh. Allow the device to fully charge before first use.
4. **Adding Steel Balls:** Place the provided steel balls into the designated starting point at the top of the track. The machine is designed to operate with multiple balls simultaneously.



Image: The TIKATARER Perpetual Motion Machine, showing its transparent structure, spiral track, and several steel balls resting on the lower track.

OPERATING INSTRUCTIONS

1. **Power On:** Locate the power switch, usually on the base of the unit. Flip the switch to the 'ON' position.
2. **Initiating Motion:** Once powered on, the internal mechanism will begin to lift the steel balls from the lower track to the upper starting point. The balls will then roll down the spiral track, demonstrating continuous motion.
3. **Observation:** The device operates through the principle of dynamics, creating an automatic and continuous motion of the steel balls. This can be a relaxing and engaging visual experience.
4. **Power Off:** To stop the motion, flip the power switch to the 'OFF' position.



Image: A detailed view of the TIKATARER Perpetual Motion Machine, highlighting the transparent spiral track and the steel balls in various positions, illustrating the kinetic art.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to gently wipe the surface of the machine. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the machine in a cool, dry place, away from direct sunlight and excessive dust.
- **Battery Care:** To prolong battery life, avoid completely draining the battery frequently. Recharge the device when the motion appears to slow down or stop.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Machine does not start.	Battery is low or depleted. Power switch is off.	Charge the device using the provided cable. Ensure the power switch is in the 'ON' position.
Steel balls stop moving.	Battery is low. Obstruction on the track.	Recharge the device. Check the track for any debris or misaligned balls and remove them.
Unusual noise during operation.	Internal mechanism issue.	Turn off the device. If the noise persists after restarting, contact customer support. Do not attempt to open the unit.

SPECIFICATIONS

- **Model:** TIKATARERo8510tiycx-11
- **Material:** Plastic, ABS, Stainless Steel
- **Battery Type:** Built-in Lithium Battery
- **Battery Capacity:** 1800mAh
- **Product Dimensions:** 20 x 19 x 14 cm (L x W x H)
- **Weight:** Approximately 640 g
- **Color:** Transparent



Image: A diagram illustrating the dimensions of the TIKATARER Perpetual Motion Machine, showing its length (16.5cm/6.50inch), height (14cm/5.51inch), and width (10cm/3.94inch).

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official TIKATARER website. Please have your model number (TIKATARERo8510tiycx-11) and purchase date ready

when contacting support.
Note: This product is intended for decorative and educational purposes. Any unauthorized modification or misuse may void the warranty.

© 2025 TIKATARER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page
<https://manuals.plus/asin/B0DTJK1T69>
More documents and user manuals: <https://manuals.plus/>