

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Vekkia](#) /

› [Vekkia 64 LED Music Stand Light & Music Stand User Manual](#)

Vekkia 64 LED Music Stand Light & Music Stand

Vekkia 64 LED Music Stand Light & Music Stand User Manual

Model: 64 LED Music Stand Light & Music Stand

1. INTRODUCTION

Thank you for choosing the Vekkia 64 LED Music Stand Light & Music Stand. This product is designed to provide stable support for your sheet music and optimal illumination for various performance and practice environments. This manual contains important information regarding the setup, operation, and maintenance of your device. Please read it thoroughly before use and retain it for future reference.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package. If any items are missing or damaged, please contact Vekkia customer support.

- 1 x Music Stand Panel
- 1 x Music Stand Tripod
- 1 x 64 LED Music Stand Light
- 1 x Remote Control
- 1 x Carry Bag



Image: All components of the Vekkia 64 LED Music Stand Light and Music Stand, including the folded stand panel, tripod, clip-on light, and carry bag.

3. SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not expose the device to water or excessive moisture. This product is not waterproof.
- Avoid disassembling or modifying the product. Unauthorized modifications may void the warranty and pose safety risks.
- Keep the product away from heat sources and direct sunlight to prevent overheating.
- Ensure the music stand is placed on a stable, level surface to prevent tipping.
- Do not look directly into the LED light for extended periods, as it may cause eye strain.
- Use only the specified power source (battery powered) for the LED light.

4. SETUP

Follow these steps to assemble your Vekkia Music Stand and attach the LED light:

- 1. Assemble the Tripod:** Unfold the legs of the music stand tripod until they are fully extended and stable. Tighten any locking mechanisms to secure the legs.
- 2. Attach the Music Stand Panel:** Place the music stand panel onto the top pole of the tripod. Secure it firmly using the provided knob or locking mechanism.
- 3. Attach the LED Light:** Clip the 64 LED Music Stand Light onto the top edge of the music stand panel. Ensure it is securely fastened and positioned to illuminate your sheet music evenly.
- 4. Adjust Height and Angle:** Adjust the height of the music stand using the telescopic poles and locking clamps. The stand is height adjustable from approximately 34 inches to 64 inches. Adjust the angle of the music stand panel and the flexible gooseneck of the LED light for optimal viewing and illumination.



Image: The Vekkia music stand fully assembled with the 64 LED light attached, ready for use.

HEIGHT ADJUSTABLE

Suitable for adults or children



Image: Illustration demonstrating the adjustable height feature of the music stand, suitable for various user heights from children to adults.

5. OPERATING INSTRUCTIONS

5.1. LED Music Stand Light Operation

The 64 LED Music Stand Light is battery-powered and features adjustable brightness and color temperature.

- **Power On/Off:** Press the power button on the light unit or the remote control to turn the light on or off.
- **Brightness Adjustment:** Use the brightness control buttons on the light unit or remote to cycle through 5 brightness levels. The light also supports stepless dimming from 15 lumens to 200 lumens.
- **Color Temperature Adjustment:** Select from 3 color temperature modes (White 6000K, Warm 3000K, Daylight 4000K) using the dedicated button on the light unit or remote control.
- **Memory Function:** The light will remember your last brightness and color temperature settings when turned off and on again.

PANEL EXPANSION CLIP

It can hold wider music scores



Image: The 64 LED music stand light illuminating sheet music on the stand, demonstrating its primary function.

3 Color Temperature X 5 Brightness

Keep your favorite brightness setting when you turn on the music light again



Image: Visual representation of the three color temperature options (White, Warm, Daylight) and the stepless dimming range of the LED light.

5.2. Music Stand Panel Expansion

The music stand panel features an expansion clip to accommodate wider music scores.

- **Expand Panel:** Gently pull the side clips outwards to extend the width of the music stand panel. The panel can expand from 15.75 inches to 20 inches, extending approximately 2.36 inches outwards on each side.
- **Secure Music:** Place your music scores on the expanded panel. The clips will help hold wider sheets securely.



Image: Diagram illustrating the panel expansion clips, showing how the music stand width can be extended from 15.75 inches to 20 inches.

6. MAINTENANCE

Proper maintenance will extend the lifespan of your Vekkia Music Stand Light & Music Stand.

- **Cleaning:** Wipe the surfaces of the stand and light with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, fold the music stand and detach the light. Store them in the provided carry bag in a cool, dry place away from direct sunlight.
- **Battery Care:** If the light will not be used for an extended period, ensure the battery is charged periodically to maintain its health.

7. TROUBLESHOOTING

If you encounter issues with your Vekkia Music Stand Light & Music Stand, please refer to the following common solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Light does not turn on.	Low battery or power button not pressed.	Charge the light's battery. Ensure the power button is pressed firmly.
Remote control not working.	Remote battery depleted or obstruction.	Replace the remote control battery. Ensure no obstructions between the remote and the light.
Music stand feels unstable.	Legs not fully extended or locking mechanisms loose.	Ensure tripod legs are fully extended and all locking clamps are tightened. Place on a flat, stable surface.
Light flickers or dims unexpectedly.	Low battery.	Recharge the light's battery.

8. SPECIFICATIONS

- **Brand:** Vekkia
- **Model:** 64 LED Music Stand Light & Music Stand
- **Light Source Type:** LED
- **Number of Light Sources:** 64
- **Power Source:** Battery Powered (Cordless)
- **Brightness:** 15lm - 200lm (Stepless Dimming, 5 levels)
- **Color Temperatures:** 3000K (Warm), 4000K (Daylight), 6000K (White)
- **Switch Type:** Push Button
- **Material:** Aluminum, Plastic
- **Color:** Black
- **Music Stand Height Adjustment:** 34 inches to 64 inches
- **Music Stand Panel Width:** 15.75 inches (expandable to 20 inches)
- **Indoor/Outdoor Usage:** Indoor
- **Waterproof:** No
- **Included Components:** Music Stand Tripod, Music Stand Panel, 64 LED Music Stand Light, Remote Control, Carry Bag

9. WARRANTY AND SUPPORT

Vekkia products are manufactured with quality and reliability in mind. For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official Vekkia website. If you require assistance, please contact Vekkia customer service with your product model and purchase details.

Vekkia Customer Support: [Visit the Vekkia Store on Amazon](#)