

OLEVS 3655

OLEVS 3655 Men's Quartz Chronograph Watch Instruction Manual

Model: 3655

This manual provides instructions for the setup, operation, and maintenance of your OLEVS 3655 Quartz Chronograph Watch.

- Setup
- Operation
- Maintenance
- Troubleshooting
- Specifications
- Warranty & Support

INTRODUCTION

The OLEVS 3655 is a sophisticated quartz chronograph watch designed for men, featuring a stainless steel case and band, luminous hands, a date display, and a moon phase indicator. This manual will guide you through its features and proper care.

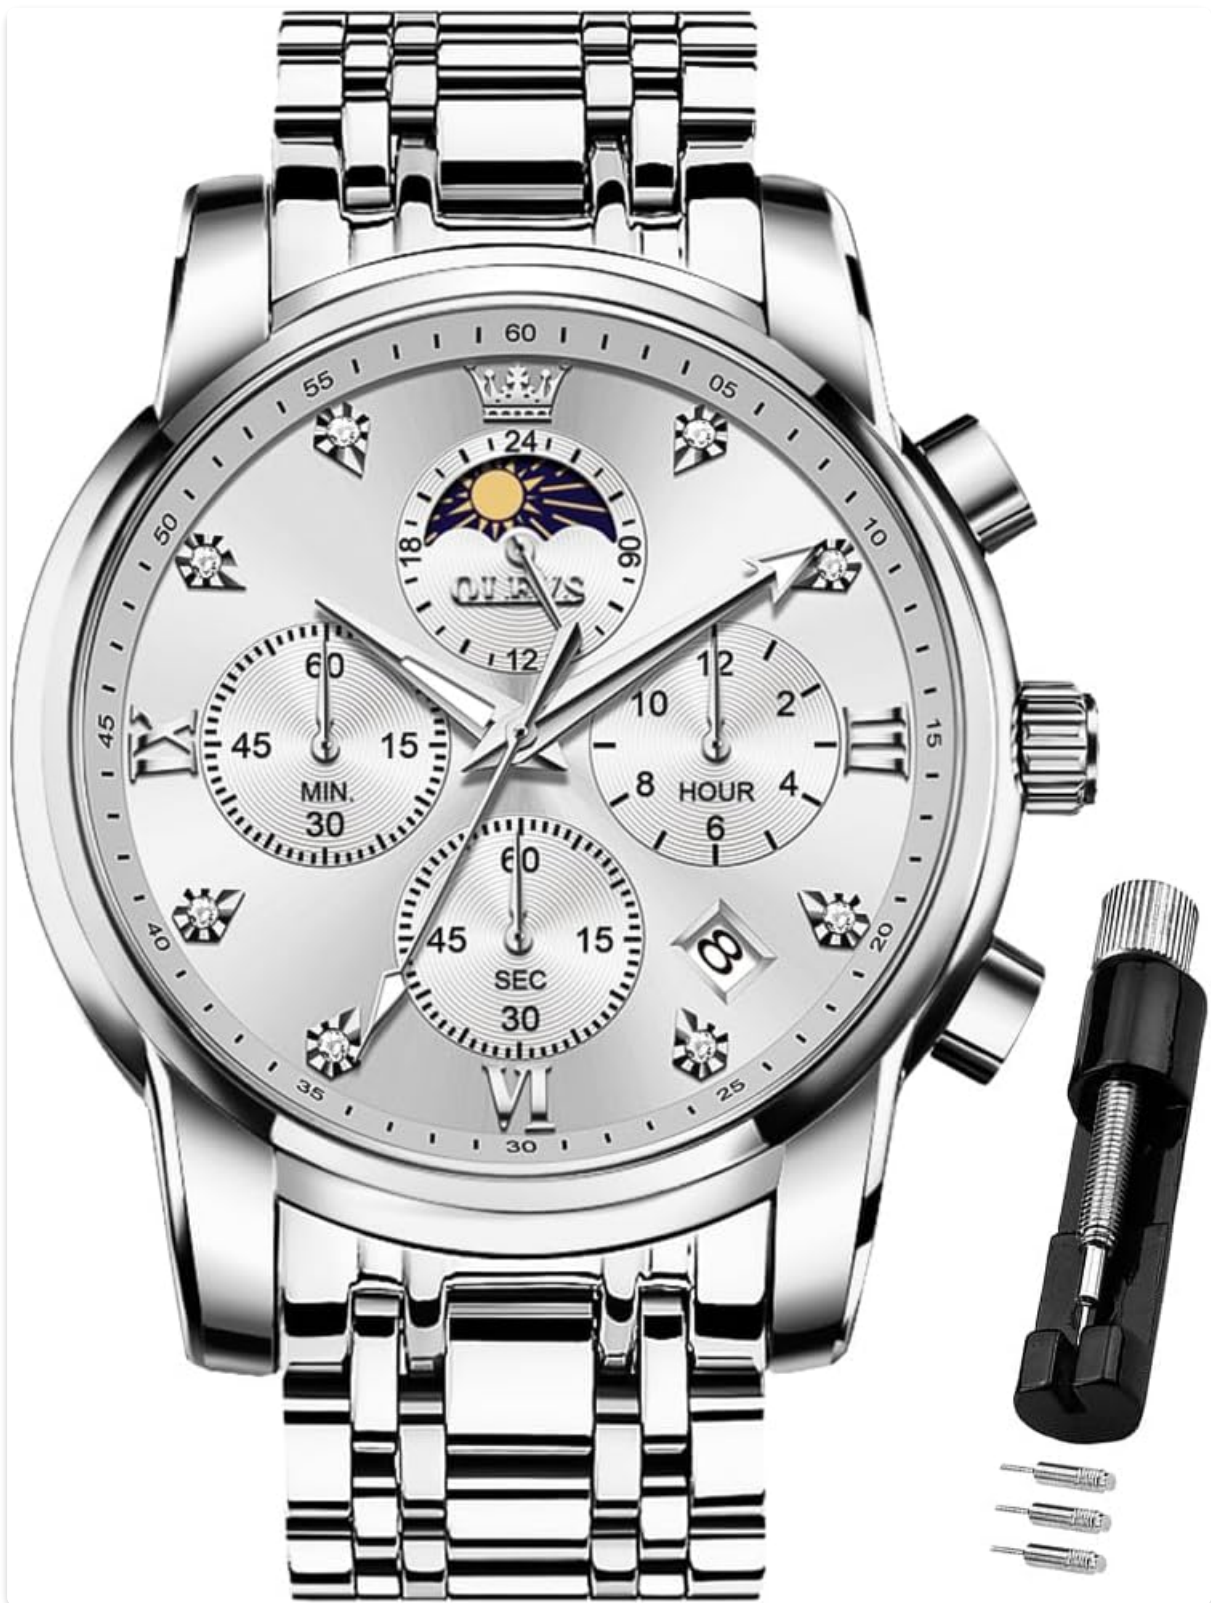


Image: Front view of the OLEVS 3655 Men's Quartz Chronograph Watch, showcasing its silver-tone finish, multi-dial face, and diamond hour markers.

SETUP

1. Setting Time and Date

The OLEVS 3655 watch features a crown and two push-buttons for adjustments. Refer to the diagram below for control identification.



Image: Diagram illustrating the watch controls, including the crown and push-buttons, with labels for chronograph start/stop, timer reset, and time/date adjustment.

- **To Set Time:** Pull out the crown to the second position (two gears). Rotate the crown to adjust the hour and minute hands. Push the crown back in to set the time.
- **To Set Date:** Pull out the crown to the first position (one gear). Rotate the crown to adjust the date in the calendar small window. Push the crown back in.
- **To Adjust 24-Hour Moon Phase:** This sub-dial typically synchronizes with the main time. Ensure the main time is set correctly for accurate moon phase display.

2. Adjusting the Watch Band

The metal watch band can be adjusted by removing or adding links. An adjustment tool is provided with your watch. It is recommended to remove an equal number of links from both sides of the clasp to maintain balance.

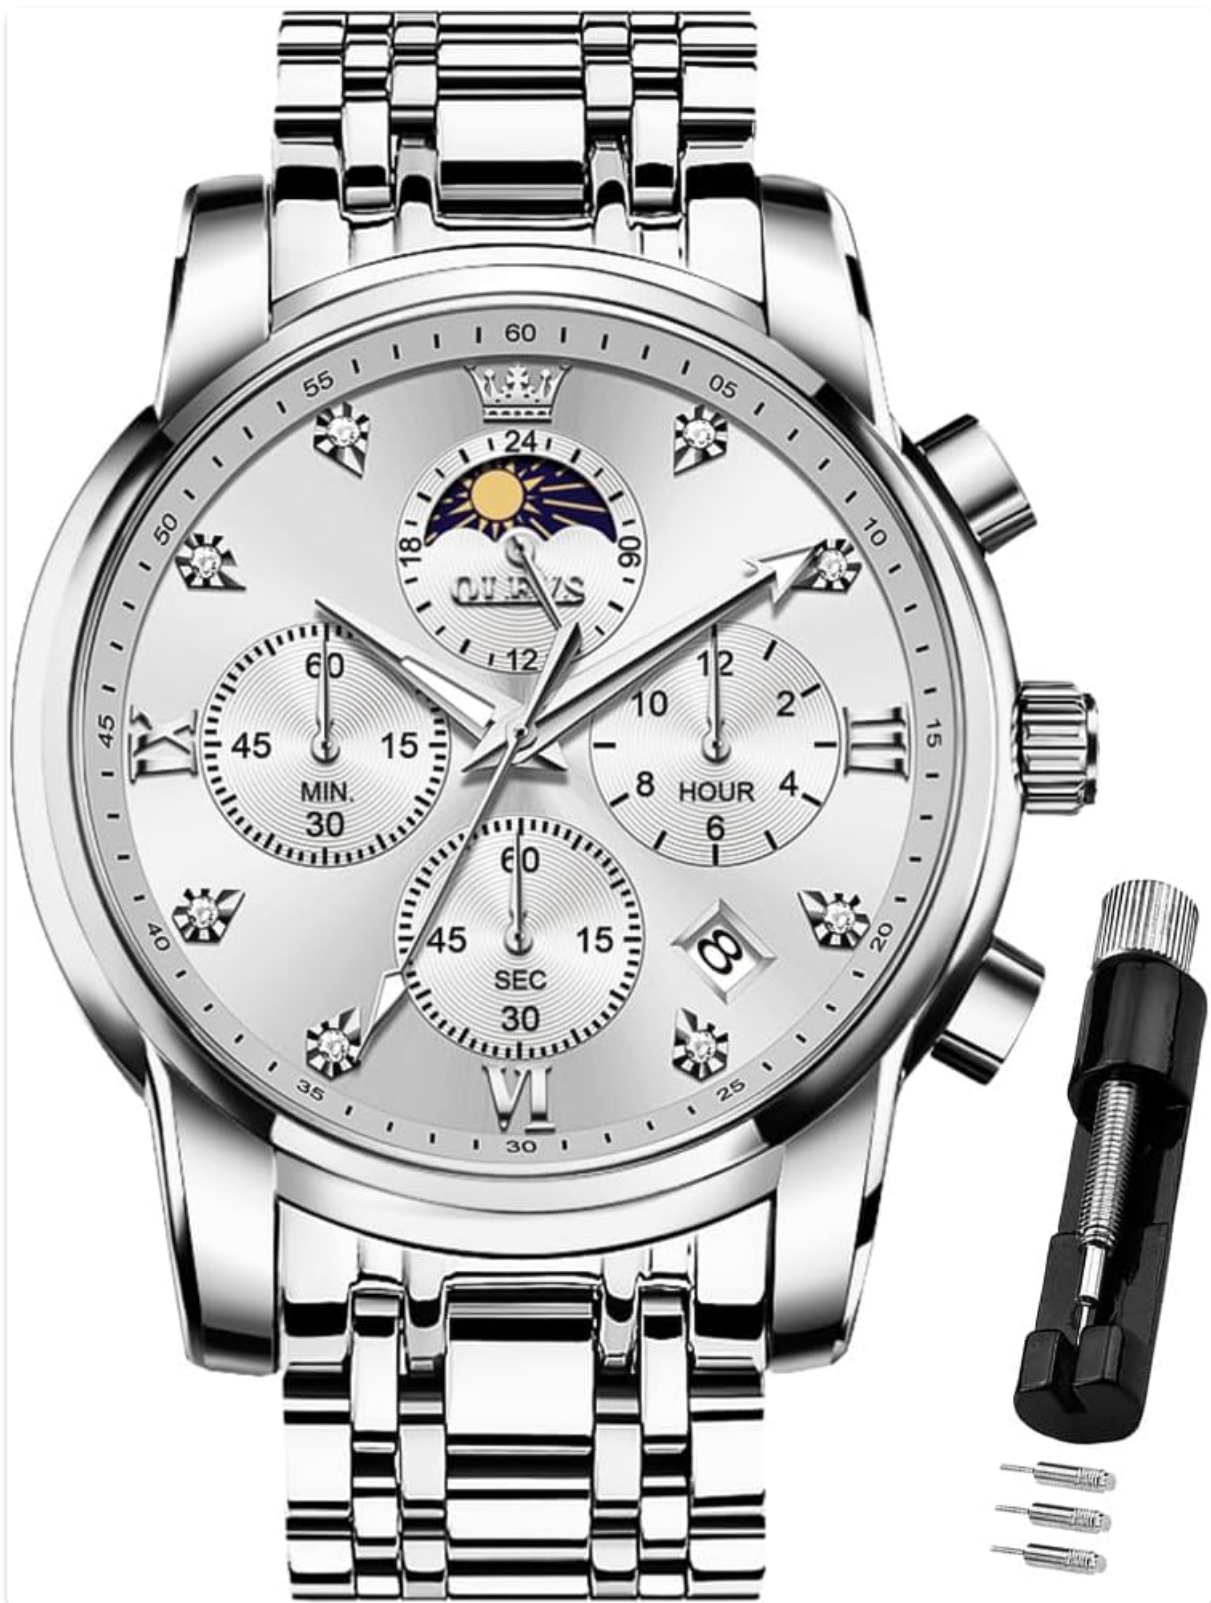


Image: The OLEVS 3655 watch shown alongside the included band adjustment tool, which is used for resizing the metal bracelet.

Instructions for Band Adjustment:

1. Place the watch band on the removal tool, aligning the tool's thimble with the link pin's hole.
2. Rotate the thimble to push the link pin out.
3. Remove the desired number of links.
4. Reconnect the metal band by reinserting the link pin in the direction of the eject fork. Use the disassembly tool to push the pin flush with the band.
5. Repeat the process for the other side if necessary. Ensure the band is securely reconnected.

For a visual guide, please refer to the video below:

Your browser does not support the video tag.

Video: A demonstration of how to remove and install links on a metal watch band using the provided adjustment tool.

OPERATION

1. Chronograph Function

The watch features a chronograph (stopwatch) function with 60-minute and 60-second counters.

- **Start/Stop:** Press button A (top push-button) to start the chronograph. Press it again to stop.
- **Reset:** With the chronograph stopped, press button B (bottom push-button) to reset all chronograph hands to zero.

2. Moon Phase Display

The moon phase sub-dial indicates the current phase of the moon. This feature operates in conjunction with the 24-hour display and typically advances automatically once the main time is correctly set.

3. Luminous Function

The hands and hour markers of the watch are equipped with a luminous material. After exposure to strong light, the watch will glow in dim environments, allowing for time readability in low-light conditions.



Image: A split image showing the watch's water resistance and its luminous hands and markers glowing in the dark.

4. Water Resistance

This watch is water resistant to 30 meters (100 feet). This means it can withstand splashes or brief immersion in water. It is **not** suitable for swimming, bathing, diving, or any activities involving prolonged water exposure or high-pressure water.



Image: The OLEVS 3655 watch partially submerged in a glass of water, demonstrating its water resistance.

MAINTENANCE

- **Cleaning:** Wipe the watch regularly with a soft, dry cloth to remove dust and smudges. For the metal band, a slightly damp cloth can be used, followed by immediate drying. Avoid harsh chemicals or abrasive materials.
- **Avoid Extreme Conditions:** Protect your watch from extreme temperatures, direct sunlight for prolonged periods, and strong magnetic fields, as these can affect its accuracy and lifespan.
- **Water Exposure:** While water resistant, avoid unnecessary exposure to water. If the watch gets wet, dry it thoroughly. Do not operate the crown or push-buttons while the watch is wet.
- **Battery Replacement:** The watch uses a quartz movement, powered by a battery. When the watch stops or the second hand skips, it indicates a low battery. Battery replacement should be performed by a qualified watch technician.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch stops or runs inaccurately.	Low battery, impact, or magnetic interference.	Check if the crown is fully pushed in. If not, set the time and push it in. If the issue persists, consult a watch technician for battery replacement or inspection.
Date does not change at midnight.	Time is set for AM/PM incorrectly.	Advance the time by 12 hours. The date should change around midnight.
Chronograph hands do not reset to zero.	Requires calibration.	Consult a watch technician for chronograph hand calibration.
Watch band is too loose or too tight.	Incorrect band length.	Adjust the watch band using the provided tool as described in the "Adjusting the Watch Band" section.

SPECIFICATIONS

PRODUCT PARAMETERS



Product Size

(without handle)

Case diameter: 41.5MM

(Mirror included)

Case thickness: 11MM

Strap width: 20MM

Chain length 21CM

Brand model number: OLEVS/3655

Table Mirror: High hardness coated mirror

watchband: Steel bracelet

Movement: Original quartz movement

waterproof: 30m waterproof

Watch weight: 126g

* Tips: All sizes are manually measured, there is a reasonable error, please prevail in kind

Image: A detailed graphic displaying the key product parameters of the OLEVS 3655 watch, including dimensions and materials.

Brand: OLEVS

Model Number: 3655

Movement: Original Quartz Movement

Case Material: Stainless Steel

Case Diameter: 41.5 mm (1.63 inches)

Case Thickness: 11 mm

Band Material: Stainless Steel

Band Width: 20 mm

Chain Length (Max Circumference): 21 cm (8.26 inches)

Clasp Type: Push Button Hidden Clasp

Mirror Material: High Hardness Coated Mirror (Crystal Glass Lens)

Water Resistance: 30m (100ft)

Weight: 126g

Functions: Chronograph (60-minute, 60-second counters), 24-hour Moon Phase, Date Display, Luminous Hands/Markers.

WARRANTY AND SUPPORT

Each OLEVS watch comes with a sales service guarantee. For any questions or concerns regarding your product, please contact OLEVS customer support. Please retain your proof of purchase for warranty claims. For further assistance, you may visit the official OLEVS store on Amazon:[OLEVS Store](#).

ADDITIONAL RESOURCES

Watch a general overview of the OLEVS 3655 watch:

Your browser does not support the video tag.

Video: An overview of the OLEVS 3655 Men's Quartz Chronograph Watch, highlighting its design and features.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question